

www.disto.com

User Manual:



SAP no. 855368




ON



OFF


2 sec

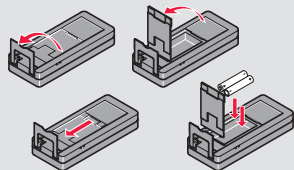


2 sec



 min



max

 

- 1 Status bar/level
- 2 Reference
- 3 Main line (result)
- 4 Active function
- 5 Selection keys linked to the symbol above
- 6 ON/DIST
- 7 Clear/OFF
- 8 Function screen
- 9 Zoom
- 10 Add
- 11 Subtract
- 12 Reference
- 13 Navigation


Unlock keypad



Within 2 sec.

Quick Start

Leica DISTO™ X4

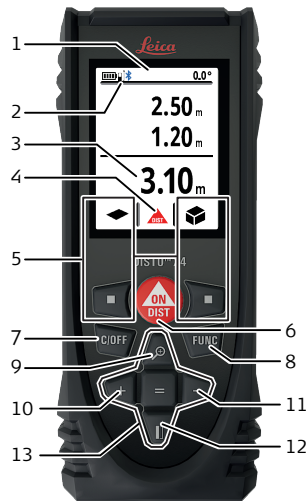

- when it has to be right

Leica
Geosystems

FUNC

Functions

FUNC

FUNC

Settings




FUNC

or



?

Details

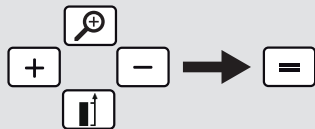

	Single distance measurement
	Area
	Volume
	Room angle
	Smart Horizontal Mode
	Level
	Pythagoras
	Stake out
	Timer
	Height tracking
	Memory
	Point to point measurement*
	Point to point measurement levelled*
	Smart area measurement*

*Activated when connected to DST 360



	Tilt units
	Distance units
	Turning screen
	Beep
	Bluetooth®
	Bluetooth® settings
	Illumination
	Favourites
	Keypad lock
	Tilt calibration
	Information / Serial number
	Offset
	Calibration of DST 360*
	Reset



Zoom



2x



4x



1x

