 


iZEEKER

Quick Start Guide
Action Camera

iA100

Package List



A1
Short
Thumbscrew



 
A2
Long
Thumbscrew



B1
Extension
Arm



B2
Short Vertical
Extension Arm



B3
Long Vertical
Extension Arm



C1
J-hook
Buckle



 
C2
Water-proof
Case Mount



D1
180°Rotating
Mount



D2+D3
360°Rotating
Mount



E1
Bicycle Handlebar
Mount



F1
Helmet
Mount



F2
Helmet
Mount



G
Camera
Frame




H
Battery
Charger




Installation Guideline


A2+C2

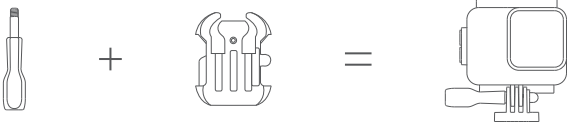


A2+C2+F1

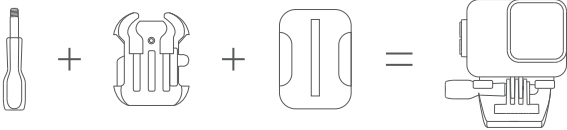


A2+C2+F1+I

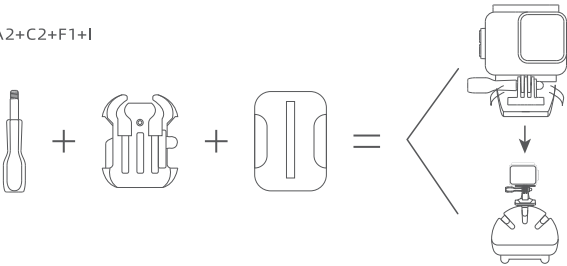


A1+E1

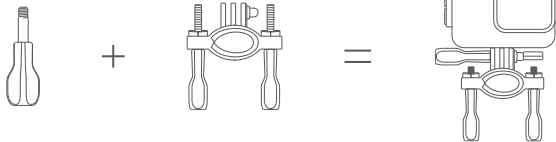


A1+B2+E1

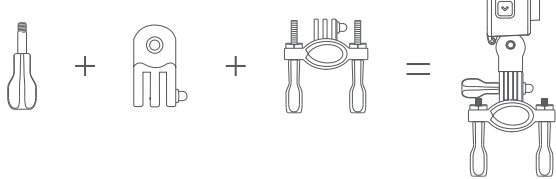


A2+D1

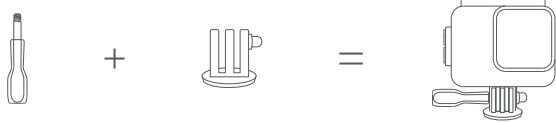

A2+D1+D2+D3

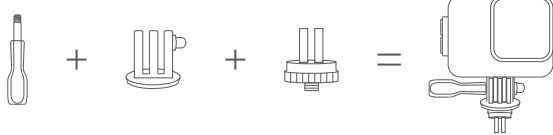

A2+C1

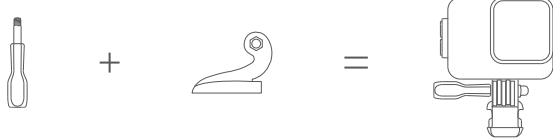

Warm tip: This Quick Start Guide is mainly designed for
iZEEKER Action Camera iA100
Support Team: support.ac@izeeker.co

Download "IBK CAM" for more functions!

