 




Original	Recharge	Original	Recharge
 Power	 Power	 CH-	 CH- / Page-
 CBL/ SAT	 0	 Mute	 Mute / Dimmer
 Media Player	 Guide / EPG / - / -	 Volume-	 Vol -
 Blu-ray/ DVD	 2	 Info	 Info / Angle
 Game	 Fav / Marker / PC	 Option	 Menu / Home
 AUX	 7	 Up	 Up
 Tuner	 6	 Left	 Left
 Phono	 5	 Enter	 OK
 TV Audi o	 1	 Right	 Right
 CD	 3	 Back	 Back / Ret ur n
 USB	 8	 Down	 Down
 Bluetooth	 9	 Set up	 Set up / OPT /
 I nt er net Radi c	 4	 I <</ Tune-	 I << / Preset-
 Heos	 Smart / Li st	 I <</ Tune-	 << / Tune-
 CH+	 CH+ / Page+	 Pl ay/ Pause	 Pl ay / Sl ow
 ECO	 Zoom/ Si ze	 >>/ Tune+	 >> / Preset +
 Vol ume+	 Vol +	 >>/ Tune+	 >> / Tune+





Original	Recharge
 Band	 Di s pl ay / Medi a
 St op/ Mòde	 St op / Hol d
 Memory	 Ej ect / Surround
 Smart Select 1	 Red / Netflix / Search
 Smart Select 2	 Green / APP / Repeat
 Smart Select 3	 Yel low / YouTube / Repeat
 Smart Select 4	 Bl ue / Pri me Vi deo / Random
 Speaker	 Sub title / EQ
 Sleep	 Sl eep / Ti mer
 Di mmer	 Shi ft + Mute / Di mmer
 Sound Mòde	 Sound / Ti tle

Original	Recharge





Original	Recharge	Original	Recharge
 Power	 Power	 Mute	 Mute / Dimmer
 CBL/ SAT	 0	 Volume-	 Vol -
 Media Player	 Guide / EPG / - / - / -	 Up	 Up
 Blu-ray/ DVD	 2	 Left	 Left
 Game	 Fav / Marker / PC	 Enter	 OK
 AUX	 7	 Right	 Right
 Tuner	 6	 Back	 Back / Return
 Phono	 5	 Down	 Down
 TV Audio	 1	 I << / Tune-	 I << / Preset-
 CD	 3	 I << / Tune-	 << / Tune-
 USB	 8	 Play/ Pause	 Play / Slow
 Bluetooth	 9	 >> / Tune+	 >> / Preset+
 Internet Radio	 4	 >> / Tune+	 >> / Tune+
 Heos	 Smart / List	 Band	 Display / Media
 CH+	 CH+ / Page+	 Stop/ Mode	 Stop / Hold
 Volume+	 Vol +	 Memory	 Eject / Surround
 CH-	 CH- / Page-	 Smart Select 1	 Red / Netflix / Search



