

VC-TR60_VC-TR60A_VC-TR60A,Dante-AV-H Firmware(FW) Update Manual


1 Device and Tool Preparation

1.1 Please prepare following devices and tools before FW upgrade.

VC-TR60	PC or Laptop
	 or 
Power adapter and power cord	Ethernet cable
	

2 Connections

2.1 Connecting via switch or router.

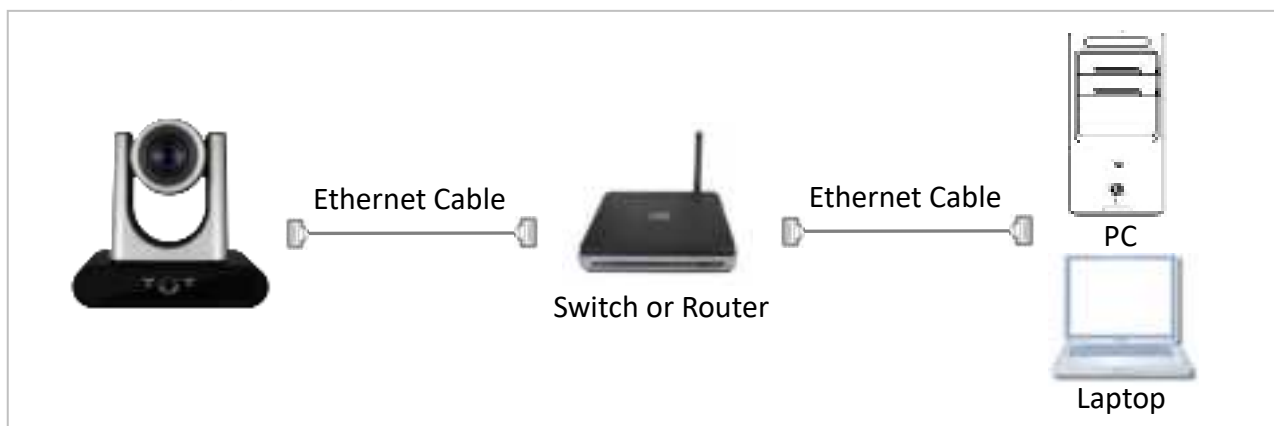

3 FW Download

- 3.1 Open browser and enter the IP address of the camera in the address bar.
You can check the IP address from [Status]> [Ethernet] in the menu.




- 3.2 Enter the account and password to log in webpage.

Account: admin



Password: 9999(Default)



- 3.3 Select [Maintenance]> [...] to select firmware file and press [Upgrade].

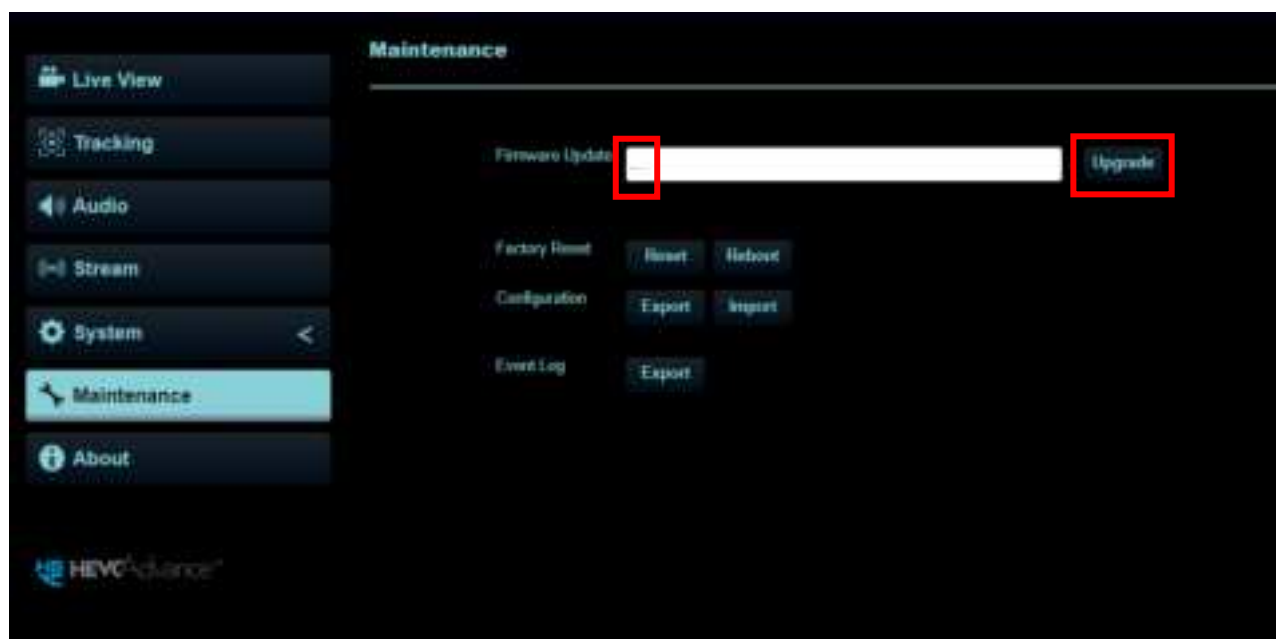

3.4 FW download starts, please don't close the page. (Around 2-3 minutes taken)

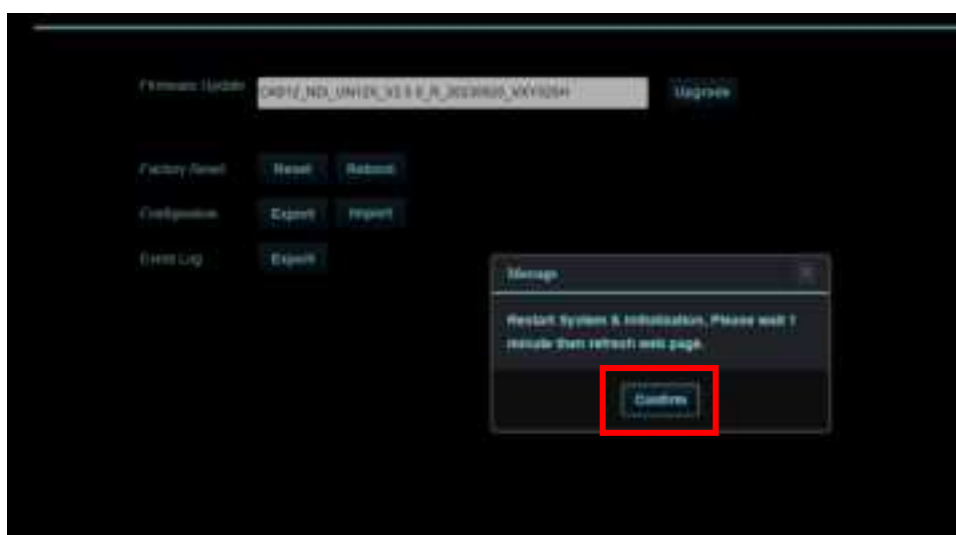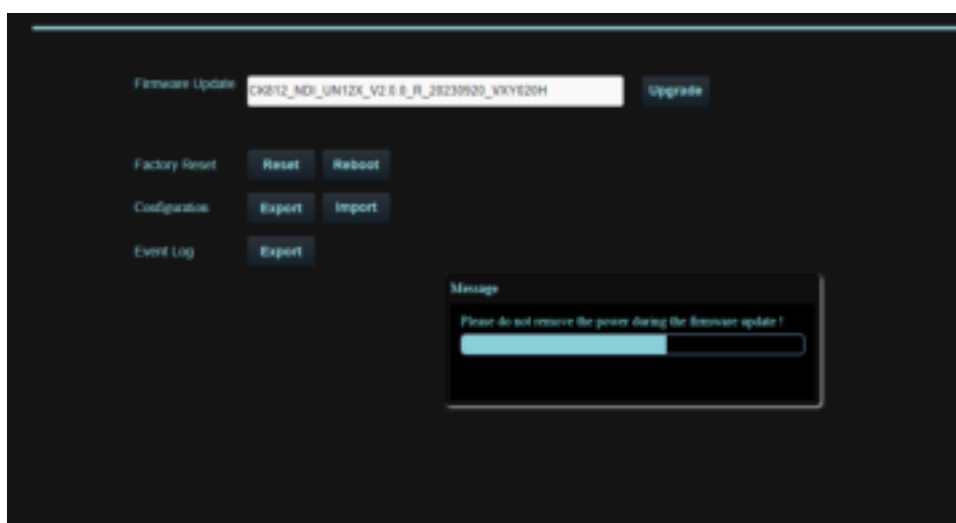

3.5 Login webpage again and check the FW version from [About]> [Firmware Version].

