

### **User Manual of Product 1:**

PELONIS PFS45A5BBB 18 inch 5-Blade Oscillating, Adjustable Standing Pedestal Remote, LED Display, 5 Speed Setting and 7-Hour Timer Fan, Black

 
### **User Manual of Product 2:**

PELONIS 16" Pedestal Remote Control Oscillating Stand Up Fan 7-Hour Timer, 3-Speed, and Adjustable Height, Electric Cooling Fans for Home Office Bedroom Use

# PELONIS

## OWNER'S MANUAL

### Stand Fan MODEL: PFS45A5BBB

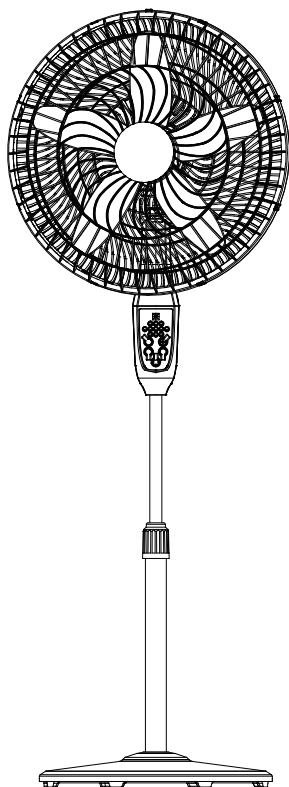

***READ AND SAVE THESE INSTRUCTIONS***

Attention: Pictures in the IM are for reference only.

# IMPORTANT SAFETY INSTRUCTIONS

## Caution

Read Rules for Safe Operation and Instructions Carefully.

## WARNING

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
2. **WARNING**—To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
3. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
  - a) “Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.”
  - b) “Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.”
4. Do not leave the fan running unattended.
5. Keep electrical appliances out of reach from children or infirm persons. Do not let them use the appliances without supervision.
6. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

# IMPORTANT SAFETY INSTRUCTIONS

## WARNING

 
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
8. When the fan was assembled, the rotor blade guard shall not be taken off anymore.
  - Prior cleaning unplug the fan.
  - The rotor guard shall not be disassembled/opened to clean the rotor blades.
  - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.

## RULES FOR SAFE OPERATION


1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Be sure fan is on a stable surface when operating to avoid overturning.
4. DO NOT use fan in window, rain may create electrical hazard.
5. Household use only.

# INSTALLATION INSTRUCTIONS

## Name of components

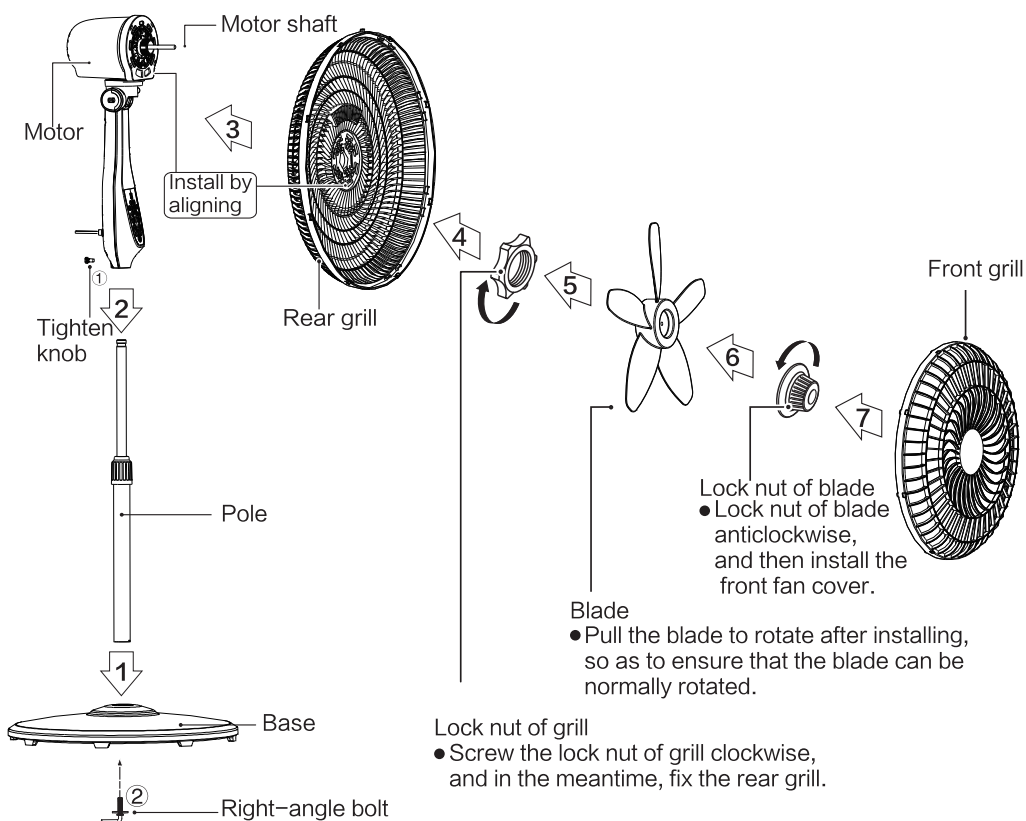

## Front and Rear Guard Installation

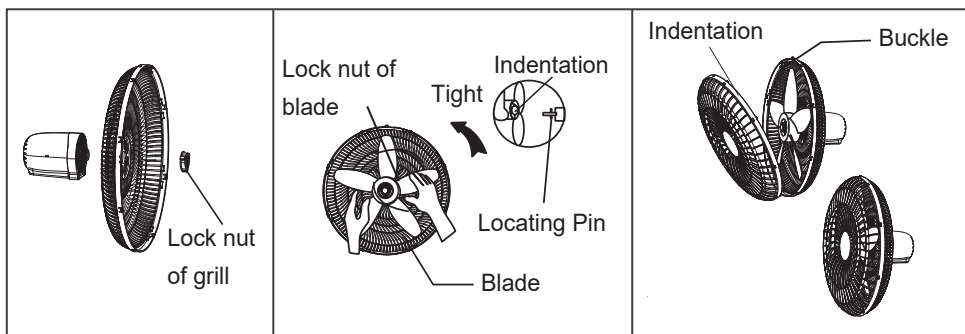 

# OPERATING INSTRUCTION

## 1. Remote Controller (Fig.1)

### “” **ON/OFF KEY**

The key is for switching on the fan. The fan will be started. Press the key again, it will be switched off.

### “” **TIMER KEY**

When the TIMER key is touched repeatedly, the time to be set for air delivery increased step by step. For instance, if the fan operation is required to be set for 7 hours, this key must be touched repeatedly so that the pilot lamps for 1, 2 and 4 hours lighten together. It means that the set time is  $1 + 2 + 4 = 7$  hours. The time setting indicated by the pilot lamp will decrease gradually by a unit of 1 hour. Don't press the TIMER key when the fan is required to operate continuously. At the moment all pilot lamps don't light.

### “” **SPEED KEY**

When the fan runs at normal mode or ECO mode, press the “speed” repeatedly to choose 5 different speeds; When it runs under natural or sleep mode, press the “speed” repeatedly to choose 3 different speed.

### “” **MODE KEY**

Press The M to select mode. The sequence is normal, natural, sleep and ECO. when this M being touched repeatedly or continuously, The light can indicate mode state, It can also be controlled by remote control. type changes in the sequence from NORMAL---NATURAL---SLEEP---ECO---NORMAL wind when this key being touched repeatedly or kept in.

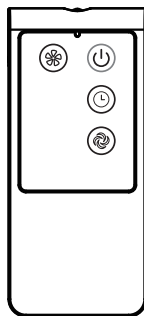 


Fig.1

## 2. Oscillation Control

To make the fan oscillate, press the clutch knob located on the top of the motor housing. To get the directional airflow, pull the clutch knob up to its initial position.

## 3. Tilt Adjustment

To adjust the air flow upward or downward, push the grilles lightly to the desired direction.

## 4. Height Adjustment

The height of the fan can be adjusted by loosening the height adjustment ring, carefully raising or lowering the fan and firmly re-tightening the height adjustment ring.

## OPERATING INSTRUCTION

### NOTE:

Use manganese or alkaline batteries of type "AAA". Do not use rechargeable batteries.

 
#### • BATTERY WARNING AS BELOW

Do not dispose of batteries in fire, batteries may explode or leak.


Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

Pay attention to poles (+ and -) of the batteries.

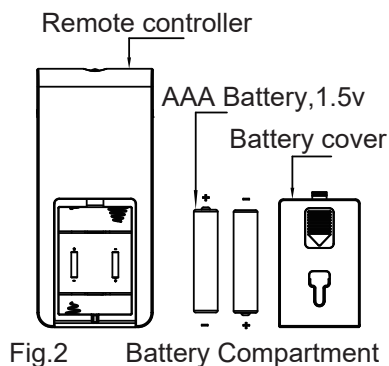

## CONTROL PANEL

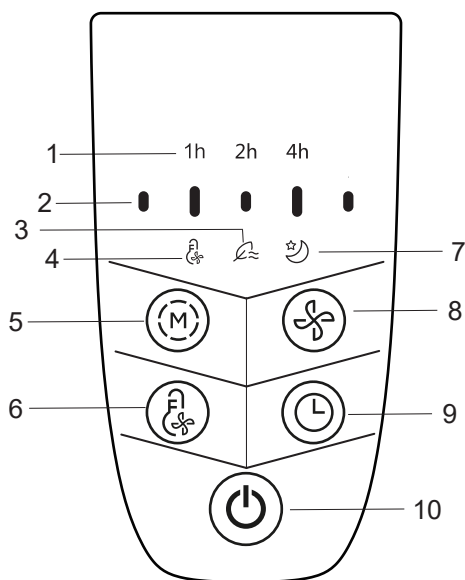 

NO.	Description
1	Timing display lamp
2	Air speed indicator
3	Natural mode indicator
4	ECO indicator
5	Mode
6	ECO mode
7	Sleep mode indicator
8	Air speed
9	Timing
10	ON/OFF

# OPERATING INSTRUCTIONS

## CONTROL PANEL

### “(L)” **TIME KEY**

When the TIMER key is touched repeatedly, the time to be set for air delivery increased step by step. For instance, if the fan operation is required to be set for 7 hours, this key must be touched repeatedly so that the pilot lamps for 1, 2 and 4 hours lighten together. It means that the set time is  $1 + 2 + 4 = 7$  hours.

The time setting indicated by the pilot lamp will decrease gradually by a unit of 1 hour. Don't press the TIMER key when the fan is required to operate continuously. At the moment all pilot lamps don't light.

### “(M)” **MODE KEY**

Press The M to select mode. The sequence is normal, natural, sleep and ECO. when this M being touched repeatedly or continuously, The light can indicate mode state, It can also be controlled by remote control.

### “(S)” **SPEED KEY**

When the fan runs at normal mode or ECO mode, press the “speed” repeatedly to choose 5 different speeds; When it runs under natural or sleep mode, press the “speed” repeatedly to choose 3 different speed.

### “(P)” **ON/OFF KEY**

The key is for switching on the fan. The fan will be started. Press the key again, it will be switched off.

### “(E)” **ECO KEY**

 
Press this key to turn on ECO function or turn off it.

Time (H)	lamps
1	1h
2	2h
3	1h/2h
4	4h
5	1h/4h
6	2h/4h
7	1h/2h/4h

Gear	Indicator light display
1	•
2	• •
3	• • •
4	• • • •
5	• • • • •

# INSTRUCTIONS FOR USE

## Instructions for operation of body

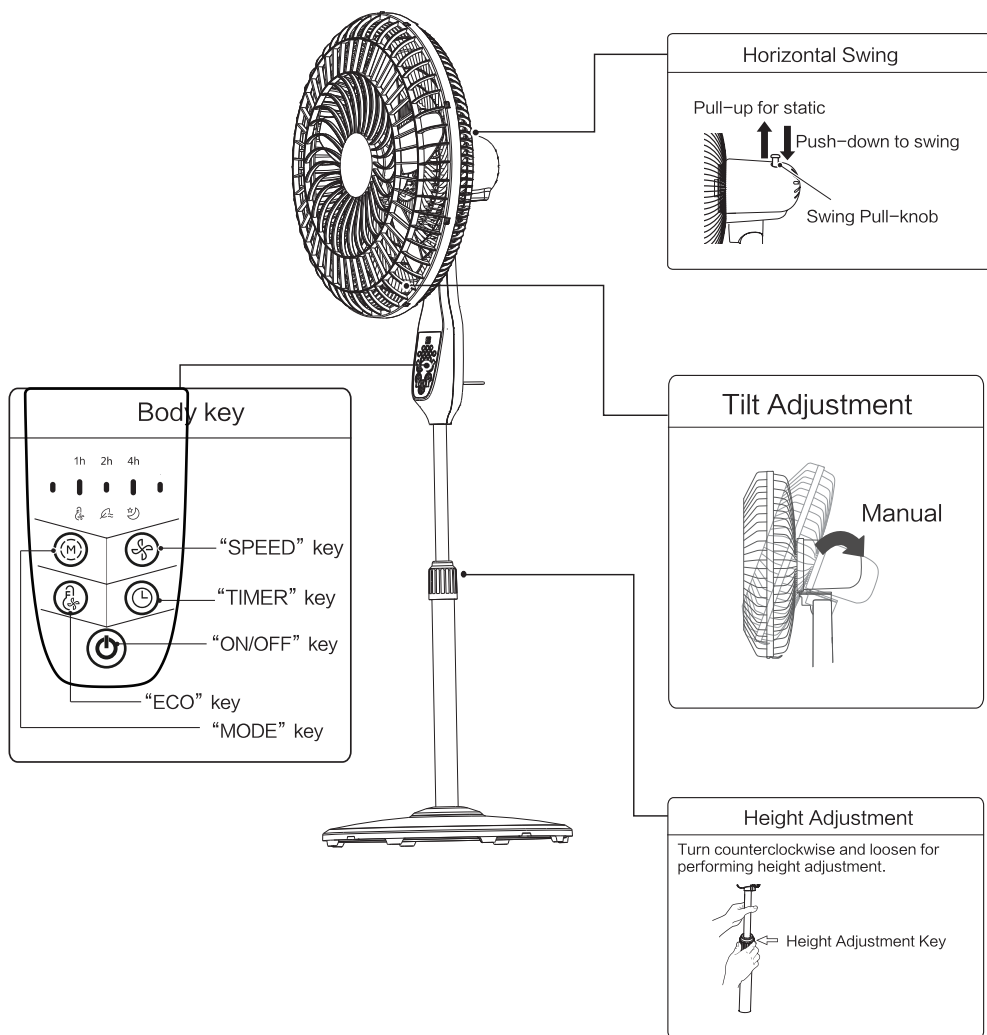

## MAINTENANCE INSTRUCTION

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

 
1. Before cleaning and assembling, fan must be unplugged.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use any of the following as a cleaner: gasoline, thinner.
5. Do not allow water or any other liquid into the motor housing or interior parts.

## CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

## USER SERVICING INSTRUCTIONS

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully. Insert the tip of your tool into fuse slot (close with the terminal), then prize the fuse gradually and slowly, but not overexert. If you feel tight, you can try it at several times and prize the fuse little by little. When one side of the fuse has been prized, then you can get the fuse out entirely.
4. Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse.
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

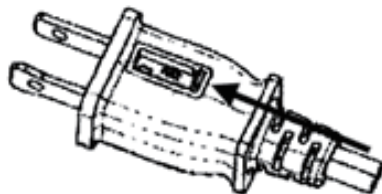

### Notice:

1. When you replace the fuse, please don't operate suddenly or overexert, or else the product will be damaged or cause an accident.
2. When you feel it hard to be operated, please make sure you have got the right way.





 
# PELONIS

## OWNER'S MANUAL

Stand Fan

Model: PFS40A4BBB

PFS40A4BWW

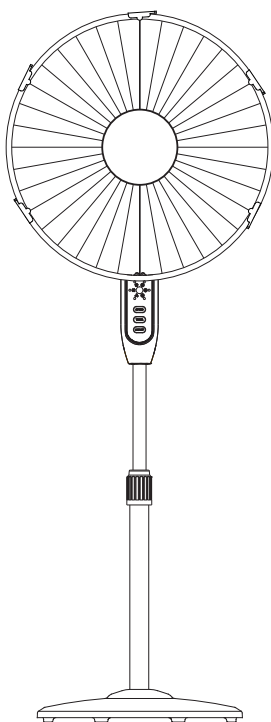

***READ AND SAVE THESE INSTRUCTIONS***

## **CAUTION**

Read Rules for Safe Operation and Instructions Carefully.

## **WARNING**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

**WARNING:** To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.

## **RULES FOR SAFE OPERATION**

 
1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Disconnect fan when removing grilles for cleaning.
4. Be sure fan is on a stable surface when operating to avoid overturning.
5. Do not use fan in window. Rain may create electrical hazard.
6. Ensure that the fan is switched off from the supply mains before removing the grille.

The rules about cord and plug as below:

1. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the products. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
2. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
3. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will be tripped over.


# INSTALLATION INSTRUCTIONS

## Name of components

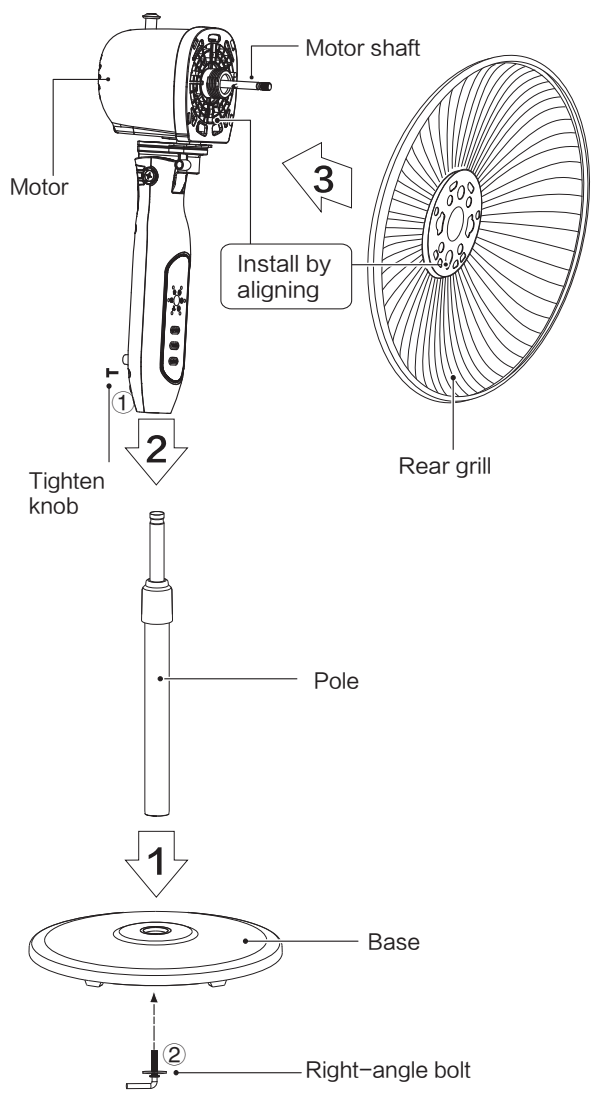

### Base Installation

 
Align the column with the groove on the base and fix them together using a right-angle bolt.

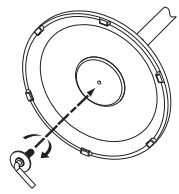





Considerate Hint:  
Remove ①② parts from the component before performing installation.

## Front and Rear Guard Installation

 
1. Align Screw Holes on the outer ring of both the Front and Rear Guards, with the Positioning Clip aligned as illustrated.

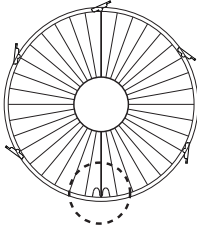

    2. Press down all the Buckles to fasten the Front Guard with the Rear Guard. At the Screw Holes, tighten the separated screw and nut.

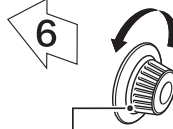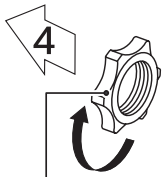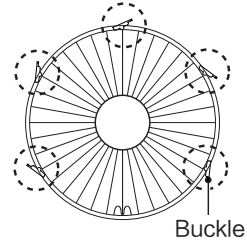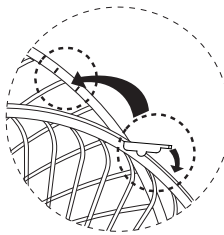

Front grill

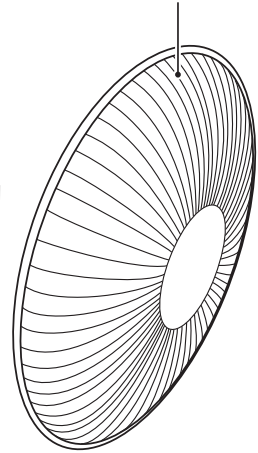 

Lock nut of blade

- Lock nut of blade anticlockwise, and then install the front fan cover.

Blade


- Pull the blade to rotate after installing, so as to ensure that the blade can be normally rotated.

Lock nut of grill

- Screw the lock nut of grill clockwise, and in the meantime, fix the rear grill.


# INSTRUCTIONS FOR USE
 
## ■ Instructions for key of remote controller

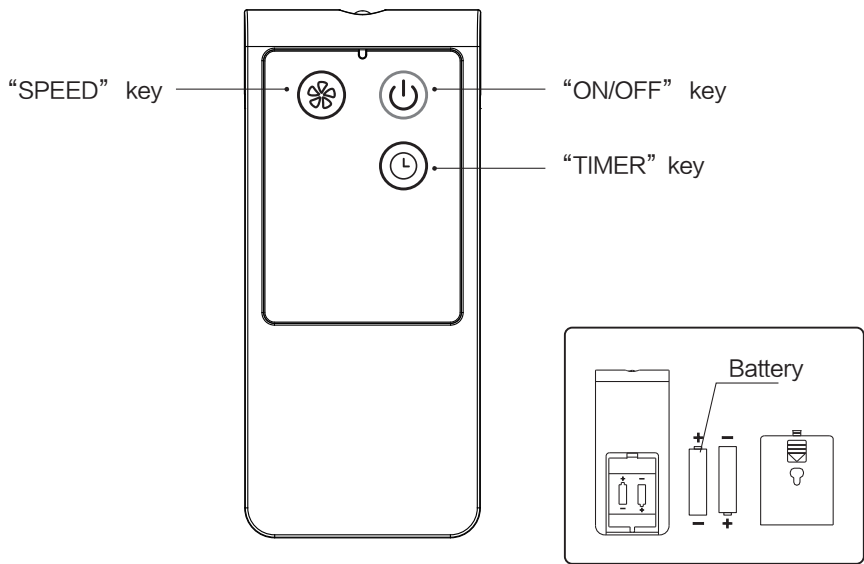


Considerate Hint:  
Effective Range of Remote Control: within 5 m distance and 30-degree deflection in front of Product.

## ■ Instructions for display of body

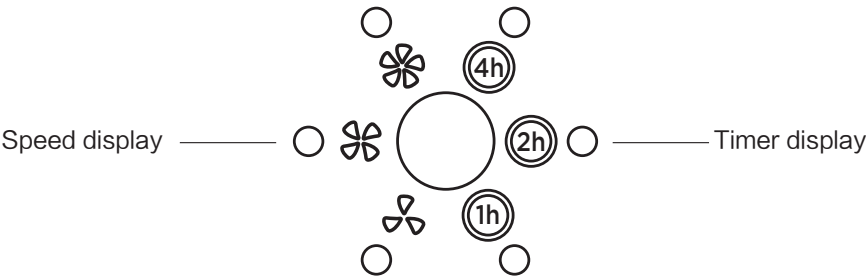 


# INSTRUCTIONS FOR USE
 
## ■ Instructions for operation of body

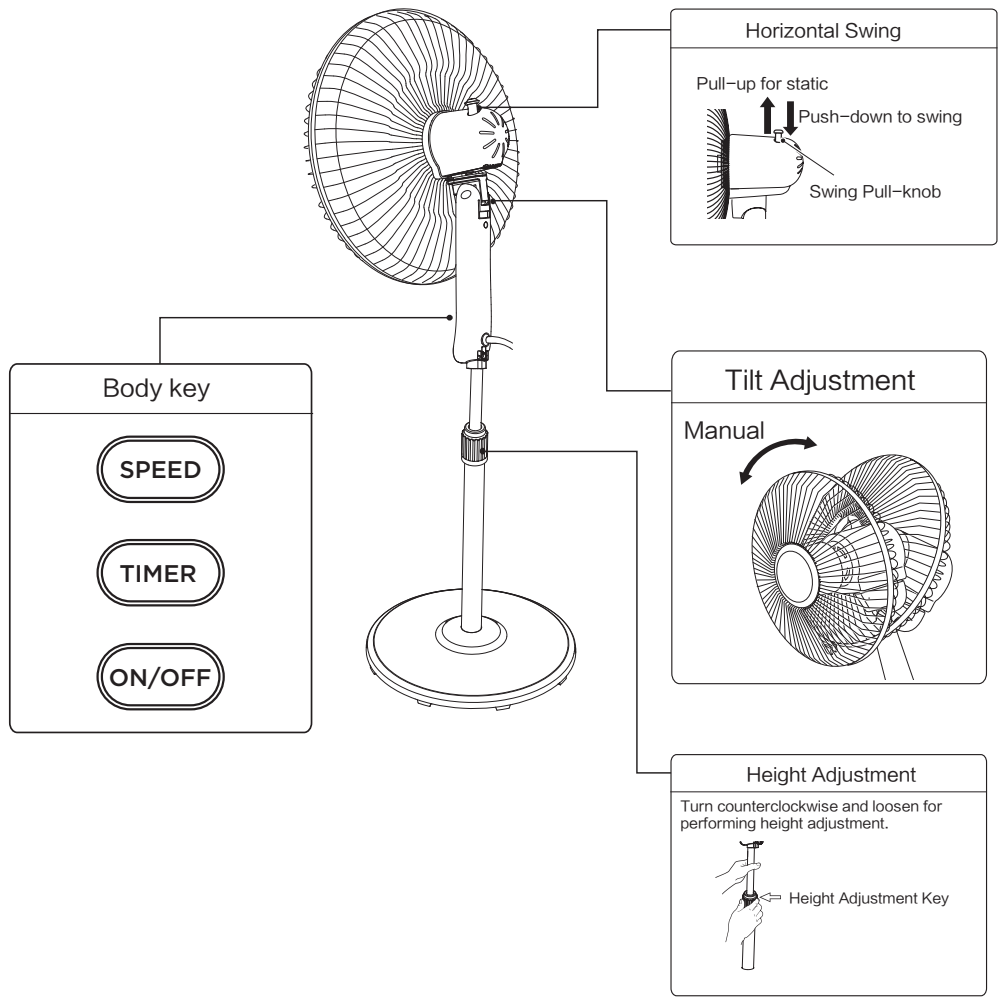

## USER SERVICING INSTRUCTIONS

 - a) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b) Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- c) Remove fuse carefully. Insert the tip of your tool into fuse slot (close with the terminal), then prize the fuse gradually and slowly, but not overexert. If you feel tight, you can try it at several times and prize the fuse little by little. When one side of the fuse has been prized, then you can get the fuse out entirely.
- d) Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse.
- e) Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- f) Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

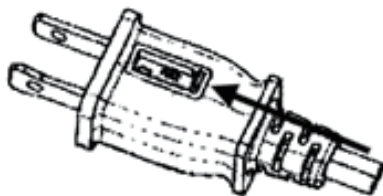

### Notice:

1. When you replace the fuse, please don't operate suddenly or overexert, or else the product will be damage or cause accident.
2. When you feel it hard to be operated, please make sure you have got the right way.

## CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with mild soap and a damp cloth or sponge. Thoroughly to remove soap film with clean water.
3. Be sure not to make water or other liquid enter inside of motor.

## SERVICE & SUPPORT

In the event of a warranty claim or if service is required for this heater, please contact us at the following:

Tel: 1-866-646-4332

Email us at: [customersupport@pelonis.com](mailto:customersupport@pelonis.com)

For questions or comments, please write to:

Midea America Corporation

5 Sylvan Way, Parisipppany, NJ 07054

For your records, staple your sales receipt to this manual and record the following:

DATE OF PURCHASE: \_\_\_\_\_

PLACE OF PURCHASE: \_\_\_\_\_

(STAPLE SALES RECEIPT HERE)

**NOTE: PROOF OF PURCHASE IS REQUIRED FOR  
ALL WARRANTY CLAIMS**

Printed in China