



 
powered by
webOS TV

70" 4K UHD HDR LED SMART TV

SERIES 8 UN8920

(KALED70UN8920SNA)

COMPONENTS

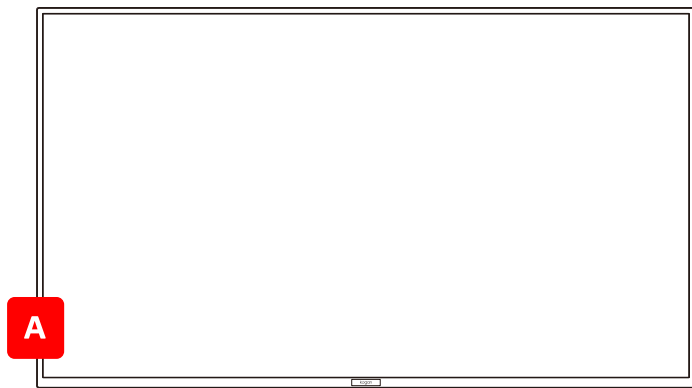

A Kogan 70" 4K UHD HDR LED Smart TV

B Magic remote control

C Standard remote control

D Stand (x2)

E M4 x 12mm screw (x4)

F AAA battery (x2)

G AA battery (x2)

H Quick start guide

I Warranty card

MAGIC REMOTE CONTROL



- 1** **Power:** Press to enter or exit standby mode
- 2** **Voice Command microphone**
- 3** **Set-Top Box Power:** Press to turn connected Set-Top Box on or off
- 4** **Number buttons:** Press to select channels or input passwords
- 5** **List:** Check saved programs
- 6** **AD/SAP:** Press and hold to turn audio description on or off
- 7** **QUICK ACCESS:** Long-press 0 to add Quick Access
- 8** **Mute:** Toggle sound on/off
- 9** **Adjust the volume up or down**
- 10** **to scroll channels**
- 11** **Home:** Jump to the home page
- 12** **Voice command button:** Hold and speak into microphone for voice recognition. Short press to open recommended content.
- 13** **Settings:** Open Quick Settings menu



14 ▲/▼/◀/▶ **Direction buttons** for navigating menus and settings

15 Wheel (OK): Scroll to navigate menus. Press to select the current item or confirm selection.

16 ⏮ **Back** to the previous menu

17 GUIDE: Opens the Electronic Program Guide in DTV mode

18 NETFLIX: Open app homepage

19 **prime video:** Open app homepage

 
20 Colour buttons for navigational use within apps

21 **Source:** Displays the list of input source channels.


22 MOVIES: Search movies

23 Media playback controls: Play and pause media, Live Playback function, and recorded content.

STANDARD REMOTE CONTROL

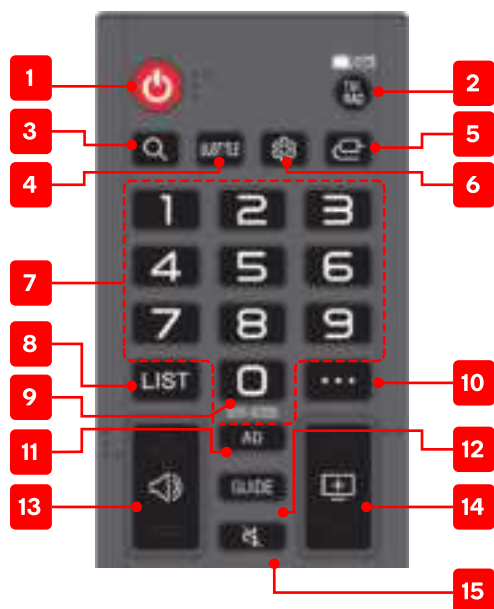

- 1** **Power:** Press to enter or exit standby mode
- 2** **TV/RAD:** Press to switch between TV and Radio
- 3** **Search:** Open recommended content or search
- 4** **SUBTITLE:** Turn on/off subtitles
- 5** **Source:** Displays the list of input source channels
- 6** **Settings:** Open Quick Settings menu
- 7** **Number buttons:** Press to select channels or input passwords
- 8** **LIST:** Check saved programs
- 9** **QUICK ACCESS:** Long-press 0 to add Quick Access
- 10** **•••:** Displays additional functions, for example Sports mode
- 11** **AD:** Press to turn audio description on or off
- 12** **GUIDE:** Opens the Electronic Program Guide in DTV mode
- 13** **+ -:** Adjust the volume up or down
- 14** **^ ▢ v:** to scroll channels
- 15** **Mute:** Toggle sound on/off

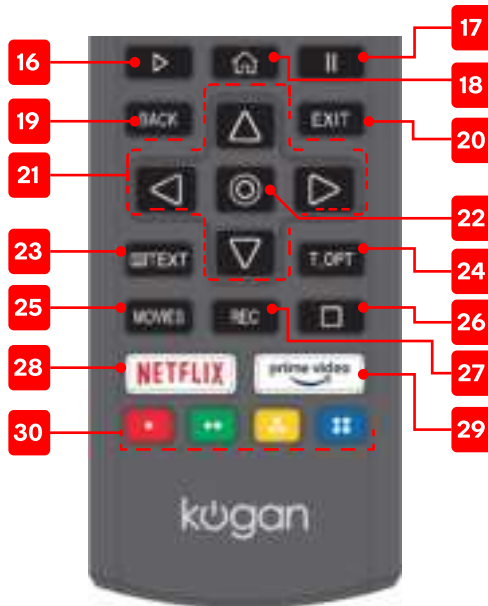 

16 ▷ Play: Play media and recorded content, resume Live Playback

17 || Pause: Pause media and recorded content, pause Live Playback

18 ⬆ Home: Jump to the home page

19 BACK to the previous menu

20 EXIT out of the current program

21 ▲/▼/◀/▶ Direction buttons for navigating menus and settings

22 OK button: Press to select the current item or confirm selection

23 TEXT: Teletext on/off*

24 T.OPT: Teletext options*

25 MOVIES: Search movies

26 □ Stop: Press to stop recording, stop media playback, and start Live Playback function

27 REC: Initiate recording

28 NETFLIX: Open app homepage

 
29 prime video: Open app homepage

30 Colour buttons for navigational use within apps

ASSEMBLY AND INSTALLATION


1. Stand assembly

- Attach stands to base of TV, ensuring 'L' and 'R' markings on the TV and stand match.
- Insert four M4 x 12mm screws and use Phillips head screwdriver (not supplied) to tighten.

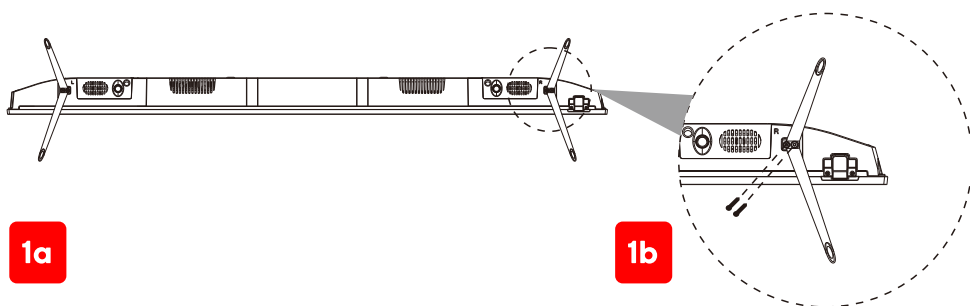


2. Remote control assembly

- Open the battery compartment cover on the back side.
- Insert batteries (x2 1.5V AAA size for the standard remote, x2 1.5V AA size for the magic remote) making sure to match the polarity markings (+ / -) of the batteries with the diagram inside the compartment.
- Replace battery compartment cover.

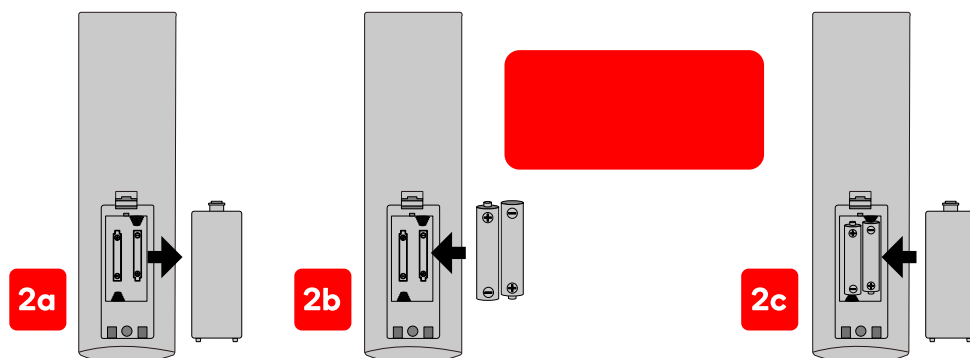

3. Connect to antenna

- a. Connect an antenna cable (not supplied) via the 'ANT' input port at the back of the TV.
- b. Ensure the antenna cable is also connected to a working antenna, either via an antenna wall socket in your home, or directly.

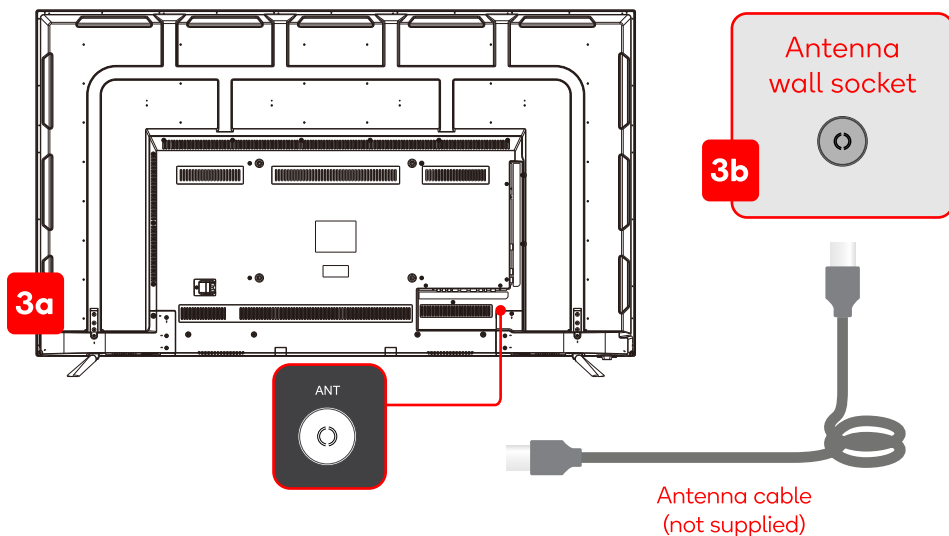

4. Turning TV on

 
Plug the power cord into a suitable power outlet, then press the POWER (⏻) button on the remote control, making sure to aim it at the sensor at the front of the TV. Alternatively, you can press the power button on the lower side of the back panel on the TV.




PAIRING THE MAGIC REMOTE

After the TV has been on for at least 20 seconds, point the remote toward the TV and then long-press the wheel. The remote control will automatically be registered. A notification will confirm, and the pointer will appear on screen.

If the Magic Remote's pointer does not appear on the screen, you must re-register it. Point the remote control towards the TV and long-press the **GUIDE** button until the notification appears.

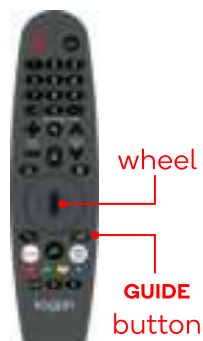

INPUTS AND PORTS

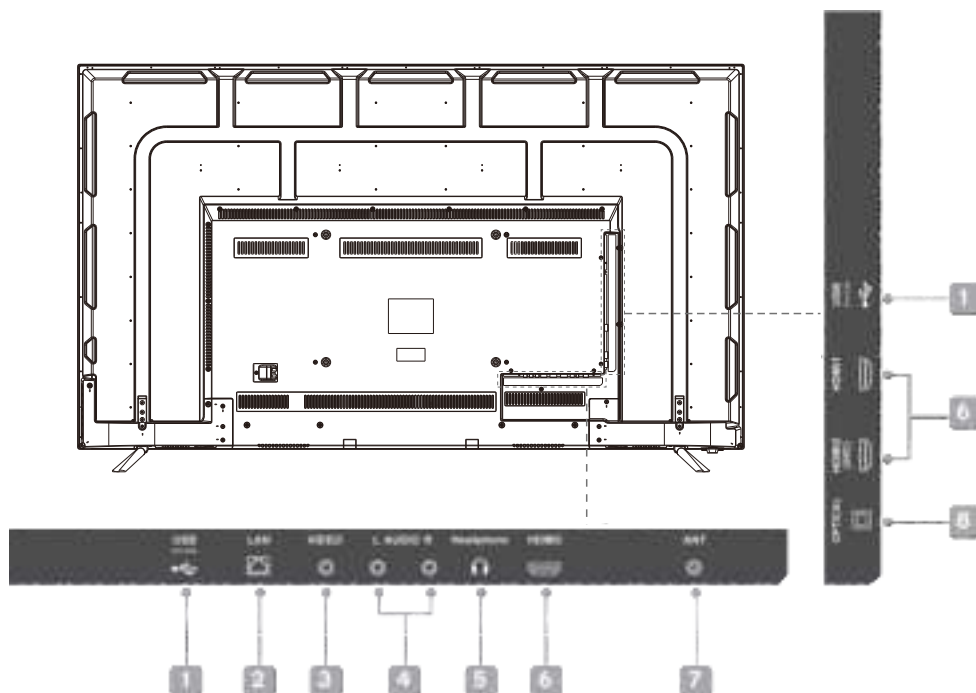

- | | |
|-----------------------------------------|------------------------------------|
| 1 USB 2.0 (x2; 5v 500mA) | 5 Headphone jack (3.5mm line out) |
| 2 Ethernet port (LAN) | 6 HDMI (x3; ARC support on HDMI 2) |
| 3 Composite video (RCA) | 7 Antenna |
| 4 Composite audio (RCA, left and right) | 8 Digital audio (Optical out) |

FIRST TIME SETUP

When turning the TV on for the first time, the **Welcome** screen will appear. Press the **OK** button (Wheel) to commence

Use the **▲/▼/◀/▶** **Direction buttons** and **Wheel** to navigate the following options:

Language and Location Settings

Select the on-screen display (OSD) language, your country and time zone from the drop-down lists.

Internet and Device Connection

Connect all of your devices (set-top boxes, blu ray players, soundbars, gaming devices, etc.) to the TV. If using a wired internet connection, connect an Ethernet cable to the 'LAN' port at the back.

Select Wi-Fi network

If you have connected an ethernet cable for wired internet, your TV will automatically connect to the network and skip this step.

If you want to use a wireless (Wi-Fi) network, the TV will now scan for nearby networks. Ensure the TV is within range of your wireless modem or router, and have your password handy. Follow the prompts to input your password and connect your TV to your selected network.

If using an LG Mobile smartphone connected to the desired Wi-Fi network, you can select "via LG Mobile" to connect to the same network.

Terms & Conditions

Accept terms and conditions, or select to view additional details. You can select "Agree All" to agree to all User Agreements.

Paired Devices

The TV will now scan for external devices which can be linked to the Universal Control settings (such as set-top boxes or blu ray players). This will allow services such as Foxtel or Fetch boxes (sold separately) to be linked to your TV's remote control.

Set-Top Box Setup

If not using a set-top box, select "TV Only". If using a set-top box and not wishing to use free-to-air channels, select "Set-Top Box Only". If wishing to use both, select "TV & Set-Top Box".

Service Area Postcode

Enter your location's postcode.

Programme Tuning

The TV will automatically search and save all available free-to-air channels. The option is provided to search for digital channels only (recommended for most regions), skipping analogue channels.

Connect to LG ThinQ

Your TV is compatible with LG smart home devices, and can also play content from your smartphone or personal devices. To connect your TV with LG ThinQ, scan the Android or iOS (iPhone) QR code with your smartphone and follow the prompts to set up.

First Time Setup Completed

Press Close to finalise the setup and go to the Home Dashboard.

HOME DASHBOARD

The Home Dashboard is the central hub for your TV's connections and settings. Use your remote's directional buttons or the Magic cursor and wheel to navigate the dashboard, and press the OK button (wheel) to open a selected menu and view options.



- 1** View and select mobile device currently connected with the LG ThinQ app
- 2** Sound Share: Play audio from a smart device connected via Bluetooth
- 3** Select from Live TV or external devices connected via HDMI channels, AV, or network
- 4** View currently selected output speaker, select to open speaker settings
- 5** View and select any connected storage devices
- 6** View and control any devices connected via the Home IoT dashboard
- 7** Routines: Set pre-programmed device operations
- 8** Account settings: Sign in/out of your LG ThinQ account, or edit the name and settings for connected devices.
- 9** Refresh the connected device list
- 10** Exit the Home Dashboard

HOME MENU

Press the **Home** (🏠) button on the remote to bring up the home menu.

Use your remote's directional buttons or the Magic cursor and wheel to navigate through the pages, and press the OK button (wheel) to launch selected app. For Netflix and Prime Video, you can launch the apps directly using the remote control hotkeys. Hovering over ("Focusing" on) options in the home menu will present a Preview in a new bar of options above the home menu.



1 Content search: This allows you to search the content store, all installed apps, and web browser in one go

2 Open the Home Dashboard

3 Recent input: Switch back to the previously used input channel

4 Recent apps: View a list of most recently used apps. To jump straight to the Recents list from any screen, press and hold the **Home** (🏠) button.

5 Apps list: Launch, move and delete the apps installed on your TV. When focused upon, most apps will provide a Preview of content or features which can be launched straight from the home menu.



Editing the Home Menu

The apps in the list can be reordered or deleted manually, or set to automatically update based on frequency of use ("Intelligent Edit").

SETTINGS MENU



Quick Settings

Press the **Settings** button on the remote control to open the Quick Settings menu, a customisable light-weight list of quick options:

- | | |
|-------------------------------|-----------------------------|
| 1. Picture mode | 5. Network options |
| 2. Sound mode | 6. Full settings menu |
| 3. Sound out (speaker output) | 7. Edit Quick Settings list |
| 4. Sleep timer | |

The “Edit Quick Settings list” option allows users to customise the order of the above items, as well as add additional quick settings options (such as aspect ratio, high contrast mode, screen off, and more) to be added to the list.

Full Settings Menu

Select the “**1**” option (**6. Full settings menu**) from the Quick Settings menu to open the complete settings menu.

Picture

Adjust settings for picture mode, contrast, brightness, colour, sharpness, tint, colour temperature, aspect ratio, energy saving, eye comfort, etc.

Sound

Adjust audio settings, including sound modes, speaker output selection, sync adjustment, 5-band EQ, Ultra Surround configuration, and more.

Programmes

Tuning settings for DTV and ATV (ATV is no longer supported in Australia), including subtitle options, additional audio settings (such as dual mono), and HbbTV configuration.

Connection

Internet and connectivity options, including TV name, current network settings, and device management.

General

The general settings menu contains many items, such as AI service management, language options, time and location settings, safety (parental guidance and password protection options), account management, home dashboard settings, menu transparency, screensaver, eco mode, and more.

Accessibility

Options to adjust the image and audio for accessibility requirements can be found here. Configure audio description settings, subtitles, hard of hearing and colour settings (high contrast, grayscale) from this menu.

Support

View system and app information, the end-user license agreement, and install software updates (via USB). To reset the TV back to factory settings and access the First Time Setup options again, select “Reset to Initial Settings” from this menu.

BASIC TROUBLESHOOTING

Many minor issues can be resolved by hard resetting, or power cycling the unit or upgrading the firmware.

To perform a hard reset, or power cycle, please use the following steps.

- Unplug it from the main power socket and leave it for 10-15 minutes.
- Press and hold the power button on the TV for 5 seconds.
- Connect the TV back to the power and turn it on.

USB device is not recognised

- This TV requires a minimum of 64GB storage for Live Playback and Recording functions.
- Ensure the drive is formatted for FAT32 before using with this TV. Use a computer to format the drive beforehand.

Poor picture and sound quality

- Try a different channel
- Adjust the antenna
- Check all connections

No picture or sound in TV status

- Try another channel
- Press the TV/AV button
- Make sure TV is plugged in
- Check the antenna connection

No sound or sound is too low at maximum volume

- Check the volume settings on any external speakers connected to your television
- Check another channel or input
- Check that MUTE hasn't been turned on

No colour, wrong colour or tints

- Make sure the program itself is broadcast in colour
- Select the picture menu, then adjust the colour and tint submenus

Picture rolls vertically

- Check all connections

Blurred or snowy picture, distorted sound

- Check direction, location and connections to your antenna
- Issues may be caused by the use of an indoor antenna (poor signal)

Remote control malfunctions

- Replace remote control batteries
- Check battery polarity (+/-)
- Remote is out of range, move closer to TV
- Remove any obstructions between remote and IR sensor of TV
- Make sure the power cord to your TV is plugged in and turned on

Image is not centred on the screen

- Adjust the horizontal and vertical position

“No Signal” on HDMI source

- Test the device with a different HDMI cable or port
- Try a different device connected to the same cable and port
- Perform a factory reset on your TV

For our full TV troubleshooting guide and extended User Manual for this TV, head online to help.kogan.com

SPECIFICATIONS

Dimensions

Without Stand	1569 x 95 x 906 mm
With Stand	1569 x 321 x 960 mm
VESA Wall Mount Pattern	400 x 300
Wall Mount Screw Size	M6x10mm (x4)
Weight	24.6kg
Gross weight	39.8kg

Audio

Speakers	2 x 10W
----------	---------

Connectivity

Ethernet (RJ45)	Yes
HDMI	2.0 (x3)
HDMI-ARC	Yes HDMI 2
HDMI-CEC	Yes HDMI 1, HDMI 2, HDMI 3
USB	2.0 (x2)

This is a quick specifications list. For a complete guide, refer to the full User Guide for this model at help.kogan.com

Note:

- Design and specifications are subject to change without notice.
- Weight and dimension shown are approximate.

NOTES

This image shows a blank sheet of white paper with horizontal red ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Need more information?

This is a **Quick Start Guide**, and while we hope that this has given you the assistance needed for a simple set-up, a full user guide outlining all of this product's instructions and features can be found online at **help.kogan.com**

kogan.com