

## 2001 OLDSMOBILE INTRIGUE



Year: 2001

Make: Oldsmobile

Model: Intrigue

### IN-DASH APPLICATION:

Dash Type: GM Double DIN

Kit: GM1580/1583

Harness: GM03

Antenna Adapter: MDA1

### FRONT SPEAKERS:

Front Door: 5 1/4" 4-Hole Speaker, and 1 1/4" Tweeter

### REAR SPEAKERS:

Rear Deck: Standard 6x9" Speaker

When installing an aftermarket 5 1/4" or 6 1/2" speakers, a speaker adapter is needed. We recommend the Scosche SA69 speaker adapter.

### WIRE COLOR CODES:

+12V CONSTANT	=	ORANGE
+12V Accessory Switched	=	Yellow
-12V Chassis Ground	=	Black/White
+12V Illumination	=	Brown/White
LF+	=	Tan
LF-	=	Grey
RF+	=	Lt. Green
RF-	=	Dk. Green
LR+	=	Brown
LR-	=	Yellow
RR+	=	Dk. Blue
RR-	=	Lt. Blue

## 2001 OLDSMOBILE INTRIGUE Sedan

**PRELIMINARY:** Disconnect the negative battery cable.

**ANTENNA:** The factory antenna is located in the rear window.

### **RADIO REMOVAL AND IN-DASH INSTALLATION:**

**Note:** The factory stereo provision is for a Double DIN radio. For a DIN unit we recommend the Scosche kit GM1583/GM1580.

1. Carefully use a panel removal tool and pry dash bezel off.
2. Extract (3) 9/32 screws securing radio, disconnect and remove.

### **FRONT DOOR SPEAKER REMOVAL AND INSTALLATION:**

**Note:** The factory speaker provision is for a 5 1/4" speaker mounted to the factory speaker adapter. Also a 1 1/4" Tweeter.

1. Remove screw cover cap in interior door opener cup, and extract (1) Philips screw, remove bezel.
2. Extract (1) T27 Torx screw from behind door handle.
3. Extract (2) Philips screws from bottom of door panel.
4. Pry out window control panel and extract (1) T27 Torx screw from behind.
5. Use panel removal tool and unsnap panel fastener all the way around panel, pull upwards, disconnect and remove door panel.
6. Extract (4) 9/32 screws securing speaker, disconnect and remove speaker.

### **REAR DECK SPEAKER REMOVAL AND INSTALLATION:**

**Note:** The factory speaker provision is for a 6 x 9" mounted to the rear deck. When installing an aftermarket 5 1/4 or 6 1/2" speaker a speaker adapter is required. We recommend the use of a Scosche SA69 speaker adapter.

1. Remove bottom seat cushion by pulling seat releases on front bottom part of cushion.
2. Extract (2) 10 mm bolts holding rear seat back cushion and remove.
3. Pull away door molding and pry off top C pillar panel using panel removal tool and remove.
4. Carefully pull rear deck out then up, and remove.
5. Extract (4) 9/32" screw from speaker, disconnect and remove.

