

Brookstone®

iDESIGN®

Wireless TV Headphones



TABLE OF CONTENTS

Cautions and Warnings2-6

Location of Controls..... 7

Installing the Batteries..... 8

Using the TV Headphones9-10

Specifications..... 11

Troubleshooting12

Warranty..... 13-14

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All the safety and operating instructions should be read, adhered to and followed before the unit is operated.

SAVE THESE INSTRUCTIONS

DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Do not use while bathing or in a shower.
2. Do not place or store unit where it can fall or be pulled into a tub or sink.
3. Do not place in, drop or submerge in water or other liquid.
4. Do not reach for unit that has fallen into water. Unplug it immediately.
5. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

WARNING

1. Close supervision is necessary when this appliance/product is used by or near children or mentally disabled individuals.
2. Use this unit only for its intended use as described in this manual.
3. Unplug this unit during lightning storms or when unused for long periods of time.
4. Never drop or insert an object into any opening.
5. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
6. Do not allow the cord to touch hot surfaces. Wrap the cord loosely around the unit when storing.

7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
8. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
9. Do not overload the electrical outlet. Use only the power source as indicated.
10. Do not carry this unit by its cord or use the cord as handle.
11. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
12. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
13. Do not operate in the presence of explosive and/or flammable fumes.
14. Never remove the plug from the socket by pulling the power cord.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

 
 
Modifications not authorized by the manufacturer may void the user's authority to operate this device.

BATTERY PRECAUTIONS

- Dispose of the old batteries properly. Do not dispose of the old batteries in a fire.
- Do not leave the batteries where a child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.


LOCATION OF CONTROLS

1. Power Indicator LED
2. Headset On/Off Switch
3. Volume Control
4. Battery Compartment
5. Head Band
6. 3.5mm Audio/Headphone Cable
7. Transmitter On/Off Switch
8. DC 12V Port
9. AC Adapter (not shown)
10. 3.5mm Audio-to-RCA Cable (not shown)

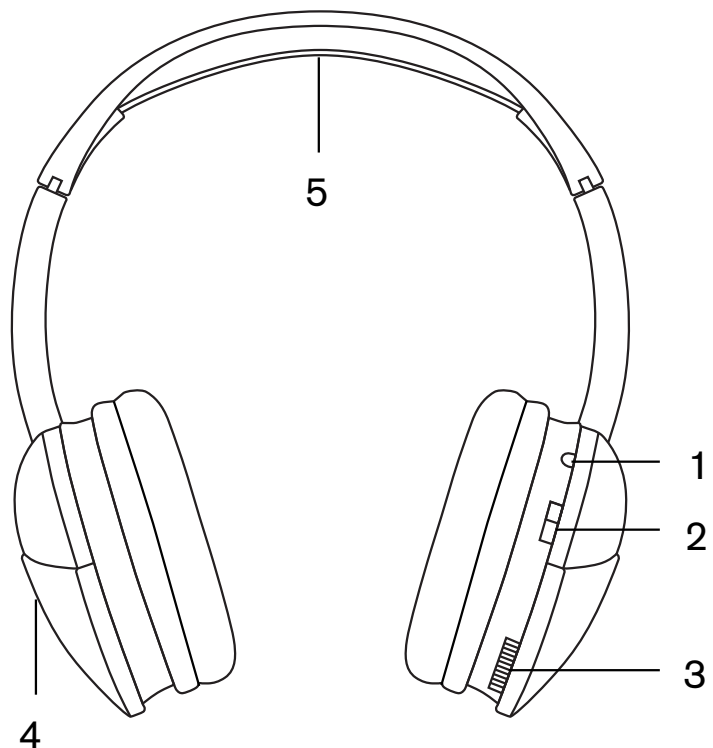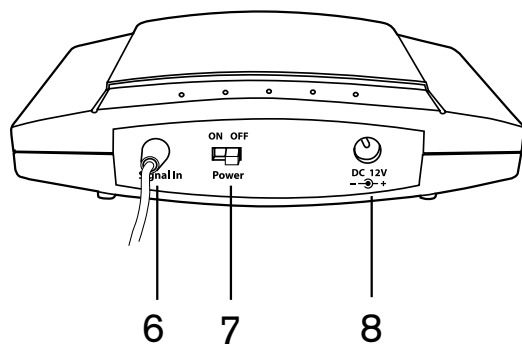

INSTALLING THE BATTERIES

 1. Open the BATTERY COMPARTMENT door by turning the screw counterclockwise and removing the BATTERY COMPARTMENT cover.
2. Insert 2 AAA batteries according to the polarity indicators.
3. Replace the BATTERY COMPARTMENT cover and replace and tighten the screw by turning it clockwise.

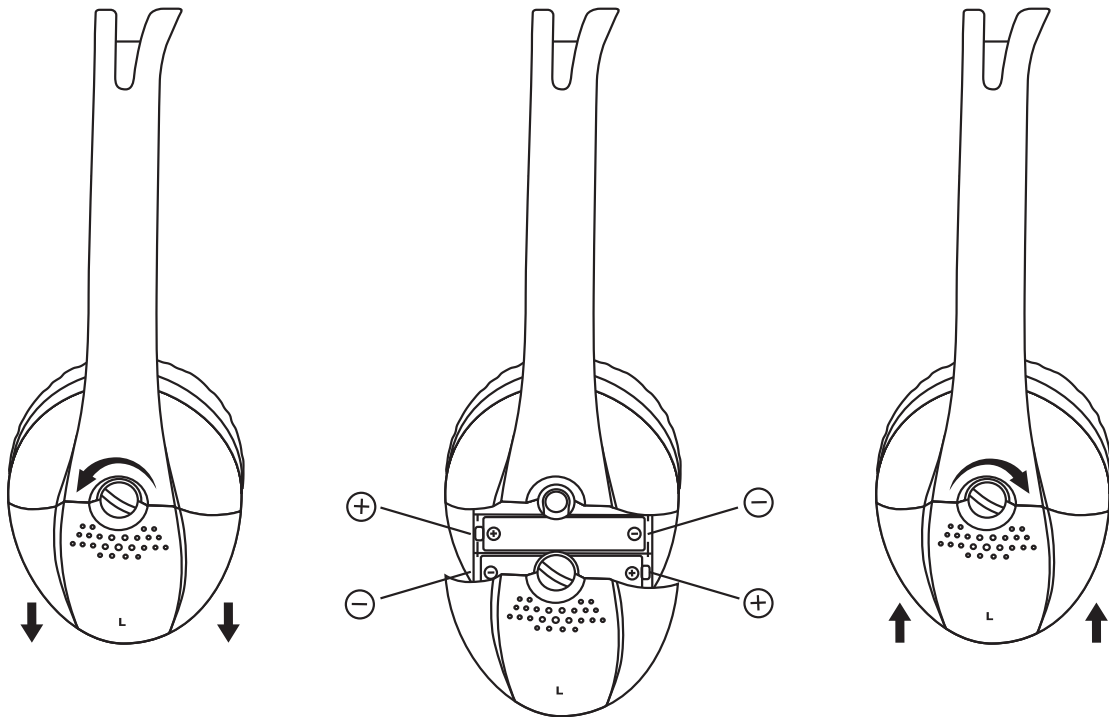

USING THE TV HEADPHONES VIA RCA JACKS

1. Plug the 3.5mm AUDIO TO RCA CABLE into the RCA audio output jacks on your TV.
2. Plug the 3.5mm AUDIO/HEADPHONE CABLE into the audio output jack on the 3.5mm AUDIO TO RCA CABLE.
3. Plug the AC ADAPTER into the DC 12V PORT on the TRANSMITTER and then into a regular 110V wall outlet.
4. Place the TRANSMITTER in a position that will be within the line of sight of the headphones when you are wearing them as you watch TV.
5. Slide the POWER ON/OFF SWITCH on the TRANSMITTER to ON.
6. Turn on the TV and ensure the volume of the TV is turned all the way down.
7. Turn the headphone VOLUME to its lowest setting.
8. Turn on the headphones by sliding the POWER ON/OFF SWITCH on the headphones to ON, and settle them comfortably on your head, adjusting the length of the HEAD BAND accordingly.
9. Adjust the VOLUME on the headphones to enjoy the audio at any volume level privately, without disturbing others—even if you're in the same room!

USING THE TV HEADPHONES VIA HEADPHONE JACK

1. Plug the 3.5mm AUDIO/HEADPHONE CABLE into the audio output jack on your TV.
2. Plug the AC ADAPTER into the DC 12V PORT on the TRANSMITTER and then into a regular 110V wall outlet.
3. Place the TRANSMITTER in a position that will be within the line of sight of the headphones when you are wearing them as you watch TV.
4. Slide the POWER ON/OFF SWITCH on the TRANSMITTER to ON.
5. Turn on the TV.
6. Turn the headphone VOLUME to its lowest setting.
7. Turn on the headphones by sliding the POWER ON/OFF SWITCH on the headphones to ON, and settle them comfortably on your head, adjusting the length of the HEAD BAND accordingly.
8. Adjust the VOLUME on the headphones and your TV to enjoy the audio at any volume level privately, without disturbing others—even if you're in the same room!

Note: The TV volume must be on at an audible level in order to hear sound through the headphones.

SPECIFICATIONS

Infrared Carrier Frequencies.....	2.3MHz/2.8MHz
Frequency Response	20-20kHz
Speakers	30mm
S/N Ratio	>45dB
Distortion.....	<5%
Operation Range	Up to 20 Feet
Headphone Power Supply.....	2 x 1.5V AAA Battery
Transmitter Power Supply	Standard 110V

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Not working and/or no sound.	Objects in between Headphones and Transmitter.	Change your position or clear the line of sight from the Transmitter to the Headphones so there is no disruption.
	Connections between the Audio Jack on the TV and the Transmitter may be loose.	Check all connections.
	You may be out of range of the Transmitter.	Move to within 20 feet of the Transmitter.
	There may be sunlight interfering with the infrared transmission between the Headphones and the Transmitter.	Move away from large windows and make sure there are no sunbeams across the line of sight between the Transmitter and the Headphones.
	Batteries are low.	Replace the batteries.

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than Brookstone may provide their own warranties to the purchaser,

but Brookstone, in so far as permitted by law, provides these products “as is.” This warranty does not apply to: a) damage caused by failure to follow instructions relating to product’s use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold “as is” including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Brookstone®

A WORLD OF INNOVATION

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.

Merrimack, New Hampshire USA 03054 • 800-846-3000 • www.Brookstone.com

629196