

 


## What's in the box

---



**XL Housing**



**Outdoor Mount**



**XL Rechargeable Battery**




**Screw Kit**

## Install your XL Rechargeable Battery and Housing


---

1. Place the outdoor mount and secure it with screws.


For drywall, use the wall anchors we provide.

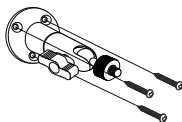

2. Insert the XL Battery into the camera and then slide the camera and battery into the XL Housing.

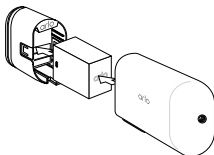

3. Attach the camera to the outdoor mount and swivel to adjust the camera angle.

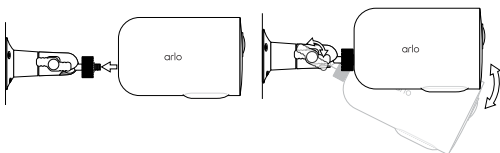

# Need help?

---

We are here for you.

Visit [www.arlo.com/support](http://www.arlo.com/support) or quick answers and resources:

- How-to videos
- Troubleshooting tips
- Additional support resources

---


© Arlo Technologies, Inc. Arlo, Arlo logo, and Every Angle Covered are trademarks of Arlo Technologies, Inc. Other trademarks are for reference purposes.

For regulatory compliance information including the EU Declaration of Conformity, visit [www.arlo.com/about/regulatory/](http://www.arlo.com/about/regulatory/).



Arlo Technologies Intl. Ltd.  
Ground Floor, Building 3  
University Technology Centre  
Curraheen Road, Cork, T12 EF21 Ireland

 April 2021



201-50398-21

Arlo Technologies, Inc.  
2200 Faraday Avenue, Suite 150  
Carlsbad, CA 92008 USA