

Need help?

Smart call blocker* (SCB) - cont'

Adding a new number to the allow list	3. Press ▲/▼ → Allow list → MENU SELECT
	4. Press ▲/▼ → Add new entry → MENU SELECT
	5. Enter a telephone number (up to 30 digits), and then press MENU SELECT
Adding a new name to the star name list	6. Enter a name (up to 15 characters), and then press MENU SELECT
	• Repeat Step 4 to add another contact.
	3. Press ▲/▼ → Star name list → MENU SELECT
	4. Press ▲/▼ → Add new entry → MENU SELECT
	5. Enter a name (up to 15 characters), and then press MENU SELECT
	• Repeat Step 4 to add another contact.

Add numbers from caller ID log

1. Press cid to enter the caller ID log in idle.

2. Press ▲/▼ to locate the desired entry → MENU SELECT.

Adding CID log entry to block list	3. Press ▲/▼ → To Block list → MENU SELECT
Adding CID log entry to allow list	4. Press MENU SELECT twice.
Adding a new name to the star name list	3. Press ▲/▼ → To Allow list → MENU SELECT
	4. Press MENU SELECT twice.
	3. Press ▲/▼ → To Star name list → MENU SELECT
	4. Press MENU SELECT twice.

Call controls

Call categories	Call control and options
Unwelcomed calls	Numbers saved in block list.
	The telephone blocks these calls from ringing through.

Call categories	Call control and options
Welcome calls	- Numbers saved in allow list. - Numbers saved in phonebook. - Numbers not found in block list. - Caller ID names saved in start name list.
Unknown calls (for home calls only)	Calls without numbers Numbers that are "out of area" or set to "Private".
	You can select one of the following five profile options for handling all unknown home calls. Screen unknown The telephone plays the screening announcement, and then ask the caller to say his/her name before the call rings on your telephone. You can then answer the call, and hear the caller's name announced. You can decide whether to accept or reject the call, or to forward the call to the answering system. Screen robot The telephone plays the screening announcement, and then ask the caller to press the pound key (#) before the call rings on your telephone. You can then answer the call. Allow unknown (default settings) The telephone allows these calls to get through and ring. The caller's number, even if it is available, will not be saved to the allow list. Unknown to answering system The telephone forwards these calls to the answering system without ringing. Block unknown The telephone rejects these calls with block announcement without ringing. The caller's number, even if it's available, will not be saved to the block list.
	Uncategorized calls - With absent caller ID number. - Numbers not found in phonebook. - Numbers not found in allow list. - Numbers not found in block list. - With caller ID names not found in star name list.

Set profile

There are 5 profile setting options, which allows you to quickly set up Smart call blocker.

- Press MENU SELECT to enter the main menu in idle.
- Press ▲/▼ → **Smart call blk** → MENU SELECT
- Press ▲/▼ → **Set profile** → MENU SELECT

Set profile	Steps
Screen unknown Screen all unknown home calls	4. Press ▲/▼ → Screen unknown → MENU SELECT
Screen robot Screen robotcalls	4. Press ▲/▼ → Screen robot → MENU SELECT
Allow unknown Block calls on the block list only (default setting)	4. Press ▲/▼ → Allow unknown → MENU SELECT
Unknown to Ans.S Forward all unknown home calls to the answering system	4. Press ▲/▼ → Unknown to Ans.S → MENU SELECT
Block unknown Block all unknown home calls	4. Press ▲/▼ → Block unknown → MENU SELECT

Add a screened number to the block list or allow list

If you select **Screen unknown** or **Screen robot** in **Set profile**, the telephone plays a screening announcement to the caller, and asks the caller to respond before the call rings through to you.

After the caller responds, the telephone rings and you can then pick up the call. The telephone then asks whether you want to answer or reject the call, or to forward the call to the answering system.

The telephone announces *"To answer the call, press 1. To answer and always allow this number, press 2. To block this number, press 3. To send this call to the answering system, press 4. To repeat these options, press ***.

Add current number to the allow list	Press 2 to answer the home call, and add the current number to the allow list.
Add current number to the block list	Press 3 to block the home call, and add the current number to the block list.

- This is applicable to home calls only. All incoming cell calls will get through and ring.
- Unknown home calls without caller ID information will not have the option 2, "answer and always allow this number", and option 3, "to block this number". No number will be added to the allow list or block list for these calls.
- If you do not want to take the call, press OFF CANCEL to end the call.

Block the caller while on a call

When you are on a home or cell call and speaking to the caller, and you do not want to continue the call, you can end the call with block announcement and add the number to the block list. During a home or cell call, press CALL BLOCK → MENU SELECT.

Unblock a telephone number

If you have added a telephone number to the block list, you can unblock it.

- Press CALL BLOCK → ▲/▼ → **Block list** → MENU SELECT
- Press MENU SELECT to choose **Review**, and then press ▲/▼ to browse through the block entries.
- When the desired entry displays, press MUTE DELETE on the handset. Then, press MENU SELECT to confirm.

7 Answering system

About answering system and voicemail

For message recording, your telephone has a built-in answering system, and it also supports voicemail service offered by your telephone service provider (subscription is required, and fee may apply).

	Built-in answering system	Voicemail service
Supported by	Telephone system	Telephone service provider
Subscription	No	Yes
Fee	No	May apply
Answer incoming calls	- After 4 rings by default. - It can be changed in the handset or the telephone base menu.	- Usually after 2 rings. - It can be changed by contacting your telephone service provider.

Storage	Telephone base	Server or System
Display new messages	- Handset - XX new messages - Telephone base - XX. If message alert tone is turned on, the base beeps every 10 seconds.	Handset - 
Retrieve messages	- Press  on the base; - Press MENU SELECT and then select Play messages on the handset; or - Access remotely with an access code.	Press 1 on the handset, and enter an access number from your telephone service provider.

Turn on/off built-in answering system

Handset	Base
1. Press MENU SELECT to enter the main menu in idle.	
2. Press ▲/▼ → Answering sys → MENU SELECT	
3. Press ▲/▼ → Answer on/off → MENU SELECT	Press ANS ON (base).
4. Press On/Off .	

Announcement recording

Handset	Handset screen
1. Press MENU SELECT to enter the main menu in idle.	
2. Press ▲/▼ → Answering sys → MENU SELECT	
Announcement displays. - The voice guide announces <i>"To play, press 2. To record, press 3"</i> while the screen displays Play [2], Del [3], and Rec [1]. - To delete the recorded announcement, press 3.	Play Del Rec [2] [3] [1]
3. Press 7 to record your announcement.	
The voice guide announces <i>"Record after the tone, press 5 when you are done"</i> while the screen displays Recording... Stop [5].	Recording... Stop [5]

Battery

- Use only the batteries provided or equivalent. To order a replacement, visit our website at www.vtechphones.com or call 1 (800) 595-9511.
- In Canada, go to phones.vtechcanada.com or call 1 (800) 267-7377.
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit with conductive materials.
- Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual.

Precautions for users of implanted cardiac pacemakers

- Cardiac pacemakers (applied only to digital cordless telephones).
- Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:
 - Pacemaker patients
 - Should keep wireless telephones at least six inches from the pacemaker.
 - Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
 - Should use the wireless telephone at the ear opposite the pacemaker.
- WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

About cordless telephones

- Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not treat cordless telephone conversations as being as private as those on corded telephones.
- Electrical power:** The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- Potential TV interference:** Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.
- Rechargeable batteries:** Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries:** Dispose of these batteries in a safe manner. Do not burn or puncture the battery. After other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

For C-UL compliance only

Mesures de sécurité importantes

Afin de réduire les risques d'incendie, de blessures corporelles ou d'électrocution, suivez toujours ces mesures préventives de base lorsque vous utilisez votre téléphone :

- Lisez et comprenez bien toutes les instructions.
- Observez toutes les instructions et mises en garde inscrites sur l'appareil.
- N'utilisez qu'avéc des dispositifs Bluetooth homologués par UL.
- Débranchez ce téléphone de la prise murale avant de le nettoyer. N'utilisez pas de nettoyeurs liquides ni en aérosol. N'utilisez qu'un chiffon doux et légèrement humecté.
- ATTENTION:** Ne pas installer le socle téléphonique à une hauteur supérieure à 2 mètres.
- N'utilisez pas ce produit près de l'eau, tel que près d'un bain, d'un lavabo, d'un évier de cuisine, d'un bac de lavage ou d'une piscine, ou dans un sous-sol humide ou sous la douche.
- Ne déposez pas ce téléphone sur un chiot, support ou table chancelants. L'appareil pourrait tomber et être sérieusement endommagé.
- Évitez d'utiliser le système téléphonique dans des endroits soumis à une température extrême, à la lumière directe du soleil ou à proximité immédiate d'autres appareils électriques ou électroniques. Protégez votre téléphone contre les sources d'humidité, la poussière, les vapeurs et les liquides corrosifs.
- Le boîtier de l'appareil est doté de fentes et d'ouvertures d'aération situées à l'arrière ou en dessous. Afin d'empêcher la surchauffe, ces ouvertures ne doivent pas être obstruées en plaçant l'appareil sur un lit, divan, tapis ou autre surface similaires. Ne placez pas cet appareil proximité d'un élément de chauffage ni d'une plinthe électrique. De plus, ne l'installez pas dans une unité murale ou un cabinet fermé qui ne possède pas d'aération adéquate.
- Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur les étiquettes de l'appareil. Si vous ne connaissez pas le voltage de votre maison, consultez votre marchand ou votre fournisseur d'électricité.
- N'utilisez pas ce produit sans la notice. Installez cet appareil dans un endroit sécurisé, là où personne ne pourra trébucher sur la ligne d'alimentation ni le cordon téléphonique modulaire.
- N'insérez jamais d'objets à travers les fentes et ouvertures de cet appareil, car ils pourraient toucher à des points de tension dangereux ou court-circuiter des pièces, ce qui constituerait un risque d'incendie ou d'électrocution. N'échappez pas de

Liquides dans l'appareil.

- Afin de réduire les risques d'électrocution, ne démontez pas l'appareil, mais apportez-le plutôt à un centre de service qualifié s'il doit être réparé. En enlevant le couvercle, vous vous exposez à des tensions dangereuses ou autres dangers similaires. Un remontage inadéquat peut être à l'origine d'une électrocution lors d'une utilisation ultérieure de l'appareil. Débranchez l'appareil avant de procéder au nettoyage. Utilisez un chiffon humide et doux.
- Ne surchargez pas les prises de courant et les rallonges.
- Débranchez cet appareil de la prise de courant et communiquez avec le département de service à la clientèle de VTech dans les cas suivants:
 - Alimentation électrique: Le socle de ce téléphone sans fil doit être branché à une prise électrique fonctionnelle. La prise électrique ne doit pas être contrôlée par un interrupteur mural. Les appels ne pourront pas être effectués du combiné sans fil si le socle est débranché ou mis hors tension ou si le courant est coupé.
 - Possibilité d'interférences aux téléviseurs: Certains téléphones sans fil fonctionnent sur des fréquences pouvant causer des interférences aux téléviseurs et aux magnétoscopes. Pour réduire ou éliminer de telles interférences, ne placez pas le socle du téléphone sans fil près ou sur un téléviseur ou magnétoscope. S'il y a présence de parasites, il est conseillé d'éloigner le téléphone sans fil du téléviseur ou du magnétoscope afin de réduire possiblement les interférences.
 - Piles rechargeables: Manipulez les piles avec soin afin de ne pas les court-circuiter avec des bagues, bracelets ou clés. Les piles ou le conducteur peut surchauffer et causer des blessures. Respectez la polarité adéquate entre la pile et le chargeur.
 - Les bloc-piles rechargeables à l'hydruure métallique de nickel: Jetez ces bloc-piles de manière écologique et sécuritaire. Ne les incinérerez pas et ne les percerz pas. Tel que les autres piles de ce type, elles pourraient dégager une matière toxique qui peut causer des blessures corporelles si elles sont brûlées ou percées.
- Si le produit ne fonctionne pas normalement en respectant les instructions de fonctionnement. Réglez uniquement les commandes indiquées dans les instructions de fonctionnement. Les réglages incorrects des autres commandes pourraient provoquer un dommage qui pourrait exiger un travail exhaustif de la part d'un technicien autorisé afin de rétablir le fonctionnement normal de l'appareil.
- Si le produit affiche une nette diminution de sa performance ou de sa durée de vie, il peut être endommagé.
 - Si l'appareil a été exposé une source d'humidité telle que la pluie ou l'eau.
 - Si le produit ne fonctionne pas normalement en respectant les instructions de fonctionnement. Réglez uniquement les commandes indiquées dans les instructions de fonctionnement. Les réglages incorrects des autres commandes pourraient provoquer un dommage qui pourrait exiger un travail exhaustif de la part d'un technicien autorisé afin de rétablir le fonctionnement normal de l'appareil.
- Évitez d'utiliser un téléphone (autre qu'un sans fil) pendant un orage. Les éclairs peuvent être à l'origine d'une électrocution.
- N'utilisez pas le téléphone pour rapporter une fuite de gaz à proximité de la fuite. En certaines circonstances, une flamme pourrait être provoquée lorsque l'adaptateur est branché à une prise de courant, ou lorsque le combiné est déposé sur le socle. Ceci est un événement commun associé à la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher le téléphone à une prise de courant, et ne devrait pas déposer le combiné chargé sur le socle, si le téléphone se trouve à proximité d'un endroit comportant des concentrations de gaz inflammables, moins que la ventilation soit adéquate. Une flamme dans un tel endroit pourrait provoquer un incendie ou une explosion. De tels environnements peuvent comprendre: des endroits où l'on utilise de l'oxygène médical sans ventilation adéquate; des gaz industriels (dissolvants de nettoyage, des vapeurs d'essence, etc.) ; une fuite de gaz naturel, etc.
- Ne placez que le combiné de votre téléphone près de votre oreille lorsque vous menez de conversation.
- Ces adaptateurs ont été conçus pour être orientés en position verticale ou montés au sol. Les broches ne sont pas conçues pour maintenir l'adaptateur en place si celui-ci est banché dans une prise au plafond ou sous une table/ armoire.
- Pour le MATRIEL RACCORDE PAR PRISE DE COURANT, le socle de prise de courant doit être installé a proximité du matériel et doit être aisément accessible.

- AVERTISSEMENT: MISE EN GARDE:** Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles pour le téléphone. Utilisez uniquement les piles rechargeables inclus ou les piles de recharge (BT1834/2/BT1834/2).

N'incérnez pas les piles. Celles-ci devraient être exposées. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

Évitez d'utiliser la batterie dans les conditions suivantes:

- Des températures extrêmes faibles ou élevées auxquelles une batterie peut être soumise pendant l'utilisation, le stockage ou le transport;
 - Remplacement d'une batterie par un type incorrect pouvant supprimer une protection;
 - Mise au rebut d'une batterie dans un feu ou dans un four chaud, ou écrasement mécanique ou coupure d'une batterie, susceptible de provoquer une explosion;
 - maintien d'une batterie dans un environnement à très haute température pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammables;
 - batterie soumise à une pression de l'air extrêmement faible pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammables;
- N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril.
 - La plaque de noms appliquée se trouve au bas ou près du produit.

CONSERVER CES INSTRUCTIONS

Pile

- N'utilisez que la pile incluse ou l'équivalent. Pour commander une pile de recharge, visitez notre site Web au www.vtechphones.com ou composez le 800-595-9511.
 - Au Canada, visitez le phones.vtechcanada.com ou composez le 800-267-7377.
 - Ne jetez pas la pile au feu. Vérifiez les instructions spécifiques de mise aux rebut auprès des autorités locales.
 - N'ouvrez pas et ne multipliez pas la pile. L'électrolyte qui s'en échapperait est corrosif et pourrait causer des brûlures ou des blessures aux yeux ou à la peau. L'électrolyte est toxique s'il avale.
 - Soyez prudents lorsque vous manipulez les piles afin d'éviter les courts-circuits provoqués par des matériaux conducteurs.
 - Rechargez la pile incluse avec cet appareil, selon les instructions et limites spécifiées dans ce guide d'utilisation.
- Stimulateurs cardiaques implantés dans l'organisme**
- Les simulateurs cardiaques (appliqués uniquement aux téléphones numériques sans fil):
- L'organisme "Wireless Technology Research, LLC (WTR)", une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des États-Unis, la firme WTR recommande aux médecins:

Avis aux détenteurs de stimulateurs cardiaques

- Il doit être tenu le téléphone sans fil à une distance d'au moins six pouces du stimulateur cardiaque.
 - Il ne doit pas être placé le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche.
 - Il doit être utilisé le téléphone sans fil en l'appuyant sur l'oreille qui se trouve dans la direction opposée au stimulateur cardiaque.
- Cet équipement conforme aux Part 68 de la FCC rules and with technical requirements adopted by the Administrative Council for Terminal Apparatus (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format U.S.AAAEQ#mTXXXX. This identifier must be provided to your telephone service provider upon request. The plug and jack used for communications may not be ensured when using this telephone. To ensure safety of users, the FCC /ISED has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC/ ISED criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more. This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B).

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Apparatus (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format U.S.AAAEQ#mTXXXX. This identifier must be provided to your telephone service provider upon request. The plug and jack used for communications may not be ensured when using this telephone. To ensure safety of users, the FCC /ISED has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC/ ISED criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more. This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B).

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if #1# is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your telephone service provider.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone service provider or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Replacement to this telephone equipment can only be made by the manufacturer or its authorized agents. For replacement procedures, follow the instructions outlined under the "Limited warranty".

If this equipment is causing harm to the telephone network, the telephone service provider may temporarily discontinue your telephone service. The telephone service provider is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone service provider is required to inform you of your right to file a complaint with the FCC. Your telephone service provider may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone service provider is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible. If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

Remain on the line and briefly explain the reason for the call before hanging up.

Perform such activities in off-peak hours, such as early morning or late evening.

Industry Canada

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) This device must accept any interference, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

The term "IC" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is 1.0. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

California Energy Commission Battery charging testing instructions

This telephone is set up to comply with the energy-conserving standards right out of the box. These instructions are intended for California Energy Commission (CEC) compliance testing only. When the CEC battery charging testing mode is activated, all telephone functions, except battery charging, will be disabled.

To activate the CEC battery charging testing mode:

- Unplug the telephone base power adapter from the power outlet. Make sure all handsets are plugged with charged batteries before proceeding.
 - While you press and hold **FIND HS**, plug the telephone base power adapter back to the power outlet.
 - After about 20 seconds, when the **HOME/FLASH** light starts flashing, release **FIND HS** and then press it again within two seconds. You hear a confirmation tone. The **HOME/FLASH** light turns on and all handsets display **To register HS... see manual** alternately. Allow up to one minute for the process to complete.
- If the phone fails to enter this mode, repeat all the steps mentioned above. The telephone base will be powered up as normal if you fail to press **FIND HS** within two seconds in Step 3.

To deactivate the CEC battery charging testing mode:

- Unplug the telephone base power adapter from the power outlet, and then plug it back in. Then the telephone base is powered up as normal.
- Put the handsets on the telephone base cradle to begin registration.
- The handset shows **Registering...** If the registration is successful, the handset screen displays **Registered** and beeps. The handset is registered with the telephone base.

Technical Specifications

Frequency control	Crystal controlled PLL synthesizer
Transmit frequency	Handset: 192L536-1928.448 MHz Telephone base: 192L536-1928.448 MHz
Channels	DECT channel: 5
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.
Power requirement	Handset: 2.4 V DC, 400mAh, Ni-MH battery Base: 6V DC @ 450mA Power adapter: Output 6V DC @ 450mA (Base). Max. of PS1 or LPS. Output: 6V@400mA (Charger). Max. of PS1 or LPS.
Memory	Phonebook: 1000 memory locations; up to 30 digits and 15 characters Caller ID log: 50 memory locations; up to 24 digits and 15 characters Call block: 1000 entries

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by VTech Holdings Limited is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

* Includes licensed Galil™ technology. Galil™ is a trademark of Truecall Group Limited.



The ENERGY STAR® program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines.

Limited warranty

What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the original retail packaging, with the exception of any liquid intrusion, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's authorized service representative will replace at VTech's option, without charge, a Materially Defective Product. If we replace the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished product of the same or similar design. We will retain defective parts, modules, or equipment. Replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the replacement Products to you in working condition. You should expect the replacement to take approximately 30 days.

How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the replacement Product for a period of either (a) 90 days from the date the replacement Product is shipped to you or (b) the time remaining on the original one-year warranty, whichever is longer.

What is not covered by this limited warranty?

- This limited warranty does not cover:
 - Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, rust, mold, fire, water, or other liquid intrusion.
- Product that has been subjected to contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like; but then only to the extent the damage was not caused by incorrectly securing the waterproof handset's

Message alert tone

- Press MENU SELECT to enter the main menu in idle.
- Press ▲/▼ → **Answering sys** → MENU SELECT
- Press ▲/▼ → **Ans sys setup** → MENU SELECT
- Press ▲/▼ → **Msg alert tone** → MENU SELECT
- Press ▲/▼ to select **On** or **Off**.

Message playback

Handset	Base
Press MENU SELECT twice to select Play messages .	Press  (base).

Options during message playback

Skip a message	Repeat the playing message	Play the previous message
Press 6 (Handset) or  (base).	Press 4 (Handset) or  (base).	Press 4 twice (Handset) or  twice (base).

Set number of rings