Pioneer

N-70A-K/-S N-50A-K/-S NETWORK AUDIO PLAYER







Discover the benefits of registering your product online at http://www.pioneer.co.uk (or http://www.pioneer.eu).

Operating Instructions

CAUTION

TO PREVENT THE RISK OF FLECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

D3-4-2-1-1 B1 En

WARNING

This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near this equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.

D3-4-2-1-3_A1_En

CAUTION

side).

VENTILATION CAUTION

The c// STANDBY/ON switch on this unit will not completely shut off all power from the AC outlet. Since the power cord serves as the main disconnect device for the unit, you will need to unplug it from the AC outlet to shut down all power. Therefore, make sure the unit has been installed so that the power cord can be easily unplugged from the AC outlet in case of an accident. To avoid fire hazard, the power cord should also be unplugged from the AC outlet when left unused for a long period of time (for

When installing this unit, make sure to leave space

around the unit for ventilation to improve heat radiation

(at least 10 cm at top, 10 cm at rear, and 10 cm at each

D3-4-2-2-2a*_A1_En

This product is for general household purposes. Any

example, when on vacation).

D3-4-2-1-7d* A1 En

failure due to use for other than household purposes (such as long-term use for business purposes in a restaurant or use in a car or ship) and which requires repair will be charged for even during the warranty period.

K041 A1 En

WARNING

Store small parts out of the reach of children and infants. If accidentally swallowed, contact a doctor immediately.

D41-6-4_A1_En

WARNING

To prevent a fire hazard, do not place any naked flame sources (such as a lighted candle) on the equipment. D3-4-2-1-7a A1 En

Operating Environment

Operating environment temperature and humidity: +5 °C to +35 °C (+41 °F to +95 °F); less than 85 %RH (cooling vents not blocked)

Do not install this unit in a poorly ventilated area, or in locations exposed to high humidity or direct sunlight (or strong artificial light).

D3-4-2-1-7c* A2 En

European model only

Information for users on collection and disposal of old equipment and used batteries

Symbol for \ equipment /



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries. please take them to applicable collection points in accordance with your national legislation.

Symbol examples for batteries





By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products and batteries.

please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

These symbols are only valid in the European Union.

For countries outside the European Union:

If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

K058a_A1_En

POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

S002*_A1_En

Contents

Thank you for buying this Pioneer product. Please read through these operating instructions so you will know how to operate your model properly.


Before you start About this product 5 Checking what's in the box 5 Loading the batteries 5 Operating range of remote control 5
01 Controls and displays Front panel
02 Connecting your equipment About the audio connection 9 Analog audio output connections 9 Digital audio connections 10 Connecting USB storage devices 10 Using a USB cable to connect to a computer 11 Connecting to the network through the LAN interface 11 Connecting the other Pioneer devices and controlling centrally 12 Plugging in 13
03 Getting started Setting the unit. 14 Auto power off setting 14 General control. 14
04 iPod/iPhone playback Confirming what iPod/iPhone models are supported 15 Playing your iPod/iPhone
05 USB/External HDD playback Playing files stored on USB storage devices
06 Network quick setup guide Connect to the network
07 Perform network settings Network setting 25 Setting the network standby function 26 Friendly Name 26 Listening to the Internet radio 26 Advanced operations for the Internet radio 27 About the Spotify audio stream playback function 27 Introduction 28

Playing audio files stored on computers or other components	28
08 Using other functions Using the Sound mode. For greatest fidelity to the original sound	30 31 31 31 31
09 Additional information	
Troubleshooting . Firmware Update	35 36
About network playback . About playable file formats. Windows 8	37 38
About iPod/iPhone	40 41

Before you start

About this product

This operating Instructions uses simplified illustrations of the product. Everything as shown in this operating Instructions may differ from the actual display on the product.

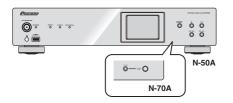 


Checking what's in the box

Please check that you've received the following supplied accessories:

- Remote control
- · Power cord
- AAA size IEC R03 dry cell batteries (to confirm system operation) x 2
- · RCA audio cable
- · Warranty card
- · Quick Start Guide
- · Safety brochure
- . These operating instructions (CD-ROM)

 Loading the batteries

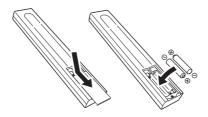

The batteries included with the unit have been provided to allow you check product operation and may not last long. We recommend using alkaline batteries that have a longer life.

WARNING


 Do not use or store batteries in direct sunlight or other excessively hot place, such as inside a car or near a heater. This can cause batteries to leak, overheat, explode or catch fire. It can also reduce the life or performance of batteries.

CAUTION

- Incorrect use of batteries may result in such hazards as leakage and bursting. Observe the following precautions:
- Never use new and old batteries together.
- Insert the plus and minus sides of the batteries properly according to the marks in the battery case.
- Batteries with the same shape may have different voltages. Do not use different batteries together.
- When disposing of used batteries, please comply with governmental regulations or environmental public institution's rules that apply in your country/area.
- When inserting the batteries, make sure not to damage the springs on the battery's (–) terminals. This can cause batteries to leak or overheat

Operating range of remote control

The remote has a range of about 7 m at an angle of about 30° from the remote sensor.

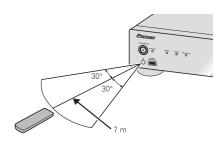


Keep in mind the following when using the remote control:

- Make sure that there are no obstacles between the remote and the remote sensor on the unit
- Remote operation may become unreliable if strong sunlight or fluorescent light is shining on the unit's remote sensor.
- Remote controllers for different devices can interfere with each other. Avoid using remotes for other equipment located close to this unit.
- Replace the batteries when you notice a fall off in the operating range of the remote.

Controls and displays

Front panel

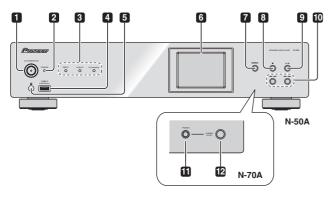

1 Ø/I STANDBY/ON

Press to turn the power on and off.

The button's center power indicator lights when power is on.

2 STANDBY indicator

Lights when the power is standby.

3 DIRECT indicator

Lights when the **DIRECT** mode switched on.

Hi-Bit 32 indicator

Lights when the Hi-Bit 32 mode switched on.

Up Sampling indicator

Lights when the **Up Sampling** mode switched on.

4 iPod/iPhone port

Use to connect your Apple iPod/iPhone (page 15) or connect a USB device/External HDD (page 10).

5 Remote sensor

Receives the signals from the remote control (page 5).

6 Display

7 SOURCE

Use to change the input source.

8

Press to stop playback.

9 ▶/Ⅱ

Press to start playback. During playback, pause/unpause playback.

10 144 44

Press to return to the beginning of the currently playing file. Hold down to fast-rewind. (Depending on the input function selected, it may not be possible to return to the beginning of the currently playing file.)

▶ ▶ > > |

Press to skip to the beginning of the next file. Hold down to fast-forward.

11 PHONES terminal (N-70A only)

Connect headphones.


12 PHONES LEVEL (N-70A only)

Adjusts the volume of the headphone.



- While the Initial Setup screen or track select screen is displayed, the following buttons on the unit can be used to move up and down, enter or return.
- ►/II : Enter
- ■ : Return

Display

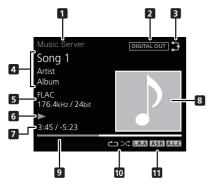

- 1 Input source
- 2 DIGITAL OUT

Displayed when the **DIGITAL OUT** setting is **On**.

- 3 Network connection status
 - When the unit is connected to the network, this indicator lights.
 - When the unit that is connected to the LAN cable is not connected to the network, this indicator lights. When the LAN cable is not connected to this unit, this indicator does not lights.
- 4 Name of folder/file/artist/album/station, etc.
- 5 File information

Displays file format, sampling rate and quantization bitrate.

- 6 Play status
- 7 Elapsed playing time Remaining playing time
- 8 Artwork

Displayed when the currently playing file includes an album jacket image, etc.

9 Play bar

Displays the status of file playback. May not be displayed depending on the input or the file.

10 Repeat and Shuffle

- Repeat all files.
- Repeat a file.
- > Shuffle

11 SOUND feature indicator

L.R.A

Displayed when the **Lock Range Adjust** setting is set to anything other than **Range 7** (Initial setting).


ASR

Lights when the Auto Sound Retriever switched on.

A.L.C

Lights when the Auto Level Control switched on.

Remote control

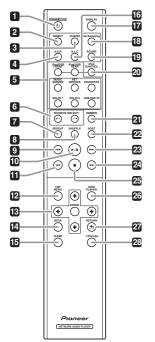

1 & STANDBY/ON

This button operates when the unit's main 0/I **STANDBY/ON** button is set to **ON**. Each time this button is pressed, the unit's status alternates between **ON** and **STANDBY** modes.

2 DIRECT

Directly output the input signal.

3 Hi-Bit 32

Press this button to turn on the **SOUND** mode's **Hi-Bit 32** function. Expands the dynamic range for digital audio signals. Re-quantization of 16 bit to 24 bit audio as 32 bit produces smoother and more detailed playback (page 30).

4 A.S.R

Used when turning the **Auto Sound Retriever** function on/ off.

5 Function buttons

Use to change the input source.

6 SOURCE SELECT ←/→

Switch the unit's input source. Each press of the button will cycle through input sources.

7 REPEAT

Perform repeat play of files on the selected iPod/iPhone, USB storage device/External HDD or Music Server (page 15, 28).

8 SHUFFLE

Perform shuffle play of files on the selected iPod/iPhone, USB storage device/External HDD or Music Server (page 15, 28).

9 ◄<

Press to return to the beginning of the currently playing file.

 Depending on the input function selected, it may not be possible to return to the beginning of the currently playing file

10 ▶/Ⅱ

Press to start playback. During playback, pause/unpause playback.

11 ◄◀

Hold down to fast-rewind the file. Depending on the input or file, you may not be able to fast-rewind.

12 TOP MENU

Display the top menu screen for each input.

13 ↑/↓/←/→

Use these to select items, change settings and move the cursor.

ENTER

Use this to implement the selected item or enter a setting that you have changed.

14 SETUP

Use this to change the settings. This button is also used to reinitialize unit settings as described in the section **Reset** (page 36).

15 CLEAR

Press to clear the selected item. Use this for example if you input the wrong number.

16 A.L.C

Use when turning the Auto Level Control function on/off.

17 DISPLAY

Press to turn the display off when you do not need it. When an action is performed on the unit, the display will automatically light, then turn off again after ten seconds. Press the button once again to cancel the Display OFF mode.

18 Up Sampling

Switch Up Sampling setting (page 30).

19 SOUND

Turns **Auto Sound Retriever**, **Auto Level Control**, **Hi-Bit 32** and **Up Sampling** on and off (page 30).

20 iPod CONTROL

Each press of the button will toggle display of music information between the iPod/iPhone screen and the front panel of the unit.

21 DIMMER

Adjust the brightness of the display (page 14).

22 SORT

Sort the order of tracks, when using Music Server input and the DLNA server supports the sort function.

23 ▶₩

Press during playback to skip ahead to the beginning of the next file.

24 ▶►

Hold down to fast-forward the file. Depending on the input or file, you may not be able to fast-forward.

25 ■

Press to stop playback.

26 NOW PLAYING

When pressed while the track select screen is displayed and during playback, will switch to the playback screen.

27 RETURN

Press to return to the previous screen.

28 +Favorite

When using Internet Radio or Music Server input, register a favorite internet radio station or track on the media server to your Favorites (page 26).

Connecting your equipment

CAUTION

- Be sure to turn off the power and unplug the power cord from the power outlet whenever making or changing connections.
- Connect the power cord after all the connections between devices have been completed.


About the audio connection

Types of cables and terminals	Transferable audio signals
Digital (Coaxial)	Conventional digital audio
Digital (Optical)	
RCA (Analog) (White/Red)	Conventional analog audio

Analog audio output connections

By connecting this unit's analog audio output to the analog audio input of an amplifier, you can use the amplifier to enjoy analog audio produced from this unit.

N-70A

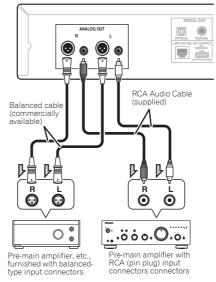


indicates the direction of the signal.

Mote

 The factory default setting for the balance terminal output is 2-HOT/3-COLD. In order to change the setting, please refer to <u>Set the phase (N-70A only)</u> on page 31.

N-50A

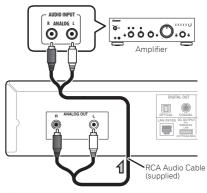


indicates the direction of the signal.

Digital audio connections

Digital audio output connections

By connecting this unit's digital audio output to the digital audio input of an AV receiver or D/A converter, etc, you can use the amplifier to enjoy digital audio produced from this unit.

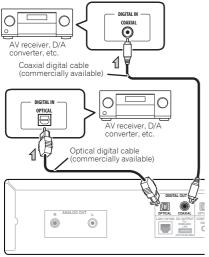


indicates the direction of the signal.

// Note

 Digital signal formats that can be output from this unit include linear PCM signals with sampling rate and quantitative bits up to 192 kHz/24 bits (Depending on the connected device and environment, operation may not be successful).

Digital audio input connections

By connecting a digital audio component's audio output to this unit's digital audio input, this unit can be used as a D/A converter. For details regarding the audio output of signals input to the DIGITAL IN connectors, see the section <u>Using the D/A converter</u> on page 30.

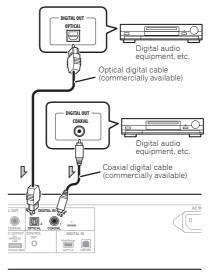

ightharpoonup indicates the direction of the signal.

Mote

 Digital signal formats that can be input to this unit include linear PCM signals with sampling rate and quantitative bits up to 192 kHz/24 bits. (Depending on the connected device and environment, operation may not be successful.)


Connecting USB storage devices

It is possible to listen to two-channel audio using the USB terminal on the front or the rear of this unit

1 Connect your USB device/External HDD to the USB terminal on the front panel of this unit.

This unit does not support a USB hub.

Front panel

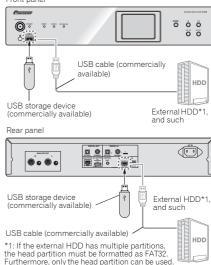

∥ Note

- If you are using an external HDD with a power switch, make sure that the external HDD power is turned on before turning on the power for this unit.
- When connecting or disconnecting USB devices, ensure that the power to this unit is always off.
- We recommend that you connect the external HDD to the back of this unit. When it is connected to the front of this unit, it may take time for the unit to recognize the external HDD if switched to iPod/USB Front Function.


Using a USB cable to connect to a computer

By using a USB cable (sold separately) to connect this unit's **USB DAC** port to the USB port on a computer, this unit can be used as a D/A converter.

For details regarding the output of signals input to the **USB DAC** port, see section Playing music from a computer on page 30.

∥ Note

 When using this connection to input audio files from a computer to this unit, it may be necessary to install a special driver on the computer. For details, see the website of Pioneer.

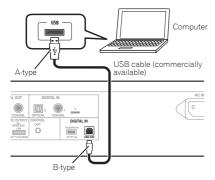

 This unit cannot be used to play audio files from a computer unless Media Player is installed on the connected computer.

Connecting to the network through the LAN interface

By connecting this unit to the network via the LAN interface, you can play back audio files stored on components on the network, including your PC, and listen to Internet radio stations.


Connect the LAN terminal on this unit to the LAN terminal on your router (with or without the built-in DHCP server function) with a straight LAN cable (CAT 5 or higher).

Turn on the DHCP server function of your router. If your router does not have a built-in DHCP server function, you have to set up the network manually. For details, see <u>page 25</u>.

// Note


- In order to connect to the Internet, you must conclude a contract with an Internet Service Provider (ISP).
- To listen to Internet radio stations, you must sign a contract with an ISP beforehand.
- Photo or video files cannot be played back.
- With Windows Media Player 11 or 12, you can even play back copyrighted audio files on this unit.

Connecting using LAN cable

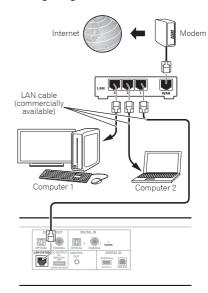

Connecting using wireless LAN

Wireless connection to the network is possible through a wireless LAN connection. Use the separately sold wireless LAN converter (Pioneer Model No. AS-WL300) for connection.

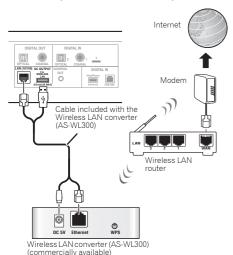

// Note

- · Use only the furnished accessory connecting cable.
- For instructions on setting the wireless LAN converter, refer to the operating instructions for the AS-WL300.

Connecting the other Pioneer devices and controlling centrally


When a Pioneer Amplifier's/CD player's control terminal is connected with this unit, the connected amplifier/CD player can be operated with the Pioneer ControlApp.

Please see the following website for amplifiers/CD players that are compatible with the Pioneer ControlApp. http://pioneer.jp/support/soft/iapp_controlapp/en.html (for iPhone/iPod touch)

http://pioneer.jp/support/soft/aapp_controlapp/en.html (for Android)

You can also centrally control Pioneer products with control input terminals using this unit's remote sensor. Those devices that do not have remote sensors or devices that are located where it cannot receive signals can also be operated remotely (*1).

*1: Using the unit's remote sensor, you can remotely operate the devices connected to this unit with their remote controllers.

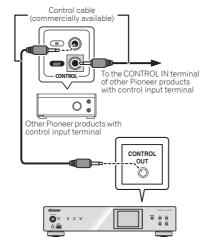

(Important

 When connecting the control terminals, please make sure that the audio cable (analog connection) that is included with the unit is also connected. The connection using the control terminals alone will not allow proper operation of the central control.

∥ Note

- Use a commercially available cable with mono mini-plug (with no resistance) for connection.
- When connected, the remote sensor for the amp and CD player will cease to function, and the remote sensor on this unit will receive the signals for the amplifier/CD player.
 Point the remote control towards this unit to operate.
- When this unit's network standby is set to off, this unit cannot operate the amplifier or CD player. They can be operated when the network standby for this unit is set to on.

Plugging in

 
(Important

 Before making or changing the connections, switch off the power and disconnect the power cord from the AC outlet.

CAUTION

- Do not use any power cord other than the one supplied with this unit.
- Do not use the supplied power cord for any purpose other than that described below.

After you've finished making all connections, plug the unit into an AC outlet.

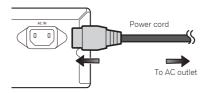

- Plug the supplied power cord into the AC IN socket on the back of the unit.
- Plug the other end into a power outlet.

Getting started

Setting the unit

When you use the unit for the first time, the following screens will be displayed.

Set up the following items to customize the unit.

1 Press O/I STANDBY/ON.

The power indicator flashes slowly. About twenty seconds after turning on the power, the following screen appears. About thirty seconds are required between turning the power on and completion of startup.



When powering up for the first time

When you turn on the power to the unit for the first time, initial settings will be automatically performed, thus startup will take about one minute.

 After the Pioneer logo is displayed, the screen will go dark.
 The start up process is complete once the Pioneer logo is displayed a second time.

Auto power off setting

Power to the unit will turn off automatically if no controls are performed for the set period of time.

. The factory default setting is 15 min.

Setting auto power off

1 Press SETUP.

The Initial Setup menu is shown on the display.

Select "Option Setting".

Select "Power off Setting".

Select "Auto Power Off".

Use ↑/↓ to select time until the power automatically turns off, then press ENTER.

Select from **15 min/30 min/60 min** or **Off** (power will not turn off automatically).

6 Press RETURN and complete settings.

 
General control

Input function

When pressing **SOURCE** button on the unit, the current function will change to different mode. Press **SOURCE** button repeatedly to select desired function. The selected input is displayed on the front panel display.

Headphones (N-70A only)

- When the headphones are connected, the volume will be displayed on the screen.
- The volume cannot be changed when the headphones are unplugged from the unit.
- Insert the headphone terminal while the headphone is not against your ear, check the volume, and then attach the headphones to the ear.
- Be sure your headphone has a 6.3 mm diameter plug and impedance between 16 and 600 ohms. The recommended impedance is 32 ohms.
- . The factory default setting is 0 (MIN).

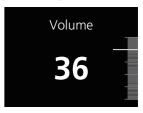

Brightness control for display and each indicator

Press **DIMMER** button to dim the brightness of the display and each indicator.

iPod/iPhone playback

Merely by connecting your iPod/iPhone to this unit, you can enjoy high-quality sound from your iPod/iPhone.

Playback for iPod/iPhone music can be performed from this unit or the iPod/iPhone itself.

Confirming what iPod/iPhone models are supported

The iPod/iPhone playable on this unit are shown below.

iPod/iPhone	Audio	Control
iPod nano 3G/4G/5G/6G/7G	1	1
iPod touch 1G/2G/3G/4G/5G	1	1
iPhone 3GS	1	1
iPhone 4	1	1
iPhone 4s	1	1
iPhone 5	1	1
iPhone 5c	1	1
iPhone 5s	1	✓

// Note

- USB works with iPhone 5s, iPhone 5c, iPhone 5, iPhone 4s, iPhone 4, iPhone 3GS, iPod touch (1st through 5th generation) and iPod nano (3rd through 7th generation).
 However, some of the functions may be restricted for some models.
- This unit has been developed and tested for the software version of iPod/iPhone indicated on the website of Pioneer (http://pioneer.jp/homeav/support/ios/eu/).
- Installing software versions other than indicated on the website of Pioneer to your iPod/iPhone may result in incompatibility with this unit.
- Features such as the equalizer of iPod/iPhone cannot be controlled using this unit, and we recommend switching the equalizer off before connecting.

Select "Settings" from the top menu.

You can confirm your software version by operating your iPod/iPhone. When using iPod touch or iPhone, select "General" after selecting "Settings".

Select "About".


The software version will be displayed.

Connect iPod/iPhone to the USB terminal


Connect your iPod/iPhone to the USB terminal on the unit's front panel. Use the iPod cable supplied with your iPod/iPhone for the connection.

 For the cable connection, also refer to the operating instructions for your iPod/iPhone.

Front panel

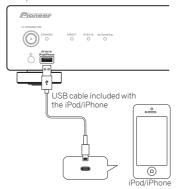

Rear panel

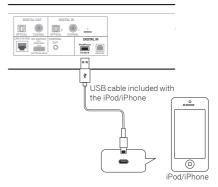

Playing your iPod/iPhone

CAUTION

 When your iPod/iPhone is connected to this unit and you wish to operate the iPod/iPhone directly, be sure to hold the iPod/iPhone steady with the other hand to prevent malfunctions due to faulty contacts.

1 Connect your iPod/iPhone.

To connect your iPod/iPhone, see <u>Connect iPod/iPhone to the USB terminal</u> on page 15.

Press iPod/USB FRONT or iPod/USB REAR to select iPod/ USB as the input source.

iPod/USB Front or **iPod/USB Rear** is shown on the display and starts playback.

∥ Note

 When the iPod/iPhone is connected to this unit, the playback information for the songs are displayed on the iPod/iPhone display. Pressing iPod CONTROL button on the remote will switch the display and display the information on the front panel of the unit.

(Important

- If this unit cannot play your iPod/iPhone, perform the following troubleshooting checks:
- Check whether the iPod/iPhone is supported by this unit (page 15).
- Reconnect the iPod/iPhone to the unit. If this doesn't seem to work, try resetting your iPod/iPhone.
- Check the iPod/iPhone software is supported by this unit.
- If the iPod/iPhone cannot be operated, check the following items:
- Is the iPod/iPhone connected correctly? Reconnect the iPod/iPhone to the unit.
- Is the iPod/iPhone experiencing a hangup? Try resetting the iPod/iPhone, and reconnect it to the unit.

🙀 Tip

- iPod/iPhone recharging occurs whenever an iPod/iPhone is connected to this unit. (This function is only supported when the power is initially turned on or during Network Standby.)
- When input is switched from iPod/USB to another function, iPod/iPhone playback is temporarily stopped.

USB/External HDD playback

Playing files stored on USB storage devices

This unit may not recognize a USB storage device/External HDD, play files or supply power to a USB storage device/ External HDD. For details, see Connecting USB storage devices on page 10.

Pioneer does not guarantee that any file recorded on a USB storage device/External HDD will play or that power will be supplied to a USB storage device/External HDD. Also note that Pioneer will accept no responsibility whatsoever for loss of files on USB storage devices/External HDD caused by connection to this unit.

Press iPod/USB FRONT or iPod/USB REAR to select iPod/ USB as the input source.

iPod/USB Front or iPod/USB Rear is shown on the display.

Connect the USB storage device.

The folders/files stored on the connected USB storage device appear on the display automatically.

- Use **↑**/**↓** to select the file, then press ENTER. Playback starts.
 - . To return to the previous screen, press RETURN.
 - When changing to a different input source, stop the USB memory playback first, before changing.
 - . Turn the power off before removing the USB storage device/External HDD.

// Note

. The following screen appears on the display when you play back audio files.




- . Depending on file type, the play bar and the remaining playback time may not be displayed.
- . Display of album names, artist names and artwork supports the following formats.

Shown on display	Compatible file format
	MP3, WMA, Apple Lossless, FLAC, AIFF (32 kHz to 96 kHz), DSD
Artwork	MP3, DSD (dsf)

- Embedded images are supported for JPEG only.
- . Any characters in file or track names that this unit is unable to display will be replaced with a "#".

Display artist name, album name, and artwork using WAV format

When the music file is saved in a folder structure and folder name as shown below, the artist name, album name, and artwork can be shown on the display using WAV format. Artwork in .jpg file format can be shown on the display if saved in the bottom most folder. If a large .ipg format file is saved, it may take time until the artwork is shown.

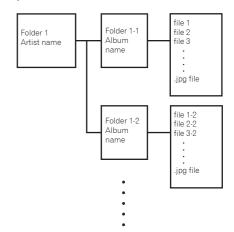

Network quick setup guide


By connecting this unit to the network via the LAN interface, you can play back audio files stored on components on the network, including your computer, and listen to Internet radio stations.

Connect to the network

- This section will explain about performing basic network settings.
- . The factory default setting is DHCP On.

1. Connect a LAN cable

Connect the unit and the router using a LAN cable.

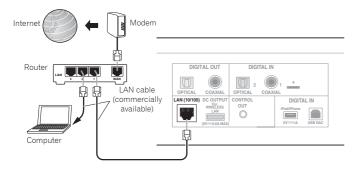

2. Connection settings

Automatic setting

The automatic setting is normally used.

If you are performing network settings for the first time, this is the recommended setting to use. Connect the LAN cable and you are finished.

Proceed to Step 3. Check connection.

Manual setting

Use this setting when using a fixed IP address.

Use this setting when your router does not have a DHCP server function, or when you are managing your network device separately.

Turn on the power to this unit and manually set the IP address (page 25).

3. Check connection

1 Press the & STANDBY/ON button.

The power to the unit will be turned on. Confirm that the cabled LAN operation mark ${\bf J}$ is displayed.



7 Press the NET SERVICE button, and select Internet Radio.

Confirm that the categories are displayed.



 If "Server Error" is displayed, there is a possibility that the router is not connected to the internet. Check whether other connected devices, such as a computer, are able to use the internet. If not, connect the router to the internet. Refer to the router's user manual for details on how to do so 6

 
Try using network functions

Enjoy listening to music using the following functions when preparations are completed.

- 1 Listen to the Internet radio. → (page 20)
- **2** Listen to music using AirPlay. → (page 20)
 - Listen to music on an iPhone, iPod touch or iPad using AirPlay.
 - Listen to music on a computer using AirPlay.
- 3 Listen to music on a computer or NAS (network attached storage). → (page 22)
 - Shared settings with Windows Media Player.
 - Shared settings with NAS.
 - Listen to music from files saved to a computer or NAS.
- 4 Use the Pioneer ControlApp to operate the unit. → (page 24)

1 Listen to the Internet radio.

1 Press the NET SERVICE button.

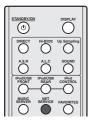

Confirm that categories are displayed.



// Note

If "Server Error" is displayed, there is a possibility that the
router is not connected to the internet. Check whether
other connected devices, such as a computer, are able to
use the internet. If not, connect the router to the internet.
Refer to the router's user manual for details on how to do
so

3 Use **↑**/**↓** and the ENTER button to select a station.




Playback will begin.



2 Listen to music using AirPlay.

Using a computer

1 Connect a computer with iTunes 10.2.2 or higher installed to the same router as this unit.

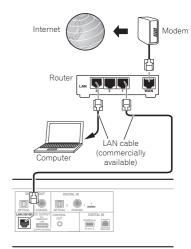

Press the & STANDBY/ON button.

The power to the unit will be turned on.



3 Start iTunes, click the AirPlay mark, and then select this unit.



// Note

- The displayed name will change depending on the product being used.
- N-70A or N-50A will be displayed.


The above image is an example using iTunes Version 11. Exact controls will differ depending on the version of iTunes that you use.

▲ Select a track in iTunes and play it.

Playback will begin.

Using an iPhone, iPod touch or iPad

1 Connect an iPhone, iPod touch or iPad (iOS version 4.3.3 or higher) to the same router as this unit.

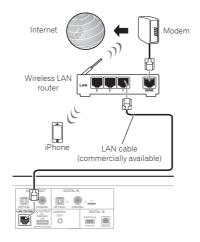

? Press the & STANDBY/ON button.

The power to the unit will be turned on.



3 Set the iPhone, iPod touch or iPad to music playback mode.

Confirm that the Wi-Fi operation mark 🗧 is displayed.



// Note

 Turn the iPhone, iPod touch or iPad Wi-Fi on, and connect to the wireless LAN router.

Refer to the user manual of the mobile device you are using for details on how to connect it.

4 Swipe (slide) your finger upward from the bottom of the screen.



Tap (touch) AirPlay.



Once the name of this unit is displayed, select it.



// Note

• The displayed name will change depending on the product being used.

N-70A or N-50A will be displayed.

7 Select a track and play it.

Swipe (slide) and hide display of the Control Center. Playback will begin through this unit.




3 Listen to music on a computer or NAS (network attached storage).

Press the O STANDBY/ON button.
The power to the unit will be turned on.



Connect a NAS that supports DLNA or a computer with Windows Media Player 12 installed to the same router as this unit.

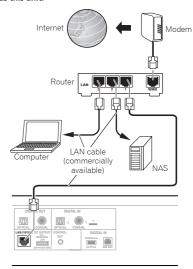

Using a NAS that supports DLNA

1 Change NAS settings to allow access to NAS.
Refer to the user manual of your NAS for more details.

Using a computer with Windows Media Player 12 installed

- Perform share settings for media stored on the computer.
- · Control panel



· Network and internet





· Select options relating to home group and sharing





· Select media streaming options



From the product name's dropdown list, select "Permitted" and then press "OK".

 


∅ Note

- The above images are examples using Windows 7. Exact controls will differ depending on the OS you are using.
- ? Press the MUSIC SERVER button.



3 Select the computer or NAS for which share setting were performed.

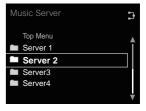

Use ↑/↓ and the ENTER button to select a track.



Playback will begin.



Mote

 Album name/artist name and artwork may not be displayed, depending on file format.

4 Use the Pioneer ControlApp to operate the unit.

1 Install the Pioneer ControlApp.

Using an iPhone/iPod touch

Access the App Store and install the Pioneer ControlApp.

Using an Android Device

Access Google Play and install the Pioneer ControlApp.

Press the & STANDBY/ON button.
The power to the unit will be turned on.



Turn on Wi-Fi for the mobile device with the Pioneer ControlApp installed.

Connection image



Confirm that the Wi-Fi operation mark 🛜 is displayed.



1 Start the Pioneer ControlApp.



// Note

• For details of how to use the Pioneer ControlApp, refer to: http://pioneer.jp/support/soft/iapp_controlapp/en.html (for iPhone/iPod touch)

http://pioneer.jp/support/soft/aapp_controlapp/en.html (for Android)

Perform network settings

Network setting

If a broadband router (with built-in DHCP server function) is connected to this unit, you can simply turn on the DHCP server function without having to set up the network manually. Before you set up the network, consult with your ISP or the network manager for the required settings. It is advised that you also refer to the operation manual supplied with your network component. Any changes made to a router without the DHCP server function must be reflected to unit network settings.

1. Automatic setting

Make sure that the LAN cable connections has completed (page 11).

 
1 Press SETUP.

The Initial Setup screen is shown on the display.

Select Network Setting → Network Configuration.



3 Use ↑/↓ to select DHCP On, then press ENTER. Select Don't Use Proxy Server.

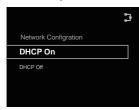

∥ Note

 If your router does not support DHCP, please manually set the network settings. Confirm the 2. Manual setting.

Manual setting

1 Press SETUP.

The Initial Setup screen is shown on the display.

7 Select Network Setting → Network Configuration.



3 Use **↑**/**↓** to select DHCP Off, then press ENTER.

4 Use ↑/↓/←/→ to input the IP address, then press ENTER.



←/→: Moves the adjusting digit.

↑/↓: Increases or decreases values.

IP Address

The IP address to be entered must be defined within the following ranges. If the IP address defined is beyond the following ranges, you cannot play back audio files stored on components on the network or listen to Internet radio stations.

Class A: 10.0.0.1 to 10.255.255.254 / Class B: 172.16.0.1 to 172.31.255.254 / Class C: 192.168.0.1 to 192.168.255.254

Subnet Mask

If an xDSL modem or a terminal adapter is directly connected to this unit, enter the subnet mask listed in your ISP documentation. In most of the cases, enter 255,255,255.0.

Default Gateway

If a gateway (router) is connected to this unit, enter the corresponding IP address.

Primary DNS Server/Secondary DNS Server

If there is only one DNS server address listed in your ISP documentation, enter **Primary DNS Server**. In case there are more than two DNS server addresses, enter **Secondary DNS Server** in the other DNS server address field.

- When you connect this unit to the Internet via a proxy server, proxy server settings are required.
- → Select **Use Proxy Server** and press **ENTER** in step 1.

3. Proxy Server setting

Then Enter **Proxy Host Name** and the port number of your proxy server in the **Proxy Port** field.

Setting the network standby function

Allows power to the unit be turned on using the Pioneer ControlApp even when the unit is in standby mode. It also allows the unit to power on automatically using AirPlay and DLNA. Follow the steps below to turn on network standby. Power consumption increases when set to network standby when compared to regular standby mode.

- . The factory default setting is Off.
- 1 Press SETUP.

The Initial Setup screen is shown on the display.

- Select 'Option Setting' from Initial Setup menu.
- Select 'Power off Setting' from Option Setting menu.
- ▲ Select 'Network Standby' from Power off Setting menu.
- 5 To turn Network Standby on, use ↑/↓ to select ON, then press ENTER.

To turn Network Standby off, use \uparrow/\downarrow to select OFF, then press ENTER.

// Note

- When the LAN cable is not connected, or the [NoConnection]X() is displayed when connected to a LAN cable (not connected to a network), then the Network Standby mode will not activate.
- When the LAN cable is not connected or the unit cannot access to the network with the LAN cable connected while Network Standby mode, the unit will switch to normal standby mode. In such cases, automatically turning the power ON using AirPlay or via ControlApp is not possible.

Friendly Name

- Press SETUP.
- 2 Select Network Setting → Friendly Name.
- 3 Use ↑/↓/←/→ to enter Friendly Name, then press ENTER.

←/→: Moves the adjusting digit.

↑/↓: Changes displayed character.

REPEAT: Switches character types.

CLEAR: Deletes one characters at a time.

Listening to the Internet radio

You can select and listen to your favorite Internet radio station from the list of Internet radio stations created, edited, and managed by the vTuner database service exclusively for use with the Pioneer products.

Connecting to a LAN network

Connect to the network using the LAN interface or WLAN antenna.

For details on the connections, see <u>Connecting to the network</u> through the LAN interface on page 11.

Listening to the Internet radio for the first time

When you listen to the Internet radio first time, follow the instructions below to tune into your desired station.

Press NET SERVICE repeatedly to select Internet Radio as the input source.

Internet Radio is shown on the display.

7 Use ↑/↓ to select the folder and press ENTER.



Your can select stations from bookmarks or additional radio stations when you have added stations to your favorites via **vTuner**.

Tune into a station

- Press NET SERVICE repeatedly to select Internet Radio as the input source.
- Begins playback from the station you last selected.
- **7** Press TOP MENU to display Internet Radio menu screen.
- Use **↑**/**↓** to select the folder and press ENTER.

Your can select stations from bookmarks or additional radio stations when you have added stations to your favorites via **vTuner**.

△ Use **↑**/**↓** to select the station, then press ENTER.

You can also select the available stations from the internet radio menu.

Playing back your favorite songs

Up to 64 favorite tracks on the media server and/or Internet Radio stations can be registered in **Favorites** function. Note that only the audio files stored on components on the network can be registered.

Registering and deleting audio files and Internet radio stations in and from Favorites

- 1 Press NET SERVICE on the remote control to select Internet Radio.
- 2 Select the track or Internet radio station you want to register, press +Favorite on the remote control.

The selected song or Internet Radio station is registered in **Favorites**.

// Note

 To delete a registered song, select Favorites, select the song you want to delete from Favorites, and press CLEAR.
 The selected song is then deleted from Favorites.

Advanced operations for the Internet radio

Registering broadcast stations not on the vTuner list from the special Pioneer site

With this unit, broadcast stations not included on the list of stations distributed by vTuner can be registered and played. Check the access code required for registration on this unit, use this access code to access the special Pioneer Internet radio site and register the desired broadcast stations in your favorites. The address of the special Pioneer Internet radio site is: http://www.radio-pioneer.com

Display Internet Radio screen.

To display the Internet radio list screen, perform steps 1 to 2 at <u>Listening to the Internet radio for the first time on</u> page 26.

Use ↑/↓ to select Help, then press ENTER.

Use **↑**/↓to select Get access code, then press ENTER.

The access code required for registration on the special Pioneer Internet radio site is displayed. Make a memo of this address.

The following can be checked on the Help screen:

- Get access code The access code required for registration on the special Pioneer Internet radio site is displayed.
- Show Your WebID/PW After registering on the special Pioneer Internet radio site, the registered ID and password are displayed.
- Reset Your WebID/PW Resets all the information registered on the special Pioneer Internet radio site.
 When reset, all the registered broadcast stations are also cleared. If you want to listen to the same stations, re-register after resetting.

4 Access the special Pioneer Internet radio site from your computer and perform the registration process.

Access the above site and use the access code in step 3 to perform user registration, following the instructions on the screen.

Register the desired broadcast stations as your favorites, following the instructions on the computer's screen.

Both broadcast stations not on the vTuner list and stations on the vTuner list can be registered. In this case they are registered on the unit as favorite broadcast stations and can be played.

// Note

- Playback may stall when the computer is switched off or any media files stored on it are deleted while playing content.
- If there are problems within the network environment (heavy network traffic, etc.) content may not be displayed or played properly (playback may be interrupted or stalled).
 For best performance, a 100BASE-TX connection between player and computer is recommended.
- This unit only supports stations broadcast using HTTP.
 Some stations may not play back.

About the Spotify audio stream playback function

Spotify is a music streaming distribution service managed and operated by Spotify Ltd. and distributing music over the Internet.

Spotify audio streams can be enjoyed using this unit and your smartphone or other mobile digital device.

Preparations (1) Installing the Spotify application on mobile digital devices and registering a Spotify Premium account

(Important

 The Spotify application must be installed on mobile digital devices and you must have registered a Spotify Premium account (for a charge) in order to use the Spotify audio stream playback function on this unit.

For registration procedures, see the Spotify website.

http://www.spotify.com/

http://www.spotify.com/connect

For information on the countries and regions where Spotify services can be used, see the website below.

http://www.spotify.com/

Spotify functions may be changed without notice. An Internet connection is required on the mobile digital device in order to use the Spotify application. Using the mobile telephone line for the Internet connection tends to lead to high packet communication charges, so we recommend subscribing to a fixed packet rate plan. For details, contact your mobile telephone operator.

Preparations (2) Connecting this unit to the network

- Connect this unit to the network and also to the Internet.
 For instructions on connecting, see this unit's operating instructions.
- Connect the mobile digital device by Wi-Fi to the wireless LAN router of the same network as the one to which this unit is connected. For instructions on connecting, see the operating instructions of the mobile digital device and the wireless LAN router.

In order to use the Spotify audio stream playback function from the Spotify application

To use the Spotify audio stream playback function, select this unit on the Spotify application.

When Spotify audio streaming starts, this unit's input automatically switches to Spotify.

CAUTION

• Even if you are away from home, if you start Spotify audio streaming to play music on your mobile digital device and this unit is selected, the sound will be output from this unit. Depending on the volume level, the output may be loud, so be sure to check the audio output selection carefully before starting audio streaming. In addition, if you accidentally select this unit and play the sound on it, switch the audio output selection to the mobile digital device.

∥ Note

- A separate contract with/payment to an Internet service provider is required to use the Spotify audio stream playback function.
- This unit's name is displayed as the playback device on the Spotify application. Also, this unit's name can be changed at "Friendly Name" in the network settings.

When this unit is selected with the Spotify application, the
account information is registered on this unit as well.
 When disposing of this unit, reset this unit's settings in
order to delete the account information registered on this
unit. For instructions on resetting, see <u>Resetting this unit</u>
on page 36.

Use the unit to listen to Spotify audio stream

Press NET SERVICE repeatedly to select Spotify as the input source.

Spotify is shown on the display.

Playback will begin automatically. If playback does not begin, press ▶.

∅ Note

 In order to use the unit to listen to Spotify audio stream, you must register the account information to the unit. In order to register the account information, use the Spotify Application and select the unit.

This unit can play audio files stored on computers or other components on a Local Area Network (LAN).

Introduction

This unit allows you to listen to audio files on a computer or other component connected to the unit via LAN interface. This chapter describes the setup and playback procedures required to enjoy these features. It is advisory that you also refer to the operation manual supplied with your network component.

// Note

- · Photo or video files cannot be played back.
- With Windows Media Player 11 or Windows Media Player 12, you can even play back copyrighted audio files on this unit.

About playable DLNA network devices

This unit allows you to play music on media servers connected on an identical Local Area Network (LAN) as the unit. This unit allows you to play files stored on the following devices:

 Computers running Microsoft Windows Vista with Windows Media Player 11 installed

- Computers running Microsoft Windows 7 or 8 with Windows Media Player 12 installed
- DLNA-compatible digital media servers (on computers or other components)

Files stored in a computer or DMS (Digital Media Server) as described above can be played via command from an external Digital Media Controller (DMC). Devices controlled by this DMC to play files are called DMRs (Digital Media Renderers). This unit supports this **DMR** function.

When this unit is selected as a DMR and DMS playback is begun, the unit's input automatically switches to **DMR**. During **DMR** input, the currently playing track name, artist name, album name, and album art will appear on the unit's display (some information may not be displayed, depending on the file being played).

Using AirPlay on iPod touch, iPhone, iPad and iTunes

AirPlay works with iPhone, iPad, and iPod touch with iOS 4.3.3 or later, Mac with OS X Mountain Lion or later, and PC with iTunes 10.2.2 or later.

To use AirPlay, select your unit on your iPod touch, iPhone, iPad or in iTunes and start playback. For more information, see the Apple website (http://www.apple.com).

- Pause/resume, next/previous track, and shuffle/repeat from the remote control of the unit. The display will not show the Play Status, Repeat, or Shuffle icons.
- Display of the currently playing track information on the unit's display, including artist, song/album name and album artwork. It may not be displayed other than song name.

🛱 Tip

- A network environment is required to use AirPlay.
- The unit's name that shows up in the AirPlay UI on iPod touch, iPhone, iPad and iTunes can be changed by Friendly Name from Network Setting.

 AirPlay provided on this unit has been developed and tested based on the software versions for the iPod touch, iPhone, iPad and the software versions for iTunes that are indicated on the Pioneer website. AirPlay may not be compatible with iPod touch, iPhone, iPad or iTunes software versions other than those indicated on the Pioneer website.

About the DHCP server function

To play back audio files stored on components on the network, you must turn on the DHCP server function of your router. In case your router does not have the built-in DHCP server function, it is necessary to set up the network manually. Otherwise, you cannot play back audio files stored on components on the network or listen to Internet radio stations. See *Network setting* on page 25 for more on this.

Authorizing this unit

This unit must be authorized to enable playback. The unit is automatically authorized when it is connected to a computer over a network. If not, please authorize this unit manually on the computer. The authorization (or permission) method for access varies depending on the type of server currently being connected. For more information on authorizing this unit, refer to the instruction manual of your server.

Playing audio files stored on computers or other components

Connecting to the LAN network

Be sure to connect computer or other components to the network using the LAN interface before you use this function. For details on the connections, see page 11.

Playback with Music Server

Mportant (

 You cannot access a computer on a network while you are logged onto a domain that is configured in a Windows network environment. Instead of logging onto the domain, log onto the local machine.

- There are cases where the time elapsed may not be correctly displayed.
- 1 Press MUSIC SERVER to select Music Server.

All available servers are shown on the display. "Please wait" will be displayed until an available server is found.

2 Use 1/1 to select the server that the file you want to play is stored on, then press ENTER.

The folders/files stored on the server are shown on the display.

You can perform the following sort functions by pressing SORT, as long as your DLNA compatible digital media server supports the Sort function. The sort function may not work on certain screens.

- If tracks are sorted by title, change to sorting by track number.
- If tracks are sorted by track number, change to sorting by title.
- If tracks are sorted by anything other than title/track, change to sorting by track number.

Use ↑/↓ to select the file you want to play, then press ENTER.

Playback starts.



- When the file you want to play is in the folder, select the folder first.
- If you press **RETURN** during playback, the previous (folders/files) screen will be displayed.
- To add your favorite file to **Favorites** function, press **+Favorite** on the remote control.

 Check your network environment if "Please wait" continues to be displayed.

If your DLNA compatible digital media server supports the Scan function.

Press and hold the ▶▶ button or ◄◄ button to Fast Forward or Rewind.

Using other functions

Using the Sound mode

This function allows you to utilize various sound modes during playback.

- . This function cannot be used when the DIRECT mode is on.
- . Digital audio will not be output when DIRECT mode is off.
- 1 Press SOUND to show the Sound option menu.
- **7** Use **↑**/**↓** to select the setting, then press ENTER.
- 3 Use 1/1 to select On or Off then press ENTER.
 The factory default settings are Off.

// Note

- The remote control buttons can also be used to toggle on/ off.
- A.S.R button: Toggle the Auto Sound Retriever function on/off.
- A.L.C button: Toggle the Auto Level Control function on/off.
- Hi-bit32 button: Toggle the Hi-bit32 function on/off.
- **Up Sampling** button: Toggle the **Up Sampling** function

on/off.	
Settings	What it does
Auto Sound Retriever	With the Auto Sound Retriever function, DSP processing is used to compensate for the loss of audio data upon compression, improving the sound's sense of density and modulation. When On is selected, the Auto Sound Retriever effect is optimized based on the bitrate information of the contents input to the USB/External HDD, Music Server and Internet Radio to achieve high sound quality.
Auto Level Control	In the Auto level control mode, this unit equalizes playback sound levels.
Hi-bit32	Creates a wider dynamic range with digital sources. Smoother, more delicate musical expression can be achieved by requantizing 16 bit to 24 bit audio signals to 32 bit.
Up Sampling	This function raises the sampling frequency for playback, making possible clear, highly transparent audio playback.

For greatest fidelity to the original sound

The **DIRECT** mode allows audio signals to be played via the shortest playback circuit without passing through the DSP, thus reducing noise and producing playback sound with greatest fidelity to the original.

- . The factory default setting is On.
- 1 Press DIRECT to switch the DIRECT mode on or off.

∥ Note

• If **DIRECT** mode is turned **Off** when the **DIGITAL OUT** setting is **On**, digital audio output will also stop.

Using the D/A converter

Digital signals input to the rear-panel **DIGITAL IN 1, DIGITAL IN 2 or DIGITAL IN USB DAC** connectors are converted to analog signals and output from the **ANALOG OUT** connectors.

Playing music from a digital audio component

Outputs digital signals input to the **DIGITAL IN 1 (COAXIAL)** or **DIGITAL IN 2 (OPTICAL)** connectors.

- 1 Make a digital input connection.
 - See Digital audio input connections on page 10.
- Press DIG IN 1 or DIG IN 2 to select Digital In 1 or Digital In 2 as the input source.

You can also perform the same operation by pressing the **SOURCE** on the front panel repeatedly.

When **Digital In 1** is selected, digital input signals from the **COAXIAL** connector are played; when **Digital In 2** is selected, digital input signals from the **OPTICAL** connector are played.

// Note

 Digital signal formats that can be input to this unit include linear PCM signals with sampling rates and quantitative bits up to 192 kHz/24 bits (depending on the connected device and environment, operation may not be successful).

Playing music from a computer

Use this function to play digital audio input to the unit's **DIGITAL IN USB DAC** port.

- 1 Connect the unit to a computer via USB cable.
 - See <u>Using a USB cable to connect to a computer on page 11.</u>
- Press USB DAC IN select USB DAC IN as the input source. You can also perform the same operation by pressing the SOURCE on the front panel repeatedly.
- Begin playback on the computer.

 When using a USB cable to connect this unit to a computer to play back music files, the unit supports the following signals.

Linear PCM

- Quantitative bits: 16 bit, 24 bit, 32 bit
- Sampling rates: 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz, 352.8 kHz (N-70A only), 384 kHz (N-70A only)

DSD

- Sampling rates: 2.8 MHz, 5.6 MHz

- Playback cannot be controlled from this unit during use of this function; use your computer to control playback.
- When disconnecting the USB cable, always stop playback on the computer first.
- Sound may not be produced if your computer does not support USB 2.0 HS.
- This unit does not support use of a USB hub. Always use a USB cable to connect the unit directly to the computer.
- When using DIGITAL IN USB DAC terminal to playback a PCM file with a computer sampling frequency that is larger than 192 kHz, audio cannot be output. Set the sampling frequency to less than 192 kHz. (N-50A only)

() Important

 When using the DIGITAL IN USB DAC port to input audio files from a computer to this unit, it may be necessary to install a special driver on the computer. For details, see the website of Pioneer. Please view the installing instructions as well as computer setting instructions that are included.

Adjust the DAC lock range (N-70A only)

Use this function to make fine adjustments in the pursuit of higher audio quality. Even using clock input with the same jitter, incidental noise can be reduced and overall sound quality increased by narrowing the lock range. However, if you set the lock range too narrow, then an input signal with severe jitter may release the lock and interrupt the audio or generate noise. If that happens, expand the lock range again while listening to the audio until you can hear it correctly. In regard to the audio interruption or generation of noise when the lock range setting is too narrow (aside from normal setting), this is not covered by the unit's guarantee of operation. Increase the lock range setting so that the audio does not cut out. The unit will remember lock range settings for each input.

- . The factory default setting is Range 7.
- Press SETUP.

The **Initial Setup** screen is shown on the display.

- **7** Select Option Setting → Lock Range Adjust.
- 3 Use ↑/↓ to select the value you wish to set, then press ENTER.

You can choose from one of 7 ranges.

∥ Note

- Please note that Range 1 Range 3 are settings intended for expert users, allowing for more detailed adjustment of sound quality but also greatly increasing the frequency with which audio may cut out. In particular, if you are playing a series of tracks with different sampling frequencies or bitrates, the audio may cut out depending on the track.
- Even if Up Sampling has been set and the sampling frequency raised, sound will still be prone to dropouts.
- If signal dropout occurs, try readjusting the lock range to a
 wider value so that the sound appears normal. Narrowing
 the width of the lock range setting (other than in normal
 conditions) is considered outside the range of warranted
 operation as regards signal dropout. In such cases, widen
 the lock range setting until dropouts do not occur.
- If you have selected anything other than Range 7, the L.R.A. Icon will be shown on the display.

Switch digital filter (N-70A only)

You can perform separate settings for input signals $\mbox{\bf PCM}$ and $\mbox{\bf DSD}.$

Press SETUP.

The Initial Setup screen is shown on the display.

- Select Option Setting → Digital Filter.
- Select either DSD or PCM.

Use ↑/↓ to select a setting, then press ENTER. After selecting DSD

High frequency attenuation outside of the audible range will be reduced, in order of settings **Mode 1** → **Mode 2** → **Mode 3**.

The factory default setting is Mode 1.

After selecting PCM

SHARP: A harder sound, with a skeletal feeling **SLOW**: A soft and gentle sound

SHORT: A sound that rises quickly and pushes forward

• The factory default setting is **SLOW**.

Set the phase (N-70A only)

Switch the phase for the balance output terminal.

The factory default setting is 2-HOT/3-COLD.

ANALOG OUT R L DEFAULT SELECTED (SND) (

1 Press SETUP.

The Initial Setup screen is shown on the display.

2 Select Option Setting → BALANCE OUT.

3 Use ↑/↓ to select either 2-HOT/3-COLD or 2-COLD/3-HOT, then press ENTER.

// Note

 When 2-COLD/3-HOT is selected when switching the phase, the RCA output phase will reverse by 180°. When connecting with an RCA connection, choose 2-HOT/3-COLD.

Toggle between output/settings output for digital audio

Toggle between output and settings for digital audio.

- . The factory default setting is On.
- 1 Press SETUP.

The Initial Setup screen is shown on the display.

- Select Option Setting → DIGITAL OUT.
- **3** Use **↑**/**↓** to select either On or Off, then press ENTER.

Note

- Digital output, allowing for output of high quality digital audio, can only be used when **DIRECT** mode is turned On.
- When **DIRECT** mode is turned Off, turning this setting On will also automatically turn **DIRECT** mode On.
- During analog audio output, switching off the digital output will suppress the effect that the digital noise has to the analog circuit in terms of audio quality, resulting in a higher quality audio playback.
- When the DIGITAL OUT setting is turned On, the DIGITAL OUT icon is shown on the display.

Language setting

Select the language used on the display.

- The factory default setting is **English**.
- 1 Press SETUP.

The Initial Setup screen is displayed on the display.

- Select 'Option Setting' from Initial Setup menu.
- 3 Select 'Language'.
- Use **†**/**↓** to select the language to be displayed, then press ENTER.

Additional information

Troubleshooting

Incorrect operations are often mistaken for trouble and malfunctions. If you think that there is something wrong with this component, check the points below. Sometimes the trouble may lie in another component. Investigate the other components and electrical appliances being used. If the trouble cannot be rectified even after exercising the checks listed below, ask your nearest Pioneer authorized service center or your dealer to carry out repair work.

 If the unit does not operate normally due to external effects such as static electricity disconnect the power plug from the outlet and insert again to return to normal operating conditions.

General

- When a button is pressed, the unit does not respond.
- → Set the unit to the power standby mode and then turn it back on.
- → If the unit still malfunctions, reset it (page 36).
- * Settings you have made have been cleared.
- → Was the power cord unplugged forcibly while this unit's power was on? Be sure to press Ø/I STANDBY/ON and wait for the POWER indicator on the front panel display to turn off before unplugging the power cord.
- This unit cannot be operated with the remote control.
- → Are you operating from far away? Operate from within a distance of Operate within 7 m, 30° of the remote sensor on the front panel (page 5).
- → Is the remote control sensor exposed to direct sunlight or strong artificial light from a fluorescent bulb, etc.? The remote control signals may not be received properly if the remote control sensor is exposed to direct sunlight or strong artificial light from a fluorescent bulb, etc.
- → Are the batteries dead? Replace the batteries (page 5).
- → Is the power to the unit turned off? Turn the power to the unit on.
- The unit suddenly switches off.
- → When the Auto Power Off function is working, the power will automatically turn off. Check the setting for the Auto Power Off function (page 14).
- * Audio cuts out. (N-70A only)
- → The lock range under the Lock Range setting is too narrow. In regard to the audio interruption when the lock range setting is too narrow (aside from normal setting), this is not covered by

the unit's guarantee of operation. Expand the lock range until the audio does not cut out any more.

No digital audio output.

- → The DIGITAL OUT setting is Off (The digital output status icon is not shown). Turn the DIGITAL OUT setting On, and confirm that the digital output status icon is displayed.
- → A DSD file is being played back. Digital output cannot be used with DSD files.

When a USB storage device/External HDD is connected

- USB storage device/External HDD is not recognized.
- → Is the USB storage device/External HDD properly connected? Connect the device securely (all the way in).
- → Is the USB storage device/External HDD connected via a USB hub? This unit does not support USB hubs. Connect the USB storage device/External HDD directly.
- → This is not a problem with this unit. Turn the power off then back on. Some USB storage devices/External HDDs may not be recognized properly. This unit only supports USB mass storage class devices. Only the FAT16 and FAT32 file systems are supported. Other file systems (ex. FAT, NTFS, etc.) are not supported. This device does not support the use of external hard disc drives.
- → The USB storage devices/External HDDs is split into multiple partitions. Confirm whether the head partition format is FAT12, FAT16, or FAT32. If the head partition is NTFS, HFS, or HFS+, it cannot be playbacked by this unit.
- Much time is required to recognize the USB storage device/ External HDD.
- → What is the USB storage devices/External HDDs capacity? Some time may be required to load the data when large capacity USB storage devices/External HDDs are connected (this could take several minutes).
- Audio playback is undesirably stopped or disturbed.
- → You may be using a USB 1.0 compatible device. We recommend you use a USB 2.0 compatible device.
- File cannot be played.
- \rightarrow Is the file copyright-protected (by DRM)? Copyright-protected files cannot be played.
- → This is not a problem with this unit. Files stored on a computer cannot be played. It may not be possible to play some files.

When connecting the USB storage device/External HDD, this unit switches off.

→ Is Timer indicator flashing? The USB storage device does not work or power consumption is too large. Disconnect the USB storage device/External HDD and turn this unit on.

* The album or artist name is not displayed.

→ Display of album names and artist names supports the following formats.

MP3, WMA, Apple Lossless, FLAC, AIFF(*), DSD.
*In the case of AIFF, display of files with a sampling frequency of 176 kHz or 192 kHz is not supported.

Album art is not displayed.

→ Display of artwork is supported for MP3 and DSD (DSF only). Embedded images are supported for JPEG only.

Cannot perform gapless playback.

→ Confirm that the conditions for gapless playback have been met (page 39).

When an iPod/iPhone is connected

- Can't operate the iPod/iPhone.
- → Make sure the iPod/iPhone is connected correctly (refer to Connect iPod/iPhone to the USB terminal on page 15). Also, try disconnecting the iPod/iPhone then reconnecting it.
- → Confirm that the connected iPod/iPhone is supported by this unit.
- → If the iPod/iPhone is experiencing a hangup, try resetting the iPod/iPhone, and reconnect it to the unit.

Network

Cannot access to the network.

- → The LAN cable is not firmly connected. Firmly connect the LAN cable (page 11).
- → Check that no restrictions have been placed on your router's MAC address.

Cannot access to the component or computer connected via network.

- → Internet security software is currently installed in the connected component. There are cases where a component with Internet security software installed cannot be accessed.
- → The audio component on the network which has been switched off is switched on. Switch on the audio component on the network before switching on this unit.
- → The component connected to the network is not properly set. If the client is automatically authorized, you need to enter the

- corresponding information again. Check whether the connection status is set to "Do not authorize".
- → There are no playable audio files on the component connected to the network. Check the audio files stored on the component connected to the network

Wireless Accessory Configuration fails.

- → If the iOS device is not connected via Wi-Fi, connect the iOS device via Wi-Fi
- → If the iOS device and router are connected via 5 GHz, change the connection between the iOS device and router to 2.4 GHz, or use a different setting method.

Playback does not start.

→ The component is currently disconnected from this unit or the power supply. Check whether the component is properly connected to this unit or the power supply.

* The computer or Internet Radio is not properly operated.

→ The corresponding IP address is not properly set. Switch on the built-in DHCP server function of your router, or set up the network manually according to your network environment (page 25).

* The IP address is being automatically configured.

→ The automatic configuration process takes time. Please wait.

The audio files stored on components on the network, such as a computer, cannot be played back.

- → Windows Media Player 11 or Windows Media Player 12 is not currently installed on your computer. Install Windows Media Player 11 or Windows Media Player 12 on your computer (page 28).
- → Audio files were not recorded in a format playable on this unit. Check whether the audio files were recorded in a format supported by this unit (page 38).
- → Are you trying to playback a MPEG-4 AAC or FLAC file using Windows Media Player 11? It is not possible to playback a MPEG-4 AAC or FLAC file using Windows Media Player 11. Please use a different server.
- → Are you trying to playback a FLAC file using Windows Media Player 12? It is not possible to playback a FLAC file using Windows Media Player 12. Please use a different server.
- → The component connected to the network is not properly operated. Check whether the component is affected by special circumstances or is in the sleep mode. Try rebooting the component if necessary.
- → The component connected to the network does not permit file sharing. Try changing the settings for the component connected to the network.

- → The folder stored on the component connected to the network has been deleted or damaged. Check the folder stored on the component connected to the network.
- → Network connections could be restricted due to the computer's network settings, security settings, etc. Check the computer's network settings, security settings, etc.

Cannot access Windows Media Player 11 or Windows Media Player 12.

→ In case of Windows Media Player 11: You are currently logged onto the domain through your computer with Windows XP or Windows Vista installed. In case of Windows Media Player 12: You are currently logged onto the domain through your computer with Windows 7 or 8 installed. Instead of logging onto the domain. log onto the local machine.

Audio playback is undesirably stopped or disturbed.

- → The audio file currently being played back was not recorded in a format playable on this unit. Check whether the audio file was recorded in a format supported by this unit. Check whether the folder has been damaged or corrupted. Even audio files listed as playable on this unit may sometimes not be played back or displayed (page 38).
- → The LAN cable is currently disconnected. Connect the LAN cable properly (page 11).
- → There is heavy traffic on the network with the Internet being accessed on the same network. Use 100BASE-TX to access the components on the network
- → When in the DMR mode, depending on the external controller being used, playback may be interrupted when a volume operation is performed from the controller. In this case, adjust the volume from the unit or remote control.
- → There is a connection routed through a wireless LAN on the same network. There may be a shortage of bandwidth on the 2.4 GHz band used by the wireless LAN. Make wired LAN connections not routed through a wireless LAN. Install away from any devices emitting electromagnetic waves on the 2.4 GHz band (microwave ovens, game consoles, etc.). If this does not solve the problem, stop using other devices that emit electromagnetic waves.

Cannot listen to Internet Radio stations.

- → The firewall settings for components on the network are currently in operation. Check the firewall settings for components on the network.
- → You are currently disconnected from the Internet. Check the connection settings for components on the network, and consult with your network service provider if necessary (page 11).

- → The broadcasts from an Internet Radio station are stopped or interrupted. Some Internet radio stations on the list of Internet Radio stations for this unit (page 27) may occasionally not be available for listening.
- → The unit only supports broadcast stations that use HTTP. It may therefore be unable to playback certain broadcast stations.

Cannot pause at Music Server/DMR.

→ For some DLNA server software/NAS, or file formats being played, you many not be able to pause. Please contact the DLNA server software manufacturer or NAS manufacturer that you are using.

Music Server (DLNA) album names and artist names are not displayed.

→ Metadata such as album names and artist names have to be approved by the server and distributed to the unit, which depends on the NAS you are using and the specs of DLNA server software. Supported files differ depending on NAS and DLNA server software. For more details, please contact the NAS manufacturer or DLNA server software manufacturer.

Music Server (DLNA) artwork is either displayed or not displayed.

→ In the case of the Music Server, this depends upon the specs of DLNA server software.
Supported files differ depending on DLNA server software. For

more details, please contact the DLNA server software manufacturer.

This unit cannot be selected from the Spotify application.

- → An Internet connection is required for both the mobile digital device and this unit.
- → Connect the mobile digital device by Wi-Fi to the wireless LAN router of the same network as the one to which this unit is connected.
- → A Spotify Premium account (for a charge) must be registered on the Spotify application.
- → When this unit is in standby, it cannot be selected from the Spotify application.

The sound of the Spotify audio stream is not produced.

- ightharpoonup Check whether this unit is selected on the Spotify application.
- → Check that contents are playing on the Spotify application.
- $\ensuremath{\rightarrow}$ If the above does not solve the problem, turn this unit's power off then back on.

This units volume does not increase when the volume slider in the Spotify application is raised.

→ There is an upper limit to the volume to prevent the volume from being too high accidentally. To raise the volume higher in this case, do so by operating the remote control. When using an application such as Pioneer ControlApp, the volume can also be increased from the application.

Playback continues on this unit when the Spotify application is quit.

→ The Spotify audio stream continues from this unit, even when the Spotify application is quit. To operate again, relaunch the Spotify application.

Cannot perform gapless playback.

→ Confirm that the conditions for gapless playback have been met (page 39).

Wireless LAN

Network cannot be accessed via wireless LAN.

- → Wireless LAN converter's power is not on. (Wireless LAN converter's Power, WPS and Wireless indicators are not all lit.) Check that the USB cable connecting the wireless LAN converter to the player's DC OUTPUT for WIRELESS LAN terminal is properly connected (page 12).
- → W-LAN Error is displayed on the unit's display window. There is a problem with the wireless LAN converter's power supply. Turn the unit's power off, then disconnect the USB cable, reconnect the USB cable and turn the unit's power back on. If W-LAN Error is still displayed after repeating the above procedure several times, there is a problem with the unit or the USB cable. Unplug the unit from the wall and call a Pioneer authorized independent service company.
- → The LAN cable is not firmly connected. Firmly connect the LAN cable (page 12).
- → Wireless LAN converter and base unit (wireless LAN router, etc.) are too far apart or there is an obstacle between them. Improve the wireless LAN environment by moving the wireless LAN converter and base unit closer together, etc.
- → There is a microwave oven or other device generating electromagnetic waves near the wireless LAN environment. Use the system in a place away from microwave ovens or others device generating electromagnetic waves. Avoid using devices generating electromagnetic waves as much as possible when using the system with the wireless LAN.
- → Multiple wireless LAN converters are connected to the wireless LAN router. When connecting multiple wireless LAN converters, their IP addresses must be changed.
- → Wireless LAN connections cannot be established between the wireless LAN converter and base unit (wireless LAN router, etc.). The wireless LAN converter must be set in order to establish wireless LAN connections. See <u>Connecting using</u> wireless LAN on page 12.

Network cannot be accessed via wireless LAN.

- → The IP address settings of the player and wireless LAN converter do not match the settings of the wireless LAN router, etc. Check the IP address settings of the player and wireless LAN converter (including the DHCP setting). If the player's DHCP setting is on, turn the player's power off, then turn the power back on. Check that the IP address of the player and wireless LAN converter matche the settings of the wireless LAN router, etc. If the player's DHCP setting is off, set an IP address matching the network of the base unit (wireless LAN router, etc.), For example, if the wireless LAN router's IP address is "192.168.1.1", set the player's IP address to "192.168.1,XXX" (*1), the subnet mask to "255.255.255.0", the gateway and DNS to "192,168,1,1", Next, set the wireless LAN converter's IP address to "192.168.1.249" (*2). (*1) Set the "XXX" in "192.168.1.XXX" to a number between 2 and 248 that is not assigned to other devices. (*2) Set the "249" in "192.168.1,249" to a number between 2 and 249 that is not assigned to other devices.
- → Try making the wireless LAN converter's advanced settings. The wireless LAN converter can be connected to a computer to make the advanced wireless LAN settings. For details, see the CD-ROM included for the wireless LAN converter. Check the settings of the wireless LAN router, etc., then change the settings of the wireless LAN converter. Note, however, that making the advanced wireless LAN settings will not necessarily improve the wireless LAN environment. Be careful
- → The access point is set to conceal the SSID. In this case, the SSID may not be displayed on the access point list screen. If not, set the SSID, etc., by making the wireless LAN converter settings on the receiver manually.
- → The access point's security settings use WEP 152-bit length code key or shared key authentication. The player does not support WEP 152-bit length code key or shared key authentication
- → Network connections cannot be established even when the above measures are taken. Reset the wireless LAN converter. After this, redo the wireless LAN converter's settings. About resetting
- Check that the wireless LAN converter's power is on.
 Press the wireless LAN converter's reset button for at least three seconds.
- 3. Release the reset button.

when changing the settings.

When the wireless LAN converter is restarted, the resetting procedure is completed.

USB DAC

No sound output from the USB DAC In input.

- → Is your computer currently set to select a different device? Check the settings on your computer.
- → Is your computer set to mute? Check the settings on your computer.
- → Is it connected properly? Check the connection.
- → The computer does not detect the unit. If you switch to the unit's USB DAC In input after connecting to your computer, your computer's sound settings may be set to something other than this unit. In this case, reselect the unit.
- → File format, OS or software are not supported. Check supported OS, software and file sampling frequencies.
- → The special driver is not installed on your computer. You must have the special driver installed on your computer. Please visit the Pioneer home page for more details. http://www.pioneer.co.uk, http://www.pioneer.eu

The sampling frequency from the USB DAC In input is always exactly the same.

→ Depending on the settings on your computer, even files with differing sampling frequencies may be output after being converted to the same sampling frequency. Check the settings on your computer.

Computer sounds other than music can be heard through the USB DAC In input.

- → Depending on the settings on your computer, sounds such as your computer's boot up noise and error sounds by also be played through the unit. Check the settings on your computer.
- No audio form computer software is played back for any input other than the USB DAC In input.
- → Your computer will only recognize the unit when you are using the USB DAC In input. Switch to the USB DAC In input and then reselect the unit under your computer's sound settings.
- When using the USB DAC In input, cannot play back high quality sound files (files exceeding 48 kHz/24 bit, or DSD files).
- → The special driver is not installed on your computer. You must have the special driver installed on your computer. Please visit the Pioneer home page for more details. http://www.pioneer.co.uk, http://www.pioneer.eu
- When using the USB DAC In input, there is no audio output when performing playback on the computer.
- → Is the volume setting for your OS or application low? Increase the volume setting.

- → If the audio output on your OS set to mute? Check the settings on your computer and turn off the mute setting.
- → Are you running multiple applications at the same time?
- → Close the applications that you are not using.
- → The OS or application audio output destination is not set up correctly. Select "Pioneer N-70A N-50A USB Audio" for Sound Device

Firmware Update

Use this procedure to update the unit's software. You can update the software via a USB storage device.

Updating via a USB storage device is performed by downloading the update file from a computer, reading this file onto a USB storage device then inserting the USB storage device into the USB port on the unit's front panel.

If an update file is provided on the Pioneer website, download it onto your computer. When downloading an update file from the Pioneer website onto your computer, the file will be in ZIP format. Unzip the ZIP file before saving it on the USB storage device. If there are any old downloaded files or downloaded files for other models on the USB storage device, delete them.

 
Important

- Connect the USB storage device to USB terminal on front panel of this unit.
- DO NOT unplug the power cord during updating.
- When updating via a USB storage device, do not disconnect the USB storage device.

Press SETUP.

The Initial Setup screen is displayed on the display.

2 Select Option Setting → Firmware Update → Start, then press ENTER.

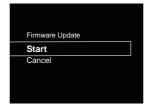

To update, select OK.

The updating screen appears and updating starts. Once the update is completed, power to the unit will automatically turn off.

Firmware Update messages

Status messages Description

File Not Found

No update file was found on the USB storage device. Store the file in the USB storage device's root directory.

Firmware Update using Web browser

You can update this unit's firmware via Web browser. Download the latest firmware at Pioneer website.

- 1 Be sure this unit and your computer are connected to the same wired or wireless network.
- Launch Web browser on your computer.
- Display the Network Setup menu. For Safari

Press Bookmark icon (). Click Bonjour list (a), and then select this unit's name ("Friendly Name") (b) in Bookmark.

If Bonjour list is not displayed, access the IP address "http://(the unit's IP address)" from Safari.

∥ Note

 The displayed name will change depending on the product being used.

N-70A or N-50A will be displayed.




Other than Safari

Enter "http://(the unit's IP address)" into your web browser's address bar.

// Note

- . Confirm the unit's IP address as follows:
- Press NET SERVICE → SETUP.
- 2. Select System Info.
- 3. Confirm the IP field.

Click Network Setup → Firmware Update.

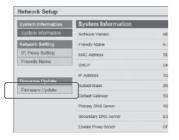

Press Start.

The firmware update prepare screen is displayed. If the screen does not switch automatically, click **Click here**.



6 Browse the latest firmware on your computer (a) and then press Upload (b).

The confirmation screen is displayed. If you continue the firmware update, press **Yes**. Once the firmware update process starts, you can't stop it. Wait until the file is uploaded (about one minute may be required depending on your LAN connection environment).



7 The firmware upload status screen is displayed. Press Ok.

"The upload process finished successfully." will be shown when the update is completed.

Unplug the the power cord from the AC outlet after the update is completed.



// Note

• This setting for the network has been confirmed for Mac OS X 10.7 and Safari 5.1.

Resetting this unit

Use this procedure to reset all unit settings to the factory default.

() Important

• Disconnect all components connected to this unit before the operation.

1 Press SETUP.

The Initial Setup screen is displayed on the display.

Use **↑**/**↓** to select Factory Reset.

Select Start.

"Reset?" screen appears. Press **ENTER** to reset the system.

All the settings will be reset to the factory default next time the unit is turned on.

Cautions on use

When moving this unit

When moving this unit, press & STANDBY/ON on the unit or the remote control, wait for the power indicator on the front panel display to turn off, then unplug the power cord. Then disconnect everything else connected to the unit. Damage may occur if the unit is transported or moved with anything still connected to it.

Place of installation

Choose a stable place near the TV or stereo system being used with this unit. Do not place this unit on top of a TV or color monitor. Also install it away from cassette decks and other devices easily affected by magnetic forces.

Avoid the following locations:

- · Places exposed to direct sunlight
- · Humid or poorly ventilated places
- Extremely hot places
- · Places exposed to vibrations
- · Places in which there is much dust or cigarette smoke
- Places exposed to soot, steam or heat (kitchens, etc.)

Do not place objects on this unit.

Do not place any objects on top of this unit.

Do not expose to heat.

Do not place this unit on top of an amplifier or other component that generates heat. When rack mounting it, to avoid the heat given off by the amplifier or other audio component, place it on a shelf below the amplifier.

Cleaning the product

- Unplug the power cord from the power outlet when cleaning this unit.
- Clean this unit using a soft cloth. For tough dirt, apply some neutral detergent diluted in 5 to 6 parts water to a soft cloth, wring out thoroughly, wipe off the dirt, then wipe again with a soft, dry cloth.
- Alcohol, thinner, benzene, insecticides, etc., could cause the print or paint to peel off. Also, leaving rubber or vinyl products in contact with this unit for long periods of time could mar the cabinet.
- When using chemical-impregnated wipes, etc., read the cautions included with the wipes carefully.

About copyrights

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

About network playback

The network playback function such as Internet Radio or Music Server of this unit uses the following technologies:

Windows Media Player

See Windows Media Player 11/Windows Media Player 12 on page 28 for more on this.

DLNA



DLNA CERTIFIED™ Audio Plaver

The Digital Living Network Alliance (DLNA) is a cross-industry organization of consumer electronics, computing industry and mobile device companies. Digital Living provides consumers with easy sharing of digital media through a wired or wireless network in the home.

The DLNA certification logo makes it easy to find products that comply with the DLNA Interoperability Guidelines. This unit complies with DLNA Interoperability Guidelines v1.5.

When a computer running DLNA server software or other DLNA compatible device is connected to this player, some setting changes of software or other devices may be required. Please refer to the operating instructions for the software or device for more information.

 $DLNA^{\text{TM}}$, the DLNA Logo and DLNA CERTIFIED are trademarks, service marks, or certification marks of the Digital Living Network Alliance.

Content playable over a network

- Even when encoded in a compatible format, some files may not play correctly.
- · Movie or Photo files cannot be played back.
- There are cases where you cannot listen to an Internet radio station even if the station can be selected from a list of radio stations
- Some functions may not be supported depending on the server type or version used.
- Supported file formats vary by server. As such, files not supported by your server are not displayed on this unit. For more information check with the manufacturer of your server.

Disclaimer for Third Party Content

Access to content provided by third parties requires a high speed internet connection and may also require account registration and a paid subscription.

Third party content services may be changed, suspended, interrupted, or discontinued at any time without notice, and Pioneer disclaims any liability in connection with such occurrences.

Pioneer does not represent or warrant that content services will continue to be provided or available for a particular period of time, and any such warranty, express or implied, is disclaimed.

About playback behavior over a network

- Playback may stall when the computer is switched off or any media files stored on it are deleted while playing content.
- If there are problems within the network environment (heavy network traffic, etc.) content may not be displayed or played properly (playback may be interrupted or stalled).
 For best performance, a 100BASE-TX connection between player and computer is recommended.
- If several clients are playing simultaneously, as the case may be, playback is interrupted or stalled.
- Depending on the security software installed on a connected computer and the setting of such software, network connection may be blocked.

Pioneer is not responsible for any malfunction of the player and/or the Music Server features due to communication error/malfunctions associated with your network connection and/or your computer, or other connected equipment. Please contact your computer manufacturer or Internet service provider.

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc.

Microsoft[®], Windows[®]8, Windows[®]7, Windows Vista[®], Windows[®]XP, Windows[®]2000, Windows[®]Millennium Edition, Windows[®]98, and WindowsNT[®] are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Authorizing this unit

In order to be able to play with Music Server, this unit must be authorized. This happens automatically when the unit makes a connection over the network to the computer. If not, please authorize this unit manually on the computer.

The authorization (or permission) method for access varies depending on the type of server currently being connected. For more information on authorizing this unit, refer to the instruction manual of your server.

Apple Lossless Audio Codec

Copyright © 2011 Apple Inc. All rights reserved. Licensed under the Apache License. Version 2.0. You may obtain a copy of the License at http://www.apache.org/ licenses/LICENSE-2.0

FLAC

FLAC Decoder

Copyright © 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org
 Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE

About playable file formats

The unit supports the following file formats.

- In some cases, the unit may be unable to playback even a supported file format.
- If you playback a file format that is not supported by the unit, the audio may cut out or generate noise. If this occurs, confirm that the file format is supported by the unit.
- Supported file formats differ depending on the connected device (server), File formats that are not supported by the connected device will not be displayed. Please contact the manufacturer of the device (server) for more details.
- Certain servers may be able to convert (transcode) file formats not supported by the unit and output them. Please see the server's user manual for more details.
- Playback of internet radio may be influenced by the status of your internet network. When so influenced, even the following file formats may not be able to be played.

Category	Extension	Stream			
MP3 ^a	Audio	Audio		Sampling frequency	32 kHz, 44.1 kHz, 48 kHz
		Layer-3	Quantization bitrate	16 bit	
			Channel	2 ch	
			Bitrate	8 kbps to 320 kbps	
			VBR/CBR	Supported/ Supported	
LPCM	_	LPCM	Sampling frequency	32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96kHz, 176.4 kHz, 192 kHz	
			Quantization bitrate	16 bit	
			Channel	2 ch	

Category	Extension	Stream		
WAV	.wav	LPCM	Sampling frequency	32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz 192 kHz
			Quantization bitrate	16 bit, 24 bit
			Channel	2 ch
WMA	.wma	WMA2/7/ 8/9 ^{b}	Sampling frequency	32 kHz, 44.1 kHz, 48 kHz
			Quantization bitrate	16 bit
			Channel	2 ch
			Bitrate	5 kbps to 320 kbps
			VBR/CBR	Supported/ Supported
AAC	.aac AAC .3gp MPE .3g2 HE A	AAC	Sampling frequency	32 kHz, 44.1 kHz, 48 kHz
		MPEG-4 HE AAC (aacPlus	Quantization bitrate	16 bit
		v1/2)	Channel	2 ch
			Bitrate	16 kbps to 320 kbps
			VBR/CBR	Supported/ Supported
Apple Lossles s	.m4a .mp4	ALAC	Sampling frequency	32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz
			Quantization bitrate	16 bit, 24 bit
			Channel	2 ch

		-		
Category	Extension	Stream		
FLAC	.flac	FLAC	Sampling frequency	32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz
			Quantization bitrate	16 bit, 24 bit
			Channel	2 ch
AIFF	.aiff .aif	AIFF	Sampling frequency	32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz
			Quantization bitrate	16 bit, 24 bit
			Channel	2 ch
DSD	.dff .dsf	DSD	Sampling frequency	2.8224 MHz, 5.6448 MHz
			Quantization bitrate	1 bit
			Channel	2 ch
"LADE	0.1	0 1: 1		

a "MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia."

Gapless playback

The unit can use USB memory/External HDD or a music server for gapless playback of the following file formats. WAV/FLAC/AIFF/ALAC

- Gapless playback can be used with a sequence of files for which the file format, sampling frequency, quantifying bit number and number of channels are all identical.
- In regard to playback on a music server, gapless playback cannot be used if the server has converted the file type into any other than the above supported types.
- If information on the file currently being played back is not displayed on the unit's display, it is being played back using LPCM.
- For more details on LPCM playback, please see the server's user manual.
- Gapless playback cannot be used in DMR mode.

b Files encoded using Windows Media Codec 9 may be playable but some parts of the specification are not supported; specifically, Pro, Lossless, Voice.

The USB-DAC function of this unit supports the following file formats. Note that some file formats are not available for playback although they are listed as playable file formats.

N-70A

Category	Extension	Stream		
LPCM		LPCM	Sampling frequency	32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz, 352.8 kHz, 384 kHz
			Quantization bitrate	16 bit, 24 bit, 32 bit
			Channel	2 ch
DSD		DSD	Sampling frequency	2.8224 MHz, 5.6448 MHz
			Quantization bitrate	1 bit
			Channel	2 ch

N-50A

Category	Extension	Stream		
LPCM	LPCM	LPCM	Sampling frequency	32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz
			Quantization bitrate	16 bit, 24 bit, 32 bit
			Channel	2 ch
DSD		DSD	Sampling frequency	2.8224 MHz, 5.6448 MHz
			Quantization bitrate	1 bit
			Channel	2 ch

Windows 8

This product is Windows 8.1 Compatible and Windows 8 Compatible.



Windows® and the Windows logo are trademarks of the Microsoft group of companies.

About iPod/iPhone





"Made for iPod," and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

USB works with iPhone 5s, iPhone 5c, iPhone 5, iPhone 4s, iPhone 4, iPhone 3GS, iPhone, iPod touch (1st through 5th generation) and iPod nano (3rd through 7th generation).

AirPlay works with iPhone, iPad, and iPod touch with iOS 4.3.3 or later, Mac with OS X Mountain Lion or later, and PC with iTunes 10.2.2 or later.

Apple, AirPlay, iPad, iPhone, iPod, iPod nano, iPod touch, iTunes, Safari, Bonjour, Mac, Mac OS and OS X are trademarks of Apple Inc., registered in the U.S. and other countries.

The AirPlay logo is a trademark of Apple Inc.

App Store is a service mark of Apple Inc.

About Spotify

The Spotify software is subject to third party licenses found by the following procedures.

- Be sure this unit and your computer are connected to the same wired or wireless network.
- Launch Web browser on your computer.
- Enter "http://(the unit's IP address)/notice.html" into your web browser's address bar.

// Note

- . Confirm the unit's IP address as follows:
- 1. Press NET SERVICE → SETUP
- 2. Select System Info.
- 3 Confirm the IP field

Specifications

Analog audio output Output level BALANCE jack (N-70A only) (L/R) . .4.2 V rms (1 kHz, 0 dB)

Frequency response 4 Hz to 90 kHz (-3 dB)
Signal-to-Noise Ratio
RCA jack (N-70A) (L/R)
BALANCE jack (N-70A) (L/R)
RCA jack (N-50A) (L/R)
Dynamic range
Total harmonic distortion
RCA jack (N-70A) (L/R) 0.0012 %
BALANCE jack (N-70A) (L/R) 0.0008 %

BALANCE jack (N-/0A) (L/R)	0.0008 %
THD + N	
RCA jack (N-50A) (L/R)	0.0012 %
Channel separation	B (1 kHz)

Headphones output (N-70A only)

Output	100 mW + 100 mW (32 Ω)
Compatible impedance	16 Ω to 600 Ω
Frequency response	4 Hz to 80 kHz (-3 dB)
THD + N	0.01 %

Digital audio output

Coaxial digita	ıl output	 	 RCA jack
Optical digita	ıl output	 	 Optical jack

Digital audio input Coaxial digital input......RCA jack Optical digital input......Optical jack USB DAC terminal USB2.0 High Speed (Type B) iPod/iPhone terminal (Front/Rear)

.....USB2.0 High Speed (Type A) 5 V, 1 A

Network

LAN terminal Ethernet jack (10 BASE-T/100 BASE-TX) DC output terminal for WIRELESS LAN 5 V, 600 mA

Centrally controlled section

Generalites Systam

System Audio Flayer
Power requirements AC 220 V to 240 V, 50 Hz/60 Hz
Power consumption
N-70A
N-50A
Power consumption
In standby mode
In standby mode (Network standby on) 2.0 W

Notwork Audio Playor

Auto Power Down	.15 min	(default),	30	min,	60	min,	Of
Veight (without package	e)						
N-70A						11.5	i ko

N-50A	7.5 kg
Dimensions	
N-70A	ım (D)
N-50A	ım (D)
Operating temperature+5 °C to -	+35 °C
Operating humidity 5 % to	o 85 %

Accessories Remote control

lemote control	
ype AAA (R03) dry cell batteries	
CA audio cable (red/white plugs)	
lower oard	

CD-ROM (Operating instructions)

Quick Start Guide Safety Brochure Warranty card

// Note

- The specifications are applicable when the power supply is
- Specifications and the design are subject to possible modifications without notice, due to improvements.
- Corporation and product names mentioned herein are trademarks or registered trademarks of the respective corporations.
- This product is not designed for use in Japan.
- This product includes FontAvenue[®] fonts licensed by NEC Corporation. FontAvenue® is a registered trademark of NEC Corporation.
- iOS is a trademark on which Cisco holds the trademark right in the US and certain other countries.
- · Android and Google Play are trademarks of Google Inc.

http://www.pioneer.co.uk

http://www.pioneer.eu

© 2014 PIONEER HOME ELECTRONICS CORPORATION.

All rights reserved.

PIONEER HOME ELECTRONICS CORPORATION

1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan

PIONEER ELECTRONICS (USA) INC.

P.O. BOX 1540, Long Beach, California 90801-1540, U.S.A. TEL: (800) 421-1404

PIONEER ELECTRONICS OF CANADA, INC.

340 Ferrier Street, Unit 2, Markham, Ontario L3R 2Z5, Canada TEL: 1-877-283-5901, 905-479-4411

PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium TEL: 03/570.05.11

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

253 Alexandra Road, #04-01, Singapore 159936 TEL: 65-6472-7555

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

5 Arco Lane, Heatherton, Victoria, 3202, Australia, TEL: (03) 9586-6300

PIONEER ELECTRONICS DE MEXICO S.A. DE C.V.

Blvd.Manuel Avila Camacho 138 10 piso Col.Lomas de Chapultepec, Mexico, D.F. 11000 TEL: 55-9178-4270 K002 B3 En