






STAIN CLEAN WINDOW VACUUM CLEANER V10

KAVACWIN10A

SAFETY & WARNINGS

Warning Symbols

The following warnings are used in this user guide and on the packaging.

	Do not use bleach		Do not tumble dry
	Do not dry clean		Washable at 60°C
	Do not iron	IPX4	Protected against splashing water from all directions.

 
General Safety Instructions



- Before using the product, familiarise yourself with all the safety information and instructions. Retain this user guide for future reference.
- Risk of loss of life or accident to infants and children. Never leave children unsupervised with the packaging material.
- The packaging material represents a danger of suffocation. Children frequently underestimate the dangers. Always keep children away from the packaging material.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. The product shall not be left unattended while it is connected to the supply mains. Keep the product out of reach of children when it is energised.
- Children shall not play with the product.
- Cleaning and maintenance shall not be made by children without supervision.
- Warning! Misuse may lead to injury. Use this product solely in accordance with these instructions. Do not attempt to modify the product in any way.
- Attention! Risk of product damage! Do not expose the product to direct sunshine or heat. The ideal ambient temperature is between +5 and +35 °C. Extreme low or high temperature may damage the battery or the product.

Electrical Safety

- Danger! Risk of electric shock! Never attempt to repair the product yourself. In case of malfunction, cease use immediately and contact help.Kogan.com for support.
- Warning! Risk of electric shock! Do not immerse the product in water or other liquids. Never hold the product under running water.
- Warning! Never use a damaged product. Disconnect the product from the power, cease use immediately and contact help.Kogan.com for support.
- Warning! Risk of injury! Switch the product off and disconnect it from the power supply before cleaning work and when not in use.
- Warning! This product contains a Lithium-ion rechargeable battery that is only replaceable by skilled persons. Do not throw the product into a fire.
- Do not operate the product while it is being charged.
- Always charge the product in an open area away from flammable materials and liquids. Misuse can cause fire and burns.
- The product is not to be used if it has been dropped if there are visible signs of damage or if it is leaking.
- Protect the connection cord against damages. Do not let it hang over sharp edges, do not squeeze or bend it. Keep the connection cord away from hot surfaces and open flames. Ensure that nobody can pull on or trip over it unintentionally.

OVERVIEW

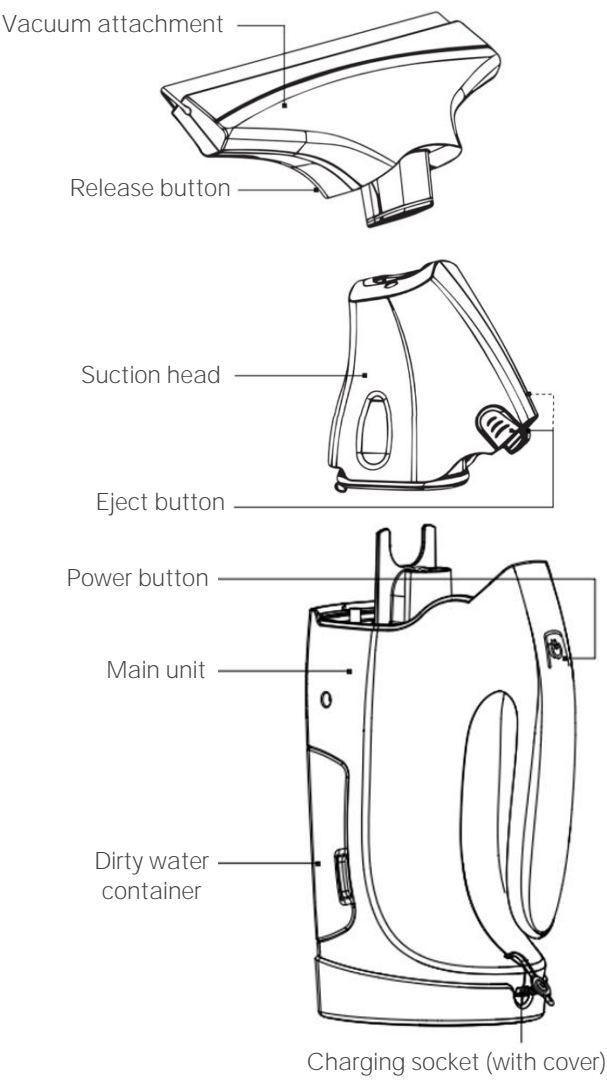

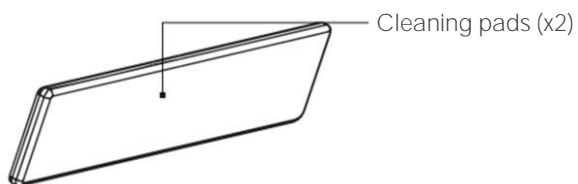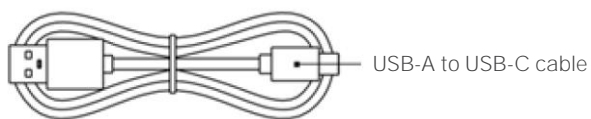

ASSEMBLY


1. Place the vacuum attachment onto the suction head.
2. Prior to attaching the wiper, fill the water container with water and/or cleaning detergent. Do not exceed the water container's maximum capacity of 360 ml.
Note: Do not use abrasive or aggressive cleaning detergents. These could damage the product.
3. Screw the wiper onto the water container.
4. Unfasten the hook-and-loop strap on the side of the cleaning pad.
5. Attach a cleaning pad onto the wiper.
6. Fasten the hook-and-loop strap of the cleaning pad.

BEFORE FIRST USE

- Remove all packaging materials. Check if all parts are complete.
- The product's built-in battery is not charged on delivery. Charge the battery completely before first use.

Charging

1. Always ensure the product is turned off before charging.
2. Connect the USB cable to the product.
3. Connect the USB cable to a DC 5V (6W max) USB power adapter (not supplied). The power button indicator will turn red.
4. When the battery is fully charged, the power button indicator will turn blue.
5. Disconnect the USB cable.

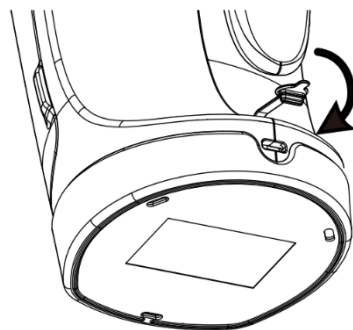

Notes:

- Do not leave the product permanently connected to the power adapter to avoid damage to the battery or the product.
- Ensure the charging socket always closed during operation to avoid water ingress.
- Do not obstruct the ventilation slots during operation. Blocked ventilation can result in overheating and damage to the product.

OPERATION

Power button

Indicator	Status
Solid Blue	Power on. Fully charged (while charging)
Solid Red	Charging
Red flashing (slow)	Low power.
Red flashing (fast)	Battery empty. The product will turn off after 1 minute.

Cleaning Windows

1. Rotate the spray nozzle to the desired setting:
 - o Stream – Jet stream
 - o Spray – Water mist stream
 - o Off – No stream
2. Spray the window.
3. Wipe over the sprayed areas with the wiper. This will loosen stubborn dirt.

Turning the product on/off

1. Press the power button, the product will turn on and the indicator turns blue.
2. Press the power button again, to turns the product off. The indicator will turn off.

Vacuuming Windows

1. Turn on the product.
2. Move the blade of the vacuum attachment slowly from top to bottom.
Note: For best cleaning results, briefly dry the rubber wiper of the vacuum attachment with a clean cloth after each removal.
3. When the MAX marking on the dirty water container is reached, turn off the product.
4. Remove the dirty water container from the main unit. Remove the protective cap and empty the dirty water.
5. Replace the dirty water container before resuming operation.

Note: Do not hold the product upside down. Do not move the product sideways.

CLEANING & CARE

- Before cleaning, always disconnect the product from the USB cable.
- Warning: Do not immerse the product's electrical components in water or other liquids. Never hold the product under running water.
- Do not use any abrasive, aggressive cleaners or hard brushes to clean the product and its accessories.

Cleaning and Storage

- Protect the product against dust and direct sunlight.
- Store the production in a cool, dry place, protected from moisture and out of the reach of children.
- Product the product against heat. Do not place the product close to open flames or heat sources such as stoves or heating appliances.

Cleaning the Vacuum Attachment, Suction Head and Main Unit

1. Press the release button to remove the vacuum attachment from the suction head.
2. Press the eject buttons to remove the suction head from the main unit.
3. Wipe down the parts with a slightly damp cloth.
4. Do not let any water or other liquids enter the product interior.
5. After cleaning, allow all parts to dry completely before reassembling.

Cleaning the Water container, Dirt Water Container and Wiper

1. Rinse the parts in water and/or mild detergent.
2. After cleaning, allow all parts to dry completely before reassembling.

Washing the Cleaning Pads

The cleaning pads can be cleaned in a washing machine.



Do not use bleach



Do not dry clean



Do not iron



Do not tumble dry





Washable at 60°C

1. Clean the cleaning pads on a mild setting, up to 60°C.
2. After cleaning, allow to dry completely before reassembling.


Storage

- Before storing the product ensure the water container and dirty water containers are empty.
- Regularly charge the battery (for example: monthly) if you do not use the product for a long period of time. This is necessary to preserve the battery.

SPECIFICATIONS

Rated input voltage	5V 
Rated input power	6W
Battery type	Li-Ion Battery, 3.7V  , 2200 mAh
Operating time	approx. 40 minutes
Charging time	approx. 2.5 to 3.5 hours
IP protection class	IPX4
Protection class	III
Emission Sound pressure level	< 70 dB(A), K-3 dB
Dirty water container capacity	270 ml (about 150 ml at MAX marking)
Spray bottle	360ml

Disposal

	<p>This marking indicates that this appliance should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.</p>
--	--

Need more information?

We hope that this user guide has given you
the assistance needed for a simple set-up.

For the most up-to-date guide for your product,
as well as any additional assistance you may require,
head online to **help.kogan.com**

kogan.com