



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Source		AV
	Menu/DVD		Menu
	Guide		Guide
	[■][■■]		3D
	Exit/Back		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	[<>]		Format
	→ ▣ ←		TV/R
	[i+] / [≡i]		Info
	Text / [≡] [/≡] []		Text
	■ ■ ▶ / [▼]		Pause
	▶ / I/II		Play
	▶ / I/II		Dual







Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	_ Menu/DVD		Menu
	- Exit/Back		Exit
	- Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	/II / [v]		Pause
	▶ / I/II		Play
	▶ / I/II		Dual
	◀◀ / [≡●]		<<
	◀◀ / [≡●]		TV/R
	▶▶ / Subtitle		>>
	▶▶ / Subtitle		Subt
	▲		Smart
	■ / [≡□]		Stop
	◀◀ / [≡⇅]		Eject
	◀◀ / [≡⇅]		I<<
	▶▶ / [⊙][≡X]		>>I
	▶▶ / [⊙][≡X]		Back





Original	Replacement	Original	Replacement
 Power	 Power	 Pause	 Pause
 Mute	 Mute	 Play	 Play
 1	 1	 Dual	 Dual
 2	 2	 <<<	 <<<
 3	 3	 TV/R	 TV/R
 4	 4	 Subtitle	 Subt
 5	 5	 Smart	 Smart
 6	 6	 Stop	 Stop
 7	 7	 Eject	 Eject
 8	 8	 Back	 Back
 9	 9	 >>>	 >>>
 0	 0		
 Source	 AV		
 P+	 Ch +		
 P-	 Ch -		
 Vol-	 Vol -		
 Vol+	 Vol +		

