



riding your electric scooter.

new Electric Scooter. Be sure to read ALL OF THE INFOR-MATION in this manual before riding.

NOTE TO ALL RIDERS UNDER 18 YEARS OF AGE: Always respect pedestrians. It's very important that you get parental permission before

> Do not ride under wet conditions. The scooter may slide from under your feet causing injury. Wet conditions may damage the electronic and void the warranty.

Don't ride until you read this

- Always wear a helmet when riding your Electric Scooter.
- Always be aware of local road laws, and follow them.
- **Do not** ride the scooter under the influence of drugs or alcohol.

- Make sure your scooter has a full battery before taking it out to ride

- 2. Abuse We do not cover physical damage due to negligent care and extreme
- - 6. **Before riding** be sure to check the scooter over and make sure the scooter is

 - 8. **Before riding** be sure that any and all axle guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition.

 - 10. **Never** exceed the 220 lb (100 kg) maximum load rating.


- also be sure to check that all safety labels are in place and you understand the safety
- 11. The electric scooter should **never** be used by children under the age of 13.

- to water and water damage is not covered by our warranty. Riding in wet conditions
- 3. Whenever you ride the GOTRAX scooter, you risk severe injury or even death
- from loss of control, collisions, and falls. Use caution and ride at your own risk.

Unpack

- - 4. Approved Power Adapter / Charging Uni
- 5. **Keep** hands and all body parts away from moving parts while operating the
- 7. **Before riding** be sure to check that the braking system is functioning properly;
- 12. **Maximum Speed** Your electric scooter goes the maximum speed of 20 mph.

3. 4 mm Allen Wrench

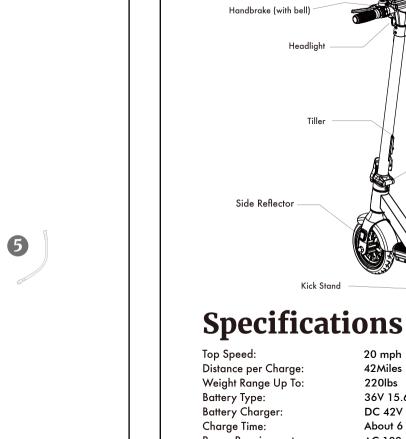

Get To Know Your Scooter Accelerator (right thumb throttle) Folding Mechanism AC 100-240V~50/60Hz 3.0A


Assemble Your Scooter Open the rubber charging port cover.


Charge Your Scooter 3. The charger box will have a green light when fully charged and a red light when When you are done charging be sure cover the charging port to keep it clear of Charging Requirement: Make sure to charge your scooter in conditions that do not exceed 104 degrees Fahrenheit or below 32 degrees Fahrenheit.

the cruise control features by holding the hand brake. seconds. When you heard a alarm sound, it means success. **Switch the default speed unit:** The default speed unit displayed by the Console is MPH. Press the "+" and "-" buttons at the same time for 10 seconds to switch the speed unit to Km/h. Clear the total mileage: When the scooter is powwered on, press the Power button and "+">

will be cleared to 0.

Using the anti-theft device **Scooter Console Functions Long press power button** to power on and off. Hold + button for 3 seconds to power the headlight on/off. The taillight is a braking light too. When you hold the hand brake while the scooter is on, the taillight will flashing. To unlock the display lock the default password is 000. Press the "+" button to input 0 and press the power button to confirm. Repeat the whole process to input 000. And then press the set. Repeat the process to set your own individual code. After the screens shows the 3 number code, press the power button twice to unlock.(Note: Please shoot a photo after you set your own **Switch Gear:** The default gear is gear 1. When the scooter is power on, the screen display L1. The max speed of Gear 1 is 15.5 MPH. Pressing the "+" button to switch to the gear 2. The max

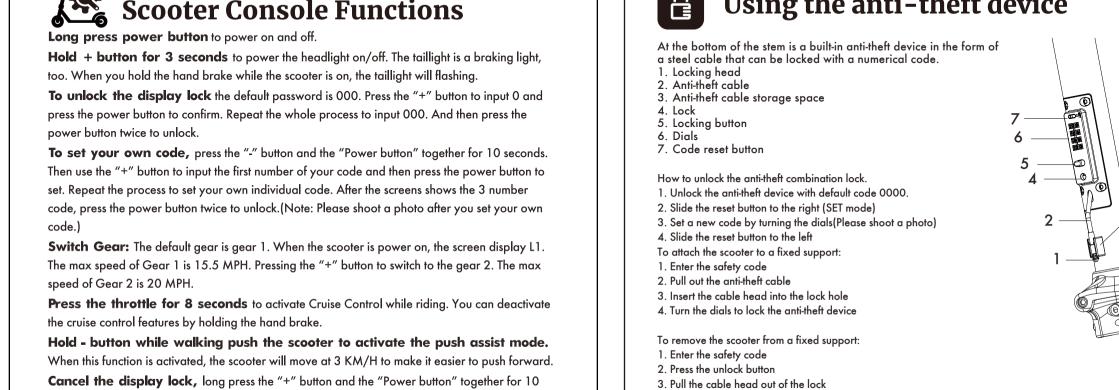


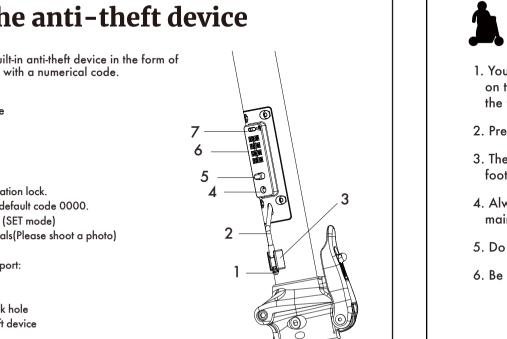



towards the tiller. Make sure to test the tiller before riding to make sure i

After using, please push up on the cable of the anti-theft device into the stem tube and secure the cable head in the storage bracket to prevent it from hanging "-" buttons at the same time for 10 seconds, the accumulated mileage displayed on the console

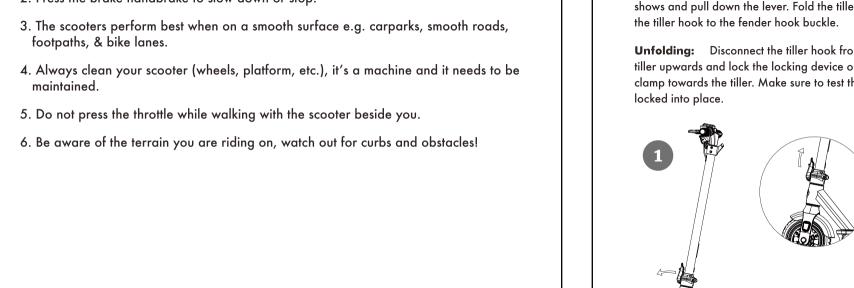



Cleaning and storage: If the scooter is dirty, wipe it clean with a soft damp clot

Disc Brake Adjustments: If the brake is too tight, use a 4mm Allen wrench to lot the screws counterclockwise. Push the brake wire to shorten and lock the screw in place. If the brake is too loose, loosen the screws and pull the brake wire to extend the wire and lock the screws.

Tiller Adjustments: If the tiller wiggles while riding, please check the folding mechanism. Use an Allen wrench to tighten the screws as the figure shows.

may cause wear on the life of the battery and tires.

Tires: If you notice that the tire pressure is low, please fill to the recommended PSI the side of the tire. Recommended PSI: 50

> DO NOT use alcohol, gasoline, kerosene, or other corrosive chemical solvents t the scooter. It can severely damage the appearance and structure of the scooter. Pl do not use a pressure washer as it may also cause damage to the electronics.

> > **Storage:** When you're not using your scooter store in a dry and cool location. Avoid storing your scooter outdoors because sun exposure can damage it's appearance and

Please contact our customer service team if you are experiencing problems or need more detailed information.

Only use the approved GOTRAX power adapter to charge your scooter, others may

Make sure to store your scooter and power adapter in conditions that do not exceed

Warning - Risk of Fire - No User Serviceable Parts, The prolonged exposure to UV

Rays, Rain and the Elements may damage the enclosed materials, store indoors when



WWW.GOTRAX.COM

We frequently update our user manuals at **WWW.GOTRAX.COM**, an reserve the rights to update and change manuals online.

cause risk of fire & equipment may be damaged.

They can be reached at WWW.GOTRAX.COM

For warranty information, please visit WWW.GOTRAX.COI

X Warranty





2533 Royal Ln Dallas TEXAS 75229