




每面47.2\*85mm  
展开尺寸:425\*170mm  
105g哑粉纸  
正反面 双色印刷 K 100 C 100  
9页8折风琴折




Magnetic wireless charging power bank

ACCESSORY LIST




1  
Primary Unit




2  
USB-C to USB-C Cable 0.3m

PRODUCT OVERVIEW

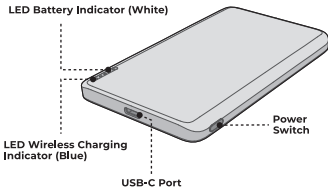


LED Battery Indicator (White)  
LED Wireless Charging Indicator (Blue)  
Power Switch  
USB-C Port

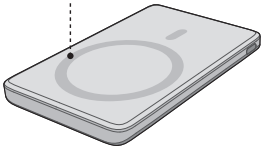

Wireless Charging Area

CHARGING INSTRUCTION

POWER SWITCH GUIDE

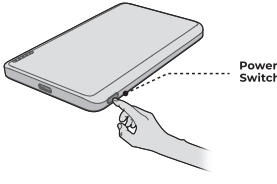


Power Switch

To Activate: Press 1 time  
To Deactivate: Press 2 times

Low Power Charge Mode:  
While the power bank is on, press and hold the power switch for 2 seconds to activate this mode. The LED indicators will sequentially light up in a marquee pattern. The device will automatically stop charging after 2 hours.

To return to Normal Charge Mode:  
Press and hold the power switch for 2 seconds. The LED indicators will stay lit, signaling that Normal Charge Mode is active.


LED INDICATION GUIDE

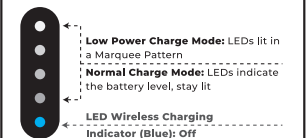

Low Power Charge Mode: LEDs lit in a Marquee Pattern  
Normal Charge Mode: LEDs indicate the battery level, stay lit  
LED Wireless Charging Indicator (Blue): Off

WIRELESS CHAGRING GUIDE


When the device is powered on, simply place your phone on the wireless charging area. Charging will begin automatically.

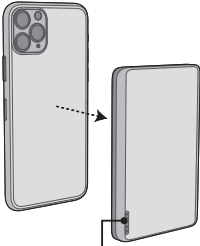


LED Indicators (White): Battery Level  
LED Indicator (Blue) Stay On

LED INDICATION GUIDE

CHARGE THROUGH CABLE

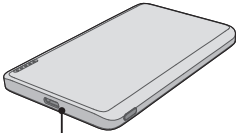

USB-C Port

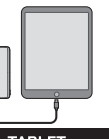


PHONE  
TABLET


LED Indicators (White): Battery Level  
LED Indicator (Blue) Off

LED INDICATION GUIDE

POWERBANK RECHARGE

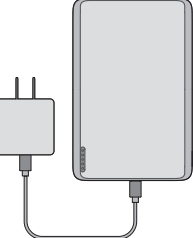

While recharging, the LED wireless charging indicator will be off. The battery indicators will display the current battery level, allowing you to monitor the charging progress.

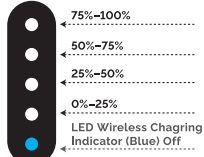

75%~100%  
50%~75%  
25%~50%  
0%~25%  
LED Wireless Chagring Indicator (Blue) Off

LED INDICATION GUIDE

PRODUCT PARAMETER

NAME OF PRODUCT  
MAGNETIC WIRELESS CHARGING POWER BANK

MOLDEL  
GM-705

USB-C INPUT  
5V=3A

USB-C OUTPUT  
5V=2A 9V=2A

WIRELESS CHARGING OUTPUT  
5W / 7.5W

USB-C + WIRELESS CHARGING  
10W+5W

OUTPUT WATTAGE  
UP TO 18W

BATTERY CAPACITY  
5000MAH / 3.87V / 19.35WH


RATE CAPACITY  
3000MAH(5V=2A)

BATTERY TYPE  
LITHIUM POLYMER CELL


CONVERSION EFFICIENCY  
≥60%

CHARGE LIMIT VOLTAGE  
4.45V

OPERATING TEMPERATURE  
0~35°C




PRACTICES TO AVOID

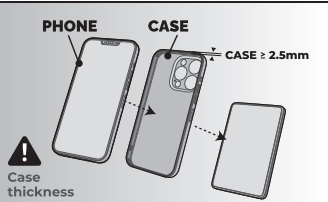

PHONE CASE CASE ≥ 2.5mm  
! Case thickness ≥2.5mm  
CAN RESULT IN  
Overheating  
Charging Malfunction

PRACTICES TO AVOID

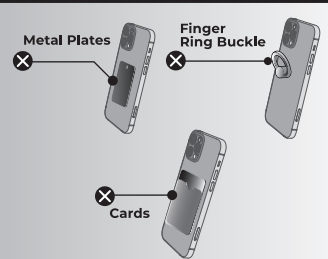

Metal Plates  
Finger Ring Buckle  
Cards  
[⚡] INSUFFICIENT CHARGING

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- FCC RF exposure statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

NOTES

01- Please use the original or certified charging cables.

02- Avoid using the product in environments with extremely high or low temperatures.

03- Avoid contact with liquids.

04-Prevent the product from dropping, being squeezed, or impacted.

05- Do not throw the product into fire.

06-Keep the product out of reach of children.

07- Cease using the power bank if it becomes submerged in water.

08-Stop using the power bank if it emits an odor, becomes deformed, or overheats.

09- Do not expose the product to fire or temperatures above 100° C (212° F) as it may cause explosions.

10- Do not damage or puncture the power bank' s casing. Damage to the casing can lead to overheating, fire, or explosion.

11- Do not disassemble this product. For repairs or maintenance, please take it to qualified service personnel. Incorrect reassembly could pose a risk of fire or personal injury.

12- Unplug the charger after the power bank is fully charged to prevent battery damage. Turn off the power bank when not in use for extended periods.

13- Exercise close supervision when using the product near children to reduce the risk of injury.

14- Do not use magnetic suction wireless charging if there are metal plates, finger rings, or credit cards on the back of the phone or phone case.

15- The product may heat up noticeably when watching videos or playing music on your phone during wireless charging, which can also significantly slow down the charging process.

16- Minor heating is normal during wireless charging. Contact our customer service via email if severe heating occurs.