

TECHBEAR URL:

CHBEAR STECHBEAR STECHBEAR STECHBEAR STECHBEAR STECHBEAR STECHBEAR STECHBEAR STECHBEAR STECHBEAR	STECHBEAR)	安全警告提示 Safety Warning Tips	01 ECHBEAR	ECHBEAR STECHBEAR STECHBEAR STECHBE
https://www.amazon.com.au/stores/page/03E76697- E36A-4D73-93BB-66E374C1F7CE	TECHBEAR	产品介绍 Product Description	02 CHBEAR	ECHBEAR STECHBEAR STECHBEAR
CHBEAR STECHBEAR	STECHBEAR)	初次使用	04 SECHBEAR	ECHBEAR STECHBEAR STECHBEAR
CHBEAR STECHBEAR STECHBEAR STECHBEAR STECHBEAR STECHBEAR STECHBEAR STECHBEAR STECHBEAR	STECHBEAR)	使用注意事项	04 A ECHBEAR	ECHBEAR STECHBEAR STECHBEAR STECHBE
【AFTER-SALES SERVICE】 - We value your satisfaction. All of our	S ECHBEAR	食材放入顺序Order of ingredients	07 CHBEAR	CHBEAR SECHBEAR SECHBEAR
Product come with a 24-month warranty and lifelong technical support. If you have any questions about our bread maker, please feel free to	LIBEAR	参考配方	08	LIBEAR LIBEAR LIBEAR LIBEAR
contact us, and our after-sales personnel will provide you with	TECT	面包机的使用方法	09	TECH STECH
CHREAT SECHBEAT SECHBEAT SECHBEAT SECHBEAT SECHBEAT	A TECHBEAT	面包机的清洁保养	11 ECHBEAN	ECHBEAN DECHBEAN DECHBE
CHBEAN STECHBEAN	TECHBEAN	食品卫生标识	11ECHBEAN	ECHBEAN ATECHBEAN ATECHBE
CHBEAR STECHBEAR	A TECHBEAR	面包机的常见问题		ECHBEAR STECHBEAR STECHBEAR STECHBE
CHBEAR STECHBEAR	STECHBEAR)	有毒有害物质成份及含量表Toxic and harmful substances ingredients and conf	STECT	ECHBEAR STECHBEAR STECHBEAR
CHBEAR SECHBEAR SECHB	STECHBEAR)	产品保修卡Product warranty card	14 A ECHBEAR A SECHBEAR	ECHBEAR DECHBEAR DECHBEAR DECHBE


CHBEAR SECHBEAR SECHB

CHBEAR SECHBEAR SECHB


CHBEAR SECHBEAR SECHB

Safety Warning

Please read this instruction manual carefully before using the product and keep it in a safe place.

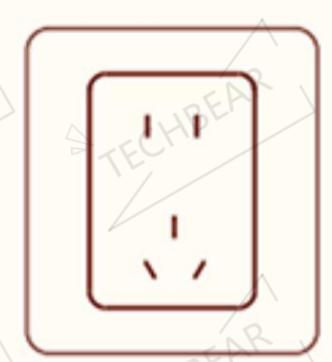

Check that the household power supply is suitable as this may affect its effectiveness or cause damage.

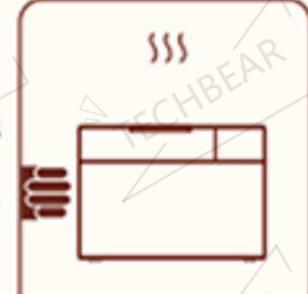

Some surfaces can be very hot during operation.



Keep away from combustible objects such as walls, electric stoves, gas stoves and curtains.




Do not allow the power cord to hang over the edge of a table or place it on a hot




Note: Hot surfaces. Before working on the machine, make sure that all packaging materials such as cardboardplastic have been removed.




Do not insert metal sheets or other conductive materials into the machine to prevent fire or short circuits.

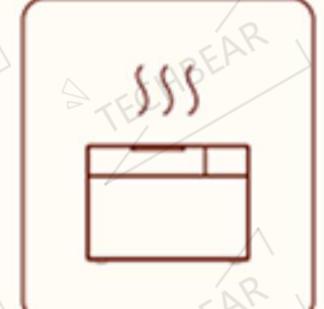


Do not cover the machine 1555 with towels etc. when the machine is working and the machine is emitting large amounts of hot steam.

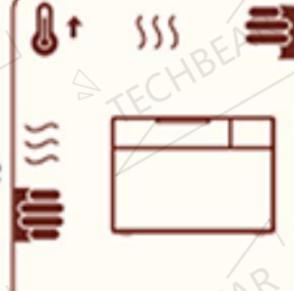


Do not use your hands or face near the steam outlet when the machine is in operation to avoid burns.

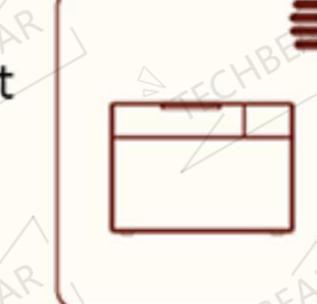


Do not touch or move any moving parts when the machine is in operation. The appliance must not be immersed in water.

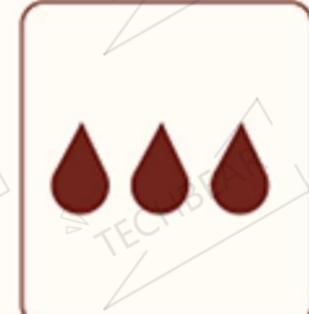


Be careful when moving the machine when there is hot grease inside.

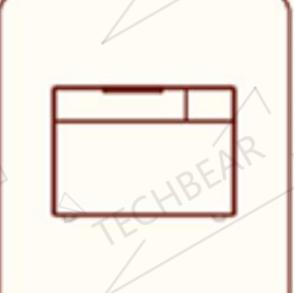

Do not start the bread machine until the bread bucket is fully assembled.

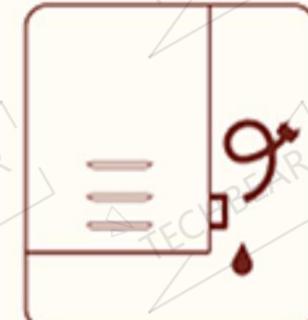

Do not immerse the power cord, plug or machine in water or other liquids to prevent electric shock.

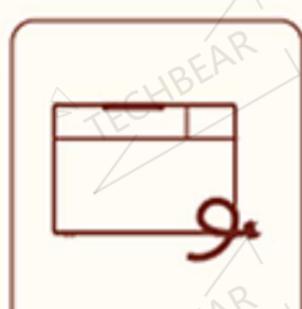


Switch off and unplug the toaster when not in use or before cleaning.



Special gloves must be used to avoid burns when



Use the power cord provided by the manufacturer or service centre, do not use accessories not recommended by the manufacturer.

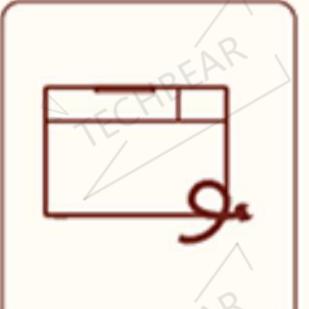


This machine is for home use only and must not be used for any other purpose.




Do not pour oil into the appliance as this may cause a fire.




This appliance cannot be operated with an external timer or independent remote control system.

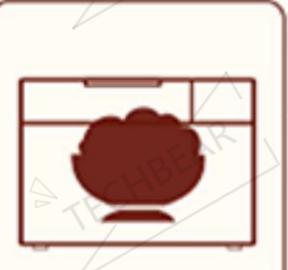

Placing too much food in the appliance may cause a fire or electric shock.

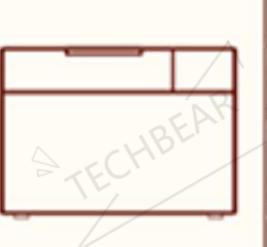

The maximum amount of flour used in the bread machine must not exceed 500g and the leavening agent must not exceed 15g.

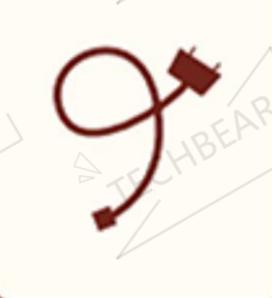

Warning: If the power cord is damaged, to avoid danger it must be replaced by a professional from the manufacturer, his service department or similar.



- -- The appliance is not intended to be used by persons (including children) who have physical, sensory or mental impairments or who lack experience and knowledge of its use, unless they are supervised or instructed in the use of the appliance by a person responsible for their safety.
- -- Children should be supervised to ensure that they do not play with the appliance.
- --Cleaning and maintenance of the appliance should not be carried out by children without supervision.

WARNING: ① Stop working and unplug the appliance before moving it. Make sure there is no flammable grease in the heat pipe or its surroundings after moving it, otherwise it may cause fire and electric shock. 2 Do not open this box during work, wait until the appliance has cooled down before opening it for use or cleaning. -01-

东菱 donlim

Pre-Use Tips for Bread Machines



Accessories



For measuring water and milk solutions, not suitable for measuring flour.



Measuring spoon


Small spoon to measure yeast. Large spoon for measuring sugar and milk powder.



• Disassembly of the Bread Bucket (The following is a universal diagram, please take the actual subject!)

Do not force it upwards, but gently rotate it 30° to the left and then pull it upwards.



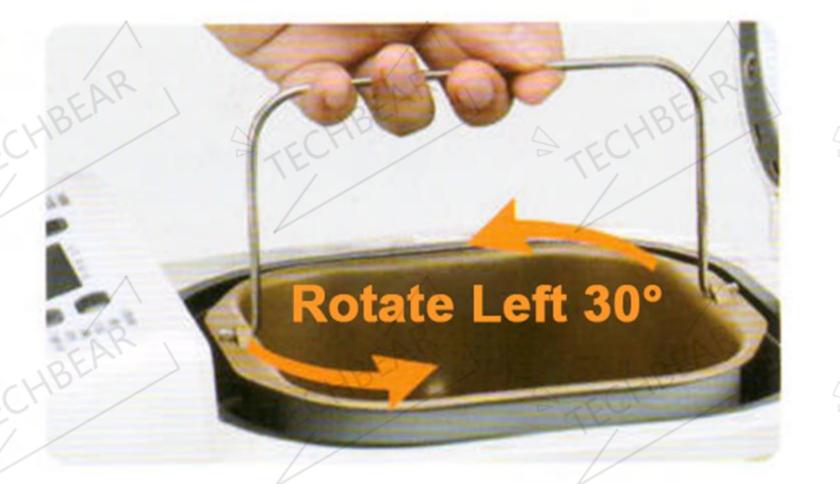




Installation and Removal of Mixing Blade (The following is a universal diagram, please take the actual subject!)

The blade protrudes upwards to be mounted on the bread drum spindle and rotated clockwise, if the mixing blade is not mounted correctly, it will cause the bread drum to be scratched.







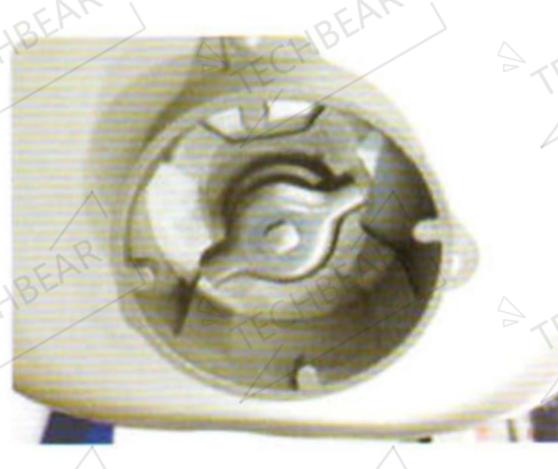

When the mixing knife is stuck tightly by the flour, you can dismantle the bread drum, press these two ends at the bottom of the bread drum with your left hand, pinch the mixing knife with your right hand and rotate it a little bit in the left and right directions, and the mixing knife can be dismantled.

Tips for Empty Baking

For the first time use, please BAKE EMPTY FOR 10 MINUTES to get rid of the anticorrosive protective coating of the heating tube and bread drum.

HOW TO OPERATE: Install the bread drum in place, put in a little water, then turn on the power, select the "Bake" menu and press the start button.

When baking, there may be slight smoke, odour or noise, which is the process of removing the protective coating and is a normal phenomenon.

How to Make Bread

Production Steps

In order to ensure the fermentation results, the dry yeast should not come into direct contact with water, salt and butter, so the correct order of the ingredients is as follows:







If you need to add eggs, add them after adding water/milk.



Salt goes into the water (milk).



Put sugar in the corner of the bread bucket.




Add butter or cooking oil.



Put in the flour, trying to get the flour to cover the entire surface of the water.



Yeast goes in, make sure the yeast doesn't come in contact with the water and salt.

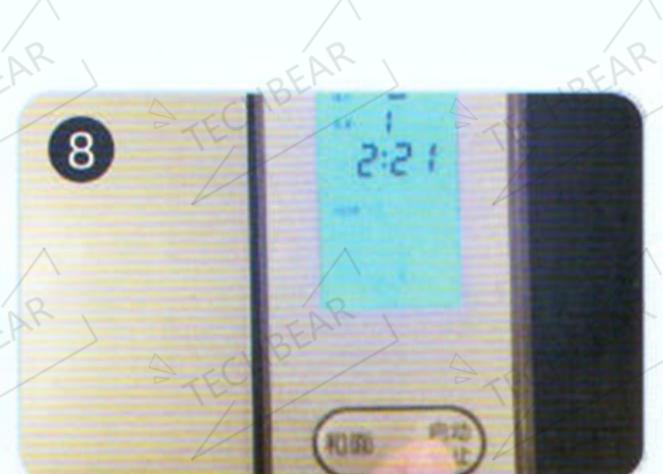

Select the menu and start the machine.

Do not open the lid too often during the fermentation and baking process, otherwise it will affect the result of the bread making.

Refer to the Recipe

Warm Tips: This manual or recipe given in the relevant recipes, are Donglim appliances after repeated testing and verification to determine the best solution. Combined with the domestic people's eating habits, the recipes given to make bread will be relatively soft, so the actual weight of the baked bread will be lighter than the specifications of the capacity (450g or 750g, 1000g), the weight of the bread to prevail in kind.

Standard Bread


	Bread Reference Portion	1-2 People	2-4 People	4-6 People
3EA	Water	P90ml	120ml	150ml
	Sugar	30g	40g	50g
	Milk powder	7g	_10g	15g
3EA	SaltAR	EAR 2g	EAR 2g	EAR 2g
	Eggs	1pcs	1pcs	1pcs
	Butter	∆ 20g	∆25g	√30g
BEA	High gluten flour	200g	250g	300g
	Yeast	4g	5g	5g
	Weight grade selection	∆500g	/750g	1000g
CD	K / CAK /	AK 1	AK 1	CAKI

• Super Soft Sweet Bread: can be made with "Sweet Bread" or "Soft Bread" menu.


Bread Reference Portion	1-2 People	2-4 People	4-6 People
Water	75ml TECHIB	105ml	136ml
Sugar	40g	50g	60g
Milk powder	AR 7g	AR 10g	AR 15g
Salt	2g	2g	2g 7500
Eggs	1pcs	1pcs	1pcs
Butter	AR 20g	AR 25g	AR 30g
High gluten flour	200g	250g	300g
Yeast	4g	5g	5g
Weight grade selection	EAR 500g	750g	1000g

Tips: For better bread texture, take out the bread as soon as possible after it is ready, if it is kept warm or stored for too long, the harder the bread will taste.

Must Read for Newbies

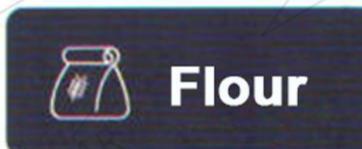

Make sure to use "high-gluten flour" (13% or more protein content). If you don't use the right kind of flour, it may result in uneven cooking.

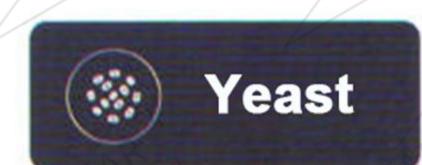


Make sure to use "High Sugar Tolerant" yeast (which remains active in environments with a sugar content of 7% or more). If you choose ordinary yeast, the fermentation may fail.




Even a skilled baker can't put ingredients by feel, so an electronic scale is essential.



Product Presentation

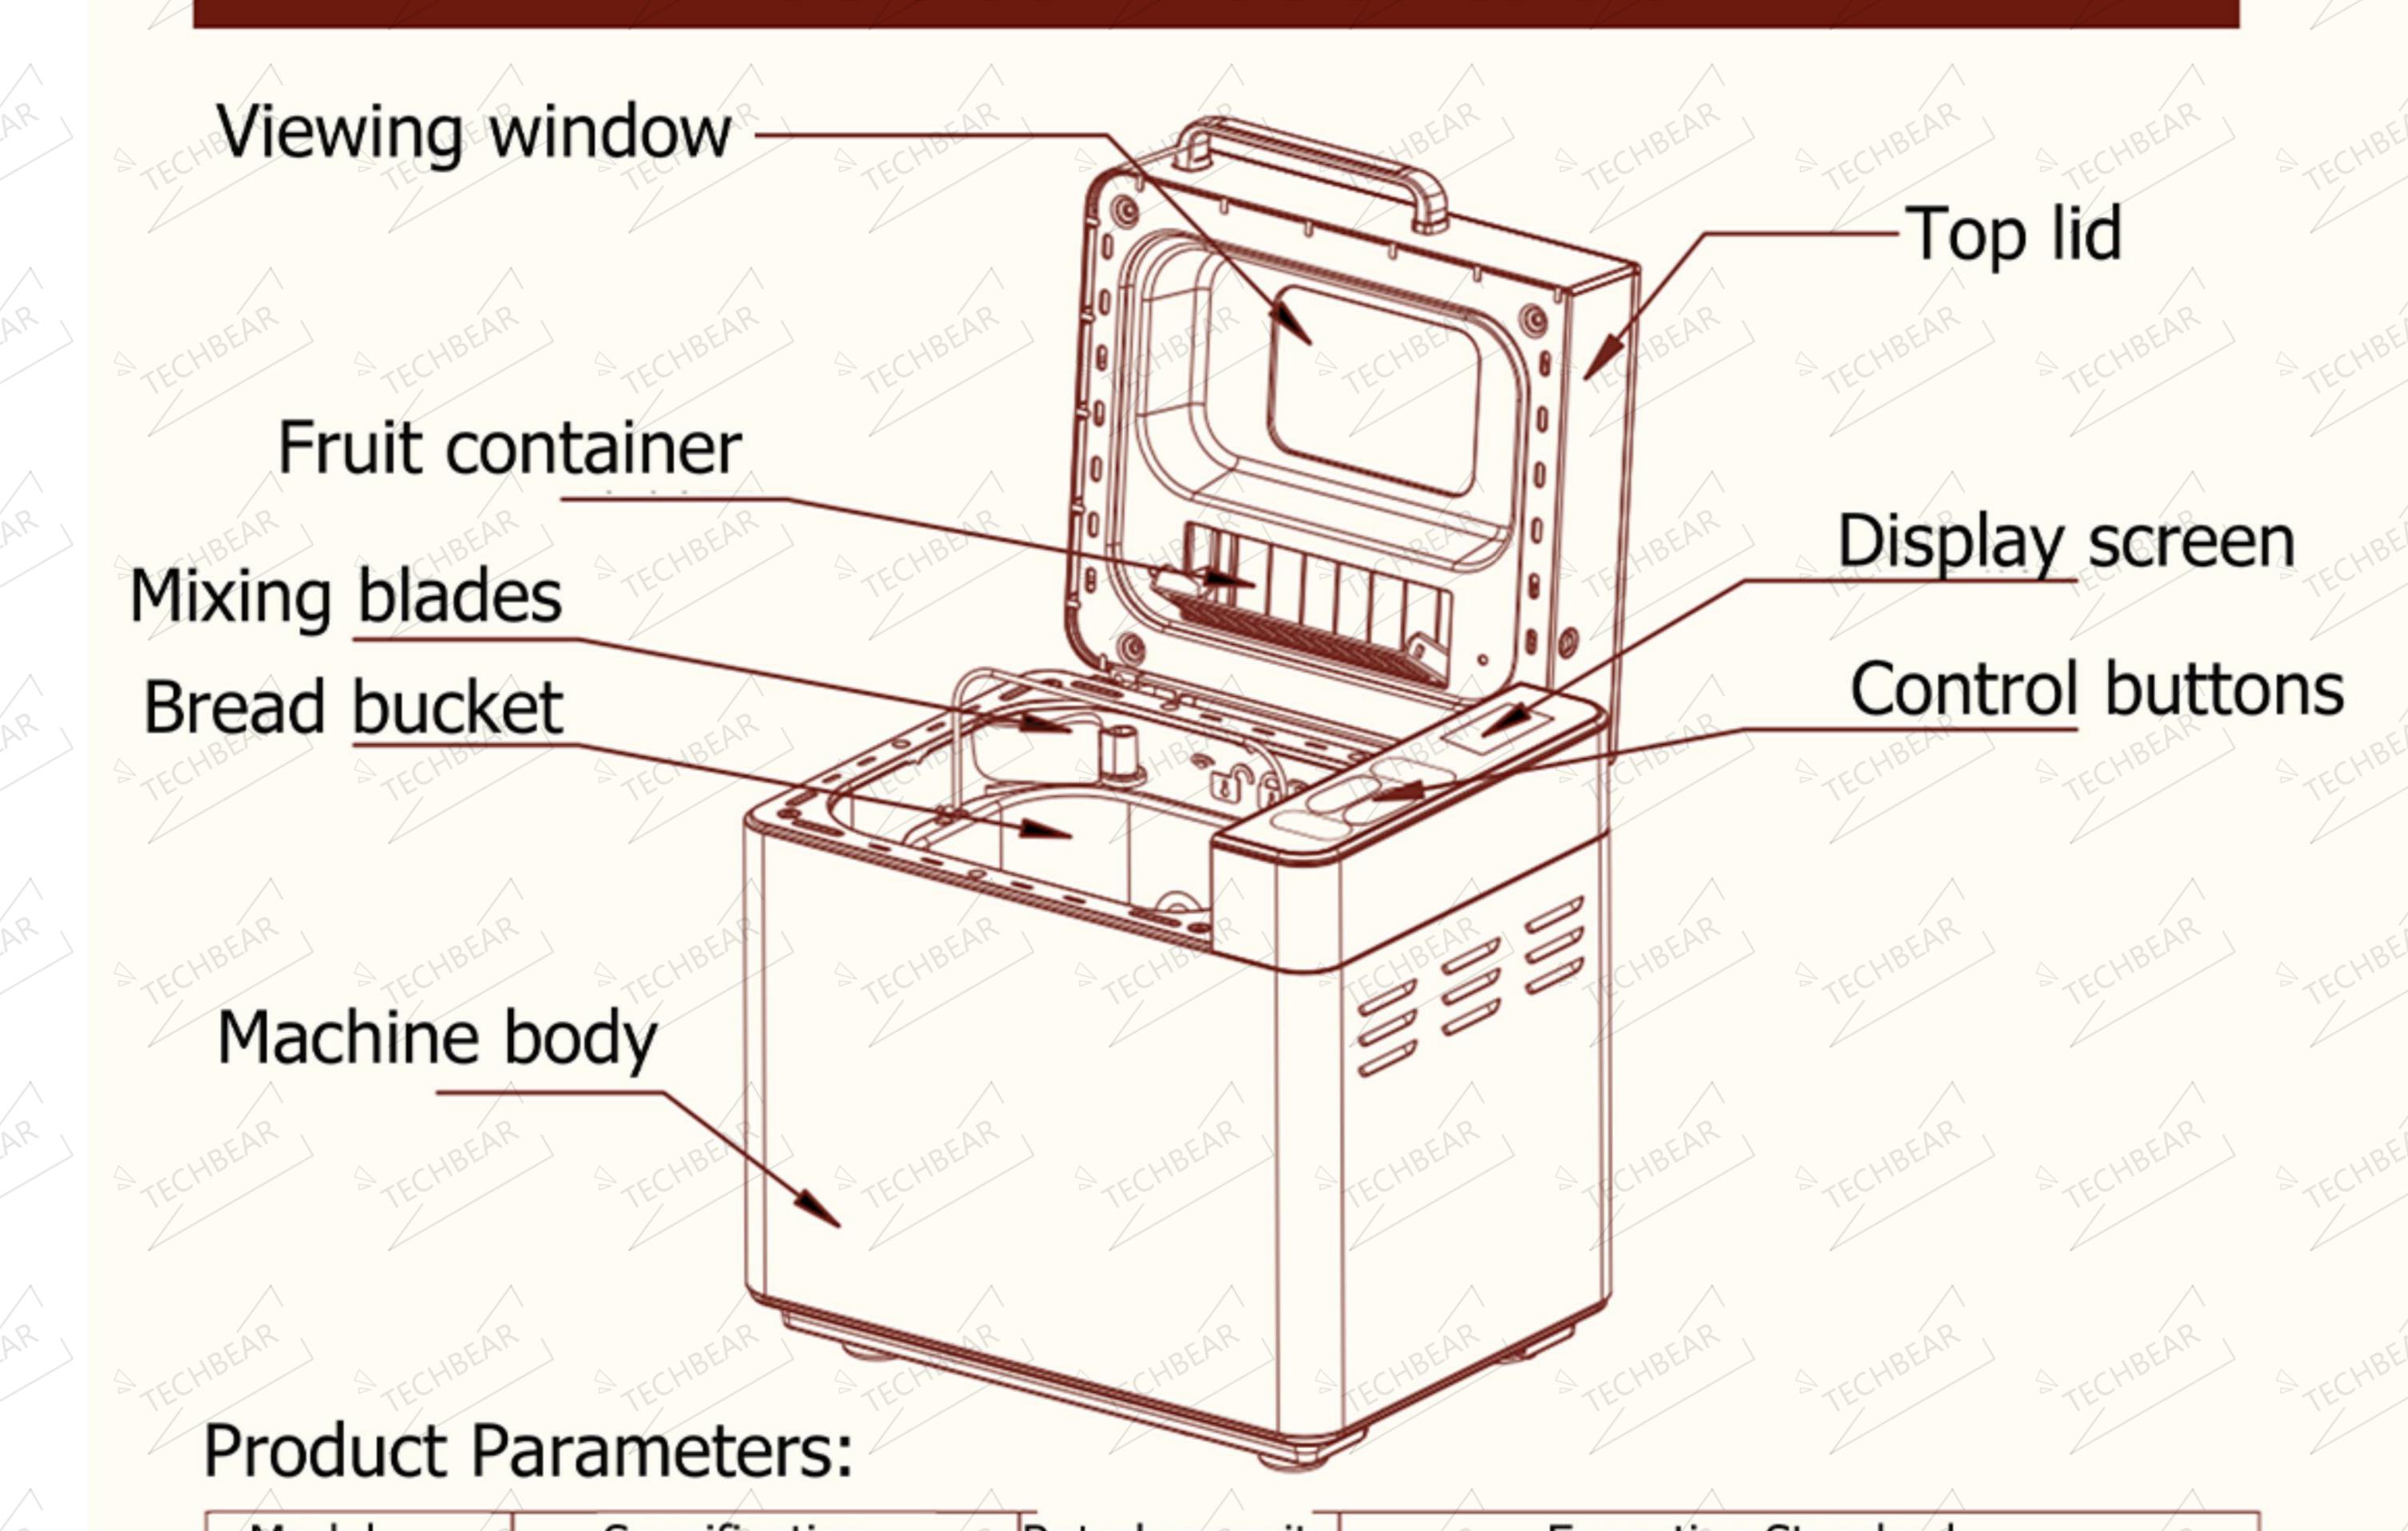

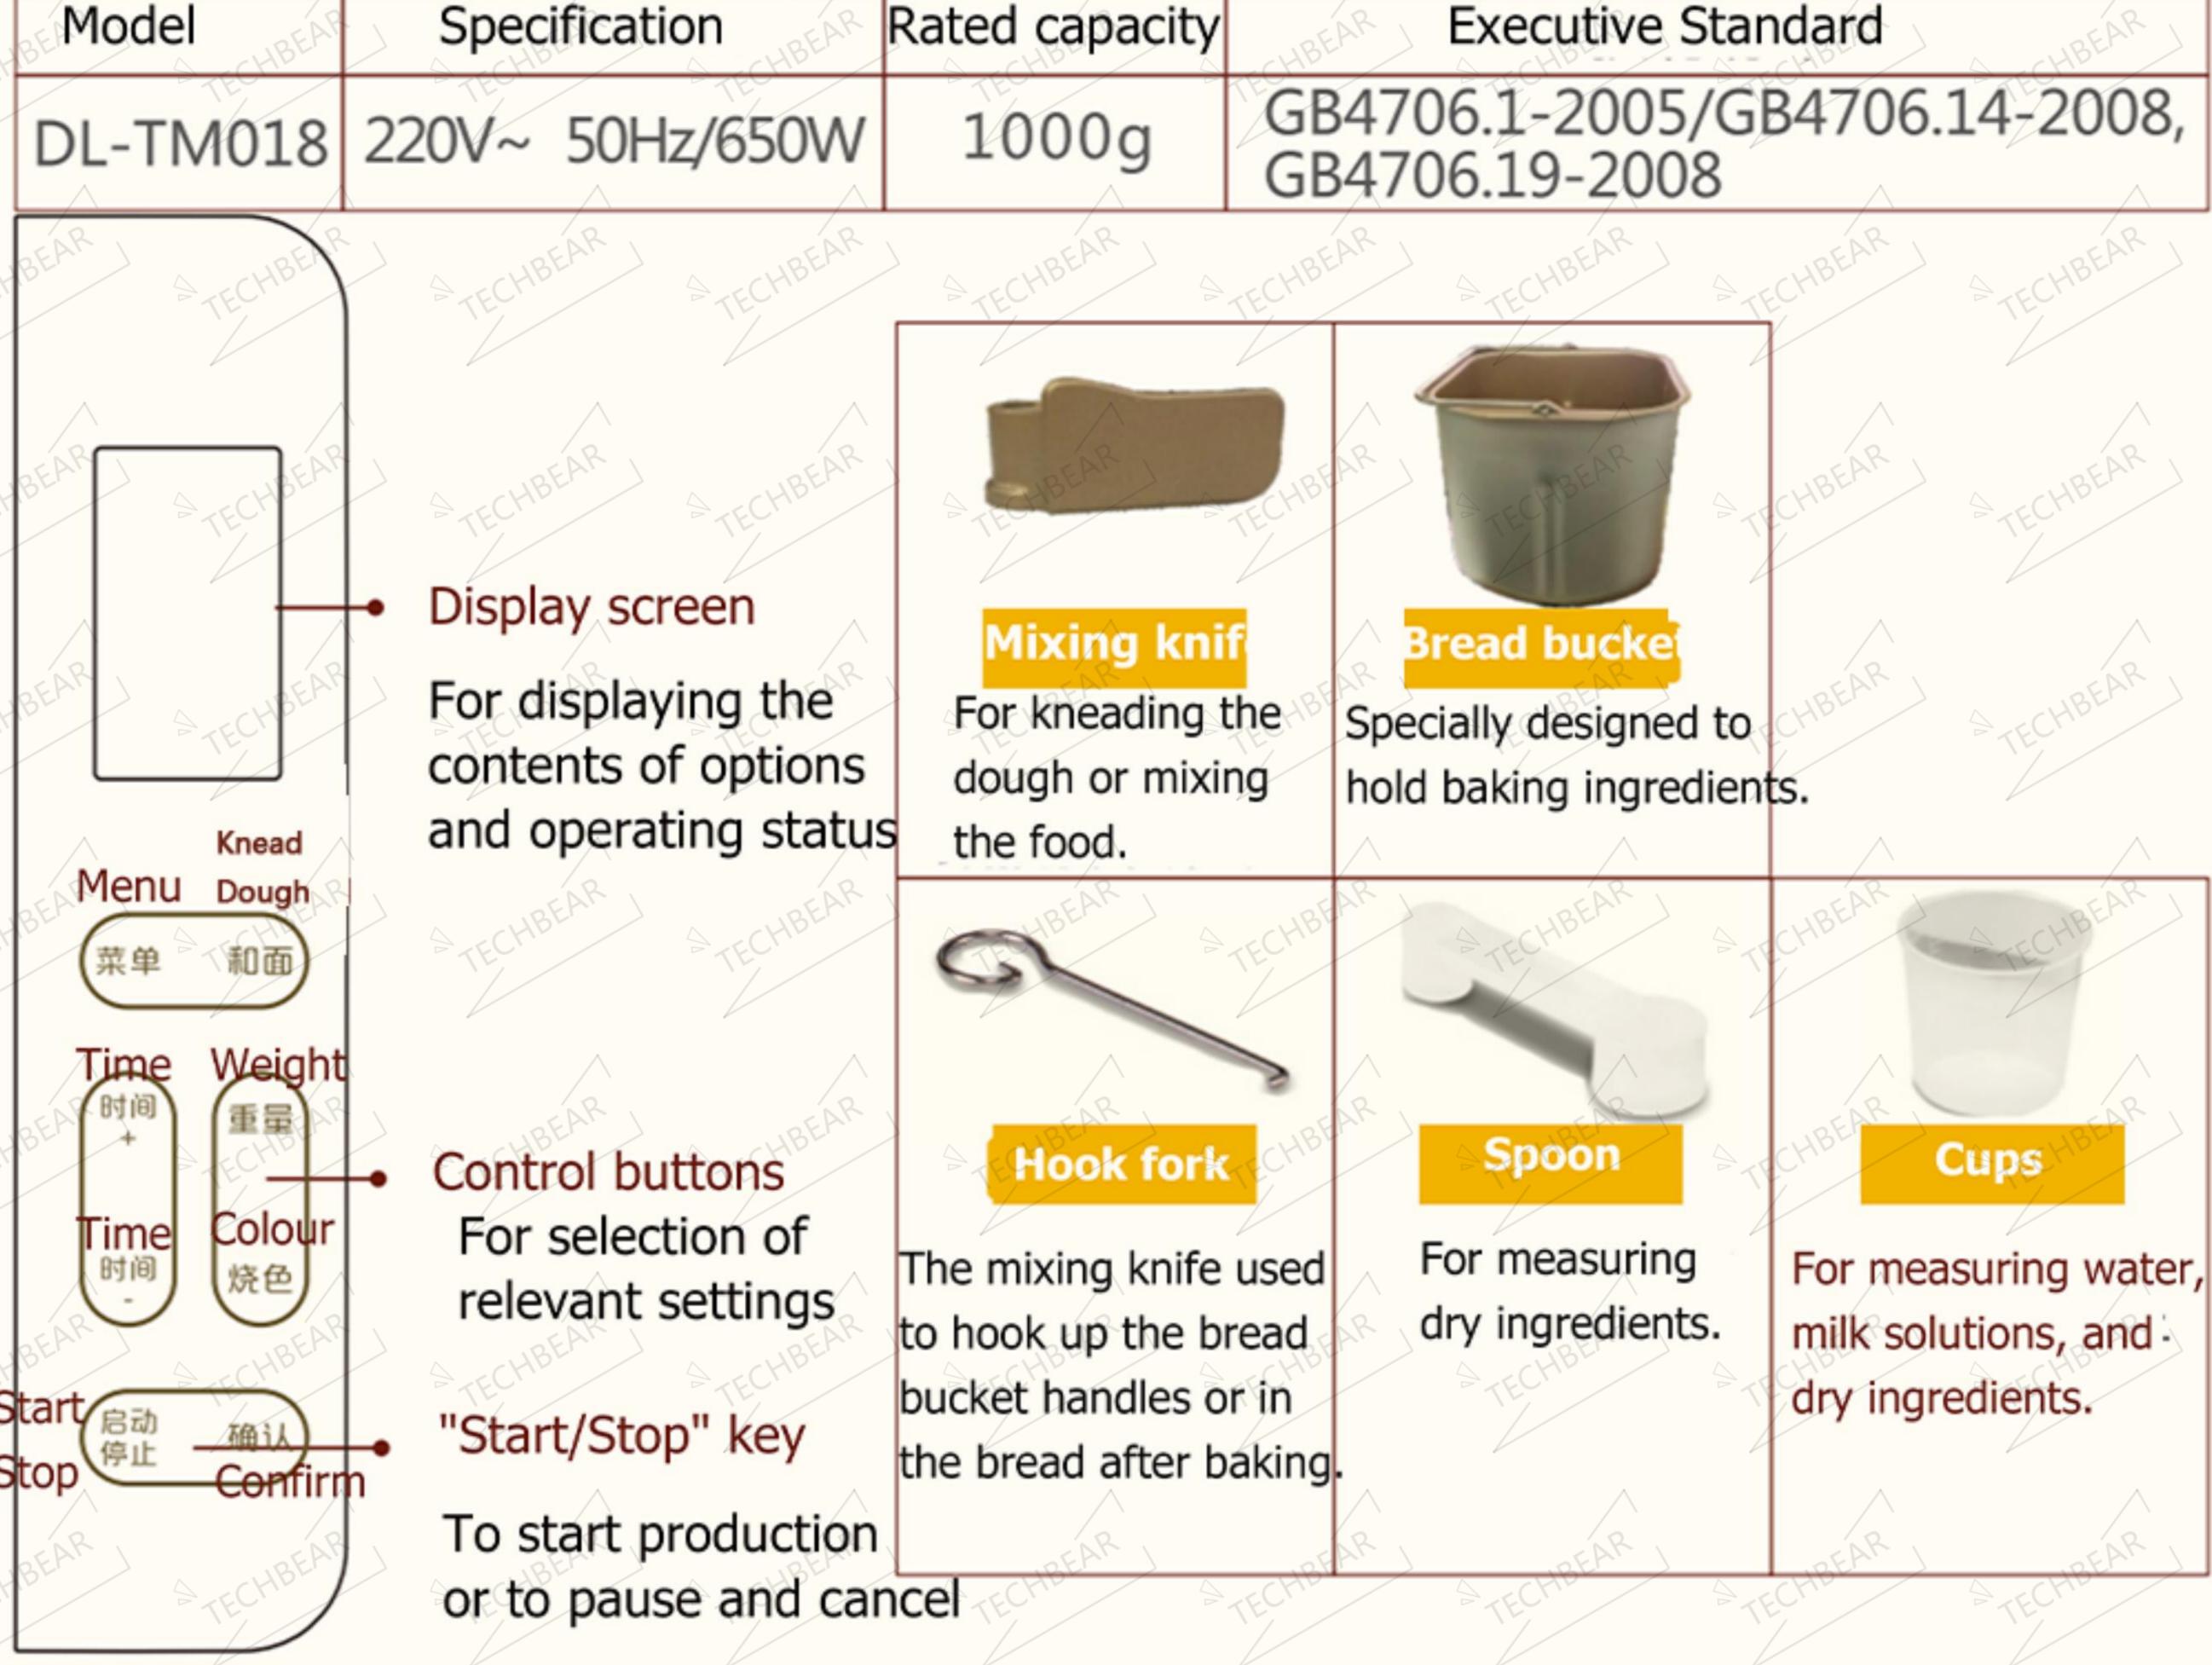

-02-

Power on

- When the power is switched on, the machine emits a long beep and the display lights up.
- When powered on, the machine displays the default menu, default weight and default firing colour.

Start/Stop

- To start, press this key and the machine will sound a short beep, the machine will start randomly, after starting the machine will lock the production menu, this state can only be paused or cancelled;
- To pause or resume work, press this key briefly, a short beep will be heard and the machine will pause, press again briefly and the machine will restart (if there is no next operation after pressing pause for more than 10 minutes, the machine will automatically resume the program and continue working);
- To cancel the current work and reset the work program, press and hold this key, a beep will be heard and the machine will return to standby, the display will return to the menu selection interface.

Menu selection:

- The first 24 items of this product are fixed menus, the 25th item is customized as a self-programmed menu.
- Press the "Menu" key, the display will show the menu number in turn, press this key repeatedly until the
 corresponding menu appears, then stop the key action, you can default selected.
- If the "Menu" key is not pressed, the machine will default to the "Standard bread" programme.

Menu shortcuts.

• Dough key: corresponds to the menu "Dough" function.

Burnt

- The darker the colour of the crust, the crisper the crust.
- Press the "Colour" key and the display will show "Light, Medium, Dark" in turn.

Weight

- Press the "Weight" key and the display will show "Adjustable weight" in sequence.
- Press the key repeatedly until the corresponding option appears and stop the key action to select by default.

Time

- This function key can be used for appointment functions (delaying the start of the production) or for some menus with customisable working times.
- Individual menus can be adjusted by pressing "Time +" or "Time -";
- When all the above settings have been completed, press the "Start" button to start working.

Note: Do not use perishable ingredients, such as eggs, fresh milk, etc. when using the reservation function.

How to use Cloud Menu

- This function allows you to manually set the time for each stage of the toaster to achieve different gourmet results;
- Select the menu "Cloud Menu" and press "Confirm" to enter "First Mix". Press the "Confirm" button, press the "Time +/-" button to set the first fermentation time and press the "Confirm" button. In the same way, set "second stirring", "second fermentation", "third stirring", "third fermentation", "third fermentation" and "baking" in the same order. ", "Bake", "Keep warm", time, press "Start/Stop" and press "Start/Stop" again to start working.

Note: To protect the life of the motor, the first fermentation time must not be less than 10 minutes.

Common Problems with Toasters

.1	CHBEAT A CHBEAT	J CHBEAN J CHBEAN J	CHBEAT CHBEAT
No.	Problems	Cause analysis	Solution measure
R A	Smoke comes out of the heat dissipation	The first time you use it, there is a layer of protective oil on the surface of the heater.	• It is recommended to empty the toaster before first use.
	hole during baking	Ingredients are sticking to or near the heater.	Unplug and clean the heating tube, be careful with the heating tube.
2	Difficulty in removing bread	The mixing knife sticks tightly to the spindle inside the bread drum.	After removing some of the bread, soak the bread drum in hot water for 10 minutes and remove the mixing knife to clean it.
	EAR	ERP	EAR
	ECHBE TECHBE	Programmes are not selected	TECHBE! STECHBE! STECHBE!
3	Insufficient mixing, high resistance as if the motor is not turning.	appropriately The mixing knife hole may be damaged; the motor may be damaged (Take out the bread bucket and check whether	Check that your recipe is suitable for the menu. If there is any abnormality, please contact the service personnel.
2	ECHBEAR > TECHBEAR	the power idling is normal).	TECHBEAR STECHBEAR STECHBEAR STECHBEAR
^			
4	I can hear the motor rotating, but the dough is not mixed.	The bread drum is not in place, or the dough is too large to stir.	• Check that the pail is placed correctly, that the weighing is accurate, or that the recipe is correct.
2		A F CHBEAR A F CHBEAR	FECHBEAR STECHBEAR STECHBEAR
5	Interruption of machine operation	Check that the programme is not interrupted when the "Start/Stop" button is touched accidentally.	If the interruption is within 30 minutes, reselect the settings and start. If the interruption time is too long, it is necessary to repeat the recipe and start again.
		LUBEAR LUBEAR)	LYBEAR J LYBEAR J LYBEAR J
	ECT.	Touch the "START/STOP" button and check if there is a warning.	• Follow the warnings to solve the problem.
6	Bread is brown and dry	Bread has been left in the pail for too long, resulting in excessive moisture evaporation.	Remove the bread as soon as it is ready, there is no need to keep it warm.
	-CHBEAR) A HBEAR	A CHBEAN A CHBEAN	-CHBEAR HBEAR HBEAR
7	Bread sinks in the middle and has a thick crust on the bottom.	After starting the machine, the lid is opened several times, resulting in heat loss.	• Do not open the lid during the last fermentation.


-12-


Cleaning and Maintenance of the Bread Machine





Body: Wipe with a damp soft cloth using a small amount of neutral detergent and dry with a dry cloth, do not soak the body in water or use strong acidic or alkaline detergents.

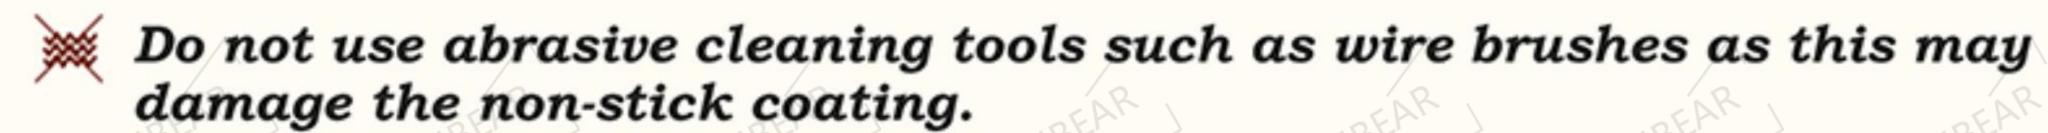

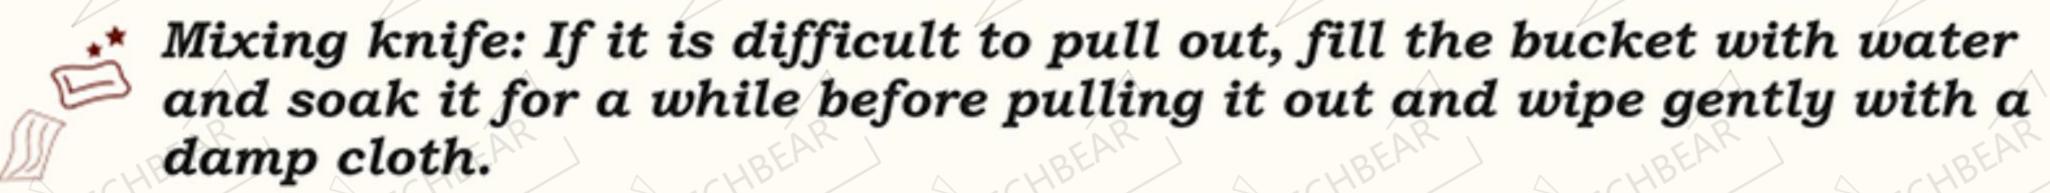

Lid and window: Do not soak the lid in water, just wipe with a damp cloth.

Fork, measuring spoon and measuring cup: wipe with a damp soft cloth and dry with a dry cloth.

"Confirm" button


• Only suitable for use in the Cloud menu, no other menus are available

Finish

• The bread machine intelligently outputs the process and completion time according to the different menus and the corresponding settings, and when it is finished, the machine sounds a beeping alarm and starts to keep warm automatically.

First Time Use

Note: The following is a general diagram, if the machine program is upgraded, the default time of the program will be changed without notice, please refer to the actual product!

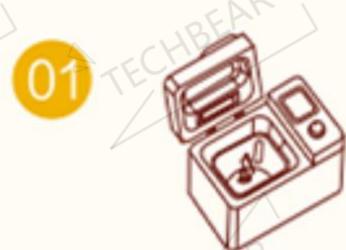

Ensure that all the packaging ingredients are removed from the bread machine, leaving

Empty Baking Tip: For the first time, please bake for 10 minutes to remove the anti-corrosion coating from the heaters and the bread

only the bread bucket and mixing knife inside the machine.



Operation: Install the bread bucket in place, add a small amount of water, then switch on the power, select the "Bake" menu and press the start button. There may be a slight smoke when

baking and then the "bake" function is selected. Then start the process of removing the protective coating, which is normal.



When the baking process is over, unplug the power supply, put on the insulated gloves and take out the bread bucket, wait for the machine to cool down and then clean the bucket. When the machine has cooled down sufficiently, the machine can only be used for the next step.

Precautions for use (the following is a general diagram, please refer to the actual product!)

Installation and removal of the mixing knife

The blade is mounted protruding upwards on the spindle of the bread drum and rotates clockwise. Incorrect installation of the mixing knife will result in scraping of the bread bin.











Removal of Stirring Knife

When the mixing knife is stuck to the flour, you can remove the bucket by pressing the ends of the bucket with your left hand and rotating the knife with your right hand in the left and right directions.

Removal of bread bucket

Do not forcibly pull out, gently turn to the left 30 degrees, and then pull out.







Fetch Fruit box



1. The fruit caddy is on the back of the bread machine, squeeze the caddy handle. (Warning: Do not open this box during operation, but only after it has cooled down for use or cleaning.)



2. Then pull out the caddy drawer.



3. If you need to clean the fruit box, you can directly take out the fruit box in the drawer for cleaning.



To make a reservation, please press the "Time" button after step 5 to select the reservation time. The principle of the reservation time is: select the number of hours you want to eat the bread after, the maximum reservation time of the bread machine is 13 hours.



Step 1: Place the ingredients in the bread bucket and press the "Mix" button.





Press the "Start/Stop" button after setting the appointment time.



Step 2: Then press the "Time" button to adjust the mixing time.

Step 3: After setting the time, press the "Start/Stop" button and the machine will start working.

Note: When mixing, the machine will automatically pause for 10 minutes at the appropriate time to keep the motor in a safe condition.

-05--10-

How to Use the Bread Machine

Note: The following is a general diagram, if the machine program is upgraded, the default time of the program will be changed without notice, please refer to the actual product! Add the fruit ingredients to the fruit box before starting the machine, do not open the fruit box while the machine is working!



Step 1: Put the ingredients into the bread bucket according to the recipe ratios.



Step 2: Turn the bucket to the right to lock it in place.



Step 3: Press the "Menu" button to select the corresponding programme. If you do not press this button, the machine will default to the "Standard Bread" menu.



Step 4: Press the "Colour" button to select the colour of the bread.



Step 5: Press the "Weight" button to select the weight of the bread.



Step 6: Then press the "Start/Stop" button.

Keep Warm Function

The machine will automatically keep warm for 1 hour after baking. To stop keeping warm, press and hold the "Start/Stop" button (the texture and shape of the bread will vary after keeping warm, so it is recommended to remove the bread as soon as possible after baking).

Removing the Bread

Put on the gloves, open the lid and lift the bucket handle up with a hook and fork, then turn the handle counter-clockwise with your hand to lift the bucket out. Turn the bucket upside down and gently shake the bucket until the bread falls out. If the mixing knife is stuck in the bread, use the hook and fork to remove it, do not touch the mixing knife directly with your hands to avoid burns.

Memory Function

If the power is accidentally cut off during the bread making process, the bread maker will continue the same process as before the power failure if the power is turned back on with n 10 minutes, without the need to press any keys. If the power is cut off for more than 10 minutes, the original settings are cancelled. If the "Start/Stop" button is pressed during use, the machine will also start and continue to work on its own if no further instructions are given for more than 10 minutes.

Keeping Bread Fresh

As home-made bread does not contain preservatives, it has a short storage time. It is recommended to store leftover bread in a plastic bag or container for up to 3 days at room temperature and up to 10 days in the fridge.

Warning Tips

When you press "Start/Stop", the display shows "HHH" indicating that the temperature inside the machine is too high, please press and hold "Start/Stop" to switch off the machine and unplug it until it has cooled down completely. When pressing the "Start/Stop" button, the display shows "Err" indicating that the thermostat inside the machine is faulty and the machine needs repair. When pressing the "Start/Stop" button, the display shows "LLL" and flashes, indicating that the temperature inside the toaster is too low and the machine needs to be moved to a higher temperature place to operate again.

Order of the Ingredients



To ensure the fermentation effect, dry yeast should avoid direct contact with water, salt and butter, so the correct order of materials placement is as follows:



Start with water or milk.

The water temperature for making bread should be 20-25 °C, and 45-50°C for quick bread. Pay attention to the water temperature should not be too high, otherwise the fermentation effect will be reduced.



If adding eggs, add water/milk before adding.

It is recommended to use warm water in winter and add slightly less water than in summer.



Put salt near the corner of the bread bucket.

Salt suppresses yeast reproduction and can be omitted if you don't like it, but the bread may rise more than normal.



Put sugar in a corner of the bread bucket.

General use of white sugar, special requirements can be used brown sugar, powder sugar or sugar.



Add butter or cooking oil.

The butter should be melted first, or cut into small particles, it is recommended not to add at first, stir for a while before adding.



Add the flour, trying to cover the surface.

The flour used to make bread is a kind of high gluten flour, which is only available in special food stores. If you can't find it, you can go to the supermarket to buy high gluten dumpling flour instead.



Make a dent in the flour with your finger.

High gluten flour for bread, medium gluten flour for steamed buns, low gluten flour for cookies, cakes, don't go wrong.



Place the yeast in a small pit, making sure that the yeast does not come into contact with water and salt.

There are two kinds of yeast, active dry yeast and instant yeast, instant yeast is faster and less, half a scoop of instant yeast is equal to about 1 scoop of active dry yeast, baking powder, soda is mainly used to make fast bread and cake, is no fermentation time. (It's best to have a small electronic scale so you can get a better handle on the portion size.)



Put the bread bucket on the rotating shaft at the bottom of the machine, turn clockwise until it is locked, close the cover, turn on the power supply, and select setting.

Reference Recipe (for Reference Only)

Warm Tips: The recipes given in this manual or in the recipes are the best solutions after repeated testing and verification by East Atrophy Appliances. The actual weight of the baked bread will be lighter than the specified capacity (450g or 750g or 1000g), depending on the eating habits of the domestic population.

Standard Bread

Super fluffy sweet bread: available from the "Sweet Bread" ment

Bread Reference	Serves 4-6	Serves 2-4	Serves 1-2	Bread Reference	Serves 4-6	Serves 2-4	Serves 1-2
Water or milk	150mL	120mL	90mL	Water or milk	120mL	100mL	75mL
Salt	1-2g	1 g	1 g	Salt	1-2g	1 g	1 g
Caster sugar	36-45g	30-38g	24-30g	Caster sugar	38-50g	33-44g	27-36g
Eggs	1pc	11 CHBER	11 CHBEN	Eggs BE	1pc	14	14
Softened butter	18-24g	15-20g	12-16g	Softened butter		220g	15-18g
High gluten flour	300g	250g	200g	High gluten flour	20-25g	18-22g	180g
High sugar tolerant yeast	4g	3.5g	3g	High sugar tolerant yeast	250g	3.5g	3g
Weight range selection	1000g	700g-750g	450g-500g	Weight range selection	4g1000g	700g-750g	450g-500g

Tip: If you want the bread to taste better, take it out as soon as possible after it is ready. The longer the bread is kept warm or stored, the harder it will be.

- 1) Please use yeast that is resistant to high sugar (ordinary high active yeast does not work well). The amount of yeast on the dry flour can be adjusted appropriately when using (it can be reduced when the bread is too big for the top, and increased when it is too small).
- 2) If the flour contains 13% protein or more per 100g, it is considered high gluten flour (not suitable for cakes, dumplings and Chinese buns).
- 3) Please use an electronic scale for weighing the ingredients. For yeast, use a small spoon to measure one small spoonful = 3g (measuring cups are only suitable for measuring liquid ingredients).
- 4) The amount of sugar should not be adjusted beyond the permitted range. It is not necessary to use the post-oil method.
- 5) In winter, use warm water or milk at about 40°C. Increase the yeast by an appropriate amount.
- 6) The amount of flour used determines the size of the loaf, not the weight of the loaf. The lighter the bread, the more fluffy it will be.
- 7) You can use unflavoured liquid frying oil instead of butter, half the amount of butter (the less oil you use the shorter the shelf life).
- 8) If you need to shape the bread by hand, reduce the water by 10-15g.
- 9) When the bread is ready, please pour it out as soon as possible, put it on a rack to cool and store it in a sealed container. (Delayed removal of bread from the barrel will cause serious deformation and shrinkage.)

TECHBEAR SECHBEAR SECHBEAR SECHBEAR SECHBEAR SECHBEAR					
Batching	Water	Milk	Yeast		
450g ≈ 1 lb	1 cup ≈ 220g	1 cup ≈ 220g	tsp 1 tbsp ~ 3g		

Water, fresh milk and other solutions can be measured in measuring cups, which should be clean and free from impurities before measurement. (Except for yeast, all other ingredients are recommended to be weighed electronically as far as possible to ensure accurate dosage)

Note: When stir-frying dried goods of the size of peanuts, pistachios, etc., due to the shape factor, it may cause the leaves to get stuck, in this case, you can pause the equipment, then use chopsticks and other tools to break open the stuck dried goods, and then start making again, it will not damage the machine itself!