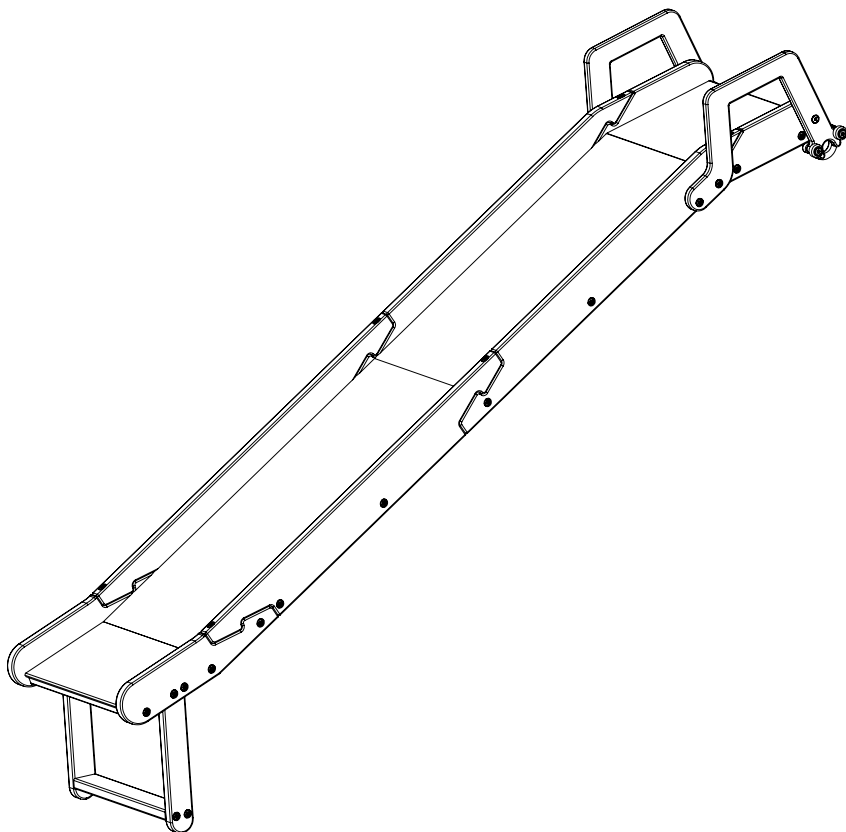 




## USER MANUAL



SLIDE WITH LEGS

 **WARNING!** Read this manual carefully before use

## SCOPE OF APPLICATION

A complex with a bridge is suitable for developing muscle strength, endurance, coordination, and balance. The design aligns with the Montessori philosophy, encouraging children to independently explore their body's abilities and interact with their environment. This playground offers a versatile solution for the physical, creative, and social development of children in various settings.

Recommended age: For users from 3 to 8 years old.

Maximum Load Capacity: 60 kg / 132 lbs.

## TERMS OF USE

- Only for indoor use.
- For domestic use.
- Tighten the bolts every 2 months.
- Use not more than 1 rope accessory per time.
- A safety mat or soft landing area is recommended to minimize injury risks.
- The product has no expiration term but change the product or the details of the product immediately if any damage occurs.
- 2 years warranty.

### **Note:**

- Warranty does not apply if the product is being damaged due to the weather conditions, as it is for indoor use only;
- Manufacturer reserves the right to make structural changes to the product without prior notice, provided such changes do not affect product's functionality, safety, and key features;
- In case of any inappropriate use or failure to comply with the instructions, the manufacturer and seller shall bear no responsibility and the warranty shall not apply.
- Responsibility for any damage incurred by children during play on the furniture rests with the supervising adults; if a child is injured while playing with the product, please treat the wound and consult a doctor.



## SAFETY MEASURES



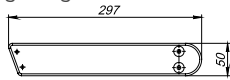
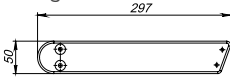
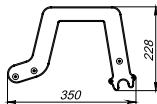
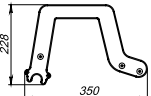
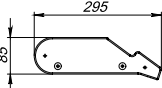
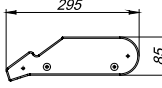
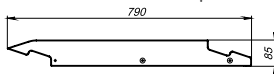
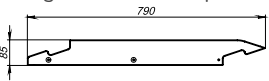
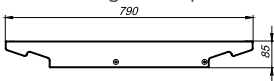
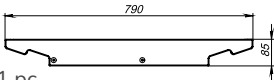
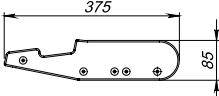
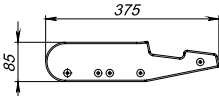
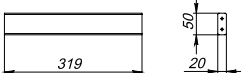
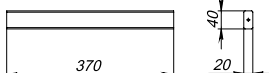
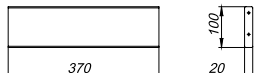
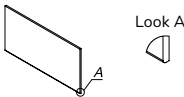
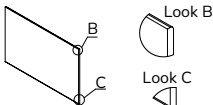
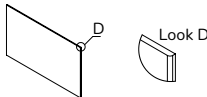
- The product must be assembled by an adult.
- In disassembled state the product contains small parts constituting a choking hazard for the kid; after the assembly, ensure all screws and fastenings are securely tightened; put the spare screws, if any, out of the reach of children.
- To be used under the direct supervision of an adult only. Do not leave the kid alone with the product.
- Do not exceed the maximum weight limit.
- Do not use on uneven or hard floor.
- Do not use the product if it has any visible damage or positioned abnormally.
- Do not use the product on the wet or contaminated floor.
- Do not place near hazards: ensure the climber is located at least 2m away from windows, sharp corners, hard furniture or any other hazards. The area around the climber should be clear and safe.
- Do not place the product close to the sources of radiant heat or under the direct sun rays.
- Responsibility for any damage incurred by children during play on the furniture rests with the supervising adults. If a child is injured while playing with the product, please treat the wound and consult a doctor.
- Avoid modifying the product or adding homemade extensions unless you are sure they are safe and compatible. Modifications can affect the stability and safety of a climber.
- In case of any inappropriate use or failure to comply with the instructions, the Manufacturer and Seller shall bear no responsibility and the warranty will not apply.
- To prevent overcrowding and ensure stability, limit the number of children using the climber at one time based on the size and design of the climber.









- Proper Footwear: Ensure that children wear appropriate footwear to prevent slips and falls. Shoes should have a good grip and be suitable for physical activity.
- Using a soft landing area around the product is recommended.

## CARE AND MAINTENANCE


- To clean the item, wipe it with a damp cloth or wet wipes.
- Avoid excessive moisture - water can penetrate into seams or microcracks and cause damage to wood; in case of spillage on the product - wipe dry.
- Do not use abrasive sponges, aggressive detergents, alcohol or acetone.
- Do not leave the product outdoors or near heat sources (batteries, fireplaces).
- With the appearance of scuffs or fading, you can easily restore a layer of varnish or paint - use the same water base that the product was treated with. Clean the surface and grind lightly before re-coating.
- If the product is not used for a long time, store it in a dry room with moderate humidity (40-60%); avoid storage in damp or uninsulated areas.
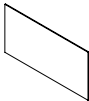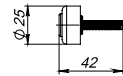  
## ASSEMBLY INSTRUCTIONS

<p>1 - Right leg</p>  <p>1 pc.</p>	<p>2 - Left leg</p>  <p>1 pc.</p>	<p>3 - Right handle</p>  <p>1 pc.</p>
<p>4 - Left handle</p>  <p>1 pc.</p>	<p>5 - Upper left side panel</p>  <p>1 pc.</p>	<p>6 - Upper right side panel</p>  <p>1 pc.</p>
<p>7 - Left inclined side panel</p>  <p>1 pc.</p>	<p>8 - Right inclined side panel</p>  <p>1 pc.</p>	<p>9 - Left straight side panel</p>  <p>1 pc.</p>
<p>10 - Right straight side panel</p>  <p>1 pc.</p>	<p>11 - Left lower side panel</p>  <p>1 pc.</p>	<p>12 - Right lower side panel</p>  <p>1 pc.</p>
<p>13 - Beam 1</p>  <p>2 pcs.</p>	<p>14 - Beam 2</p>  <p>7 pcs.</p>	<p>15 - Beam 3</p>  <p>2 pcs.</p>
<p>16 - Panel 1 (369x190x6)</p>  <p>1 pc.</p>	<p>17 - Panel 2 (369x242x6)</p>  <p>1 pc.</p>	<p>18 - Panel 3 (631x369x6)</p>  <p>1 pc.</p>


19 - Panel 4 (738x369x6)  1 pc.	20 - Clamp  4 pcs.	21 - Lock  2 pcs.	a - Screw 6.3x30  2 pcs.
b - Hex key 4 mm  1 pc.	c - TORX self-tapping screw 6x50  1 pc.	d - TORX self-tapping screw 6x70  20 pcs.	e - TORX key T30  1 pc.

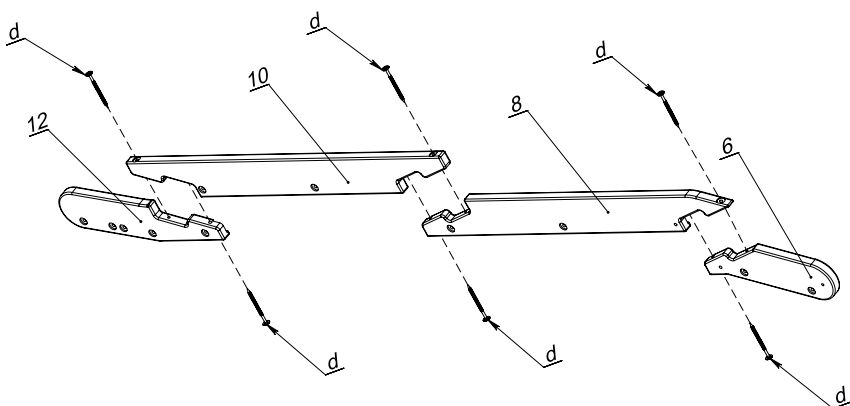 1




Assemble the right side panel. Sequentially connect parts 6, 8, 10, and 12 using self-tapping screws (d) and key (e). See Fig. 1.

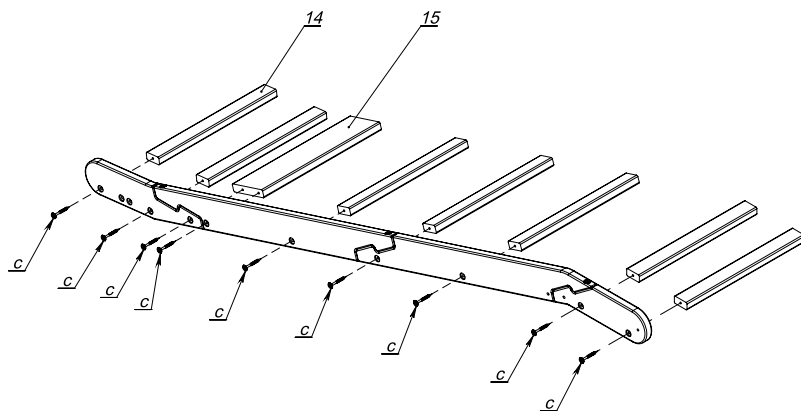 2



Insert beams (14, 15) into the grooves of the previously assembled side panel and screw them with self-tapping screws (c) using key (e). See Fig. 2.

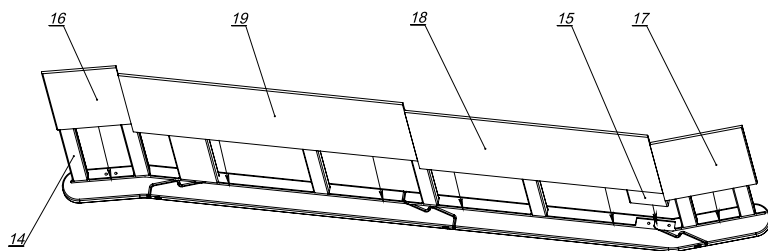 3




Place the previously assembled structure on the side panel so that the beams (14) are vertical. Insert panels (15–19) into the grooves. See Fig. 3.


4

Insert panels 17 and 18 into the grooves on parts 5 and 7 respectively. Screw the side panels (5, 7) to the beams (14) using self-tapping screws (c) and key (e).

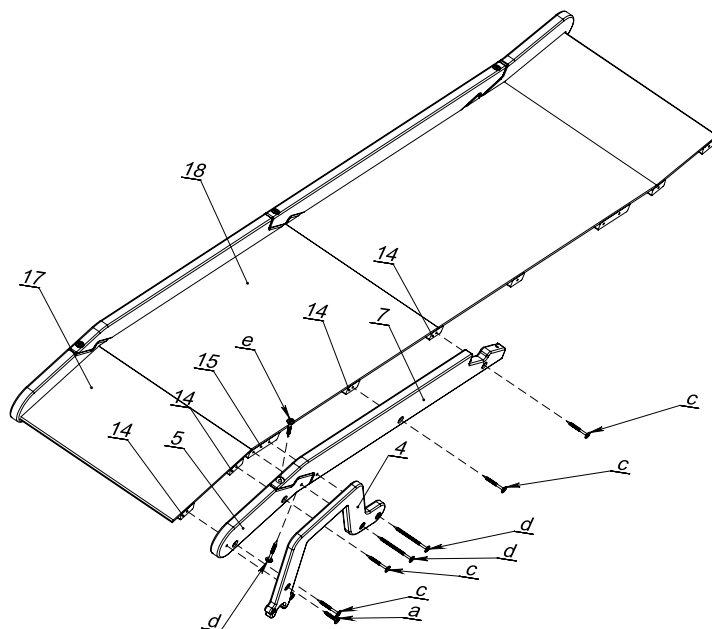 Connect side panels (5, 7) together using self-tapping screws (d) and key (e). Attach handle (4) with self-tapping screws (d) and key (e), as well as screw (a) and key (b). See Fig. 4.




5

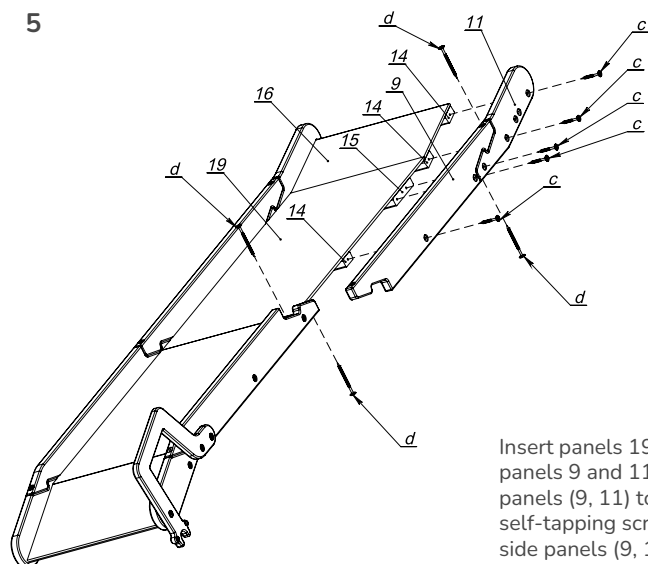 


Insert panels 19 and 16 into grooves on side panels 9 and 11 respectively. Screw side panels (9, 11) to beams (14, 15) using self-tapping screws (c) and key (e). Connect side panels (9, 11) together with self-tapping screws (d) and key (e). See Fig. 5.

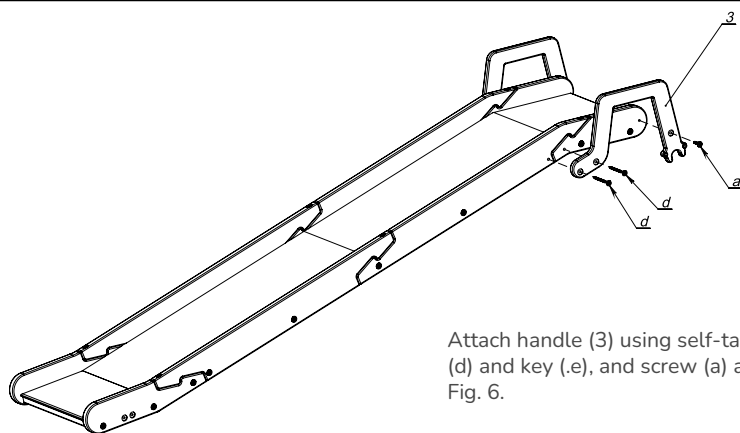 6




Attach handle (3) using self-tapping screws (d) and key (e), and screw (a) and key (b). See Fig. 6.

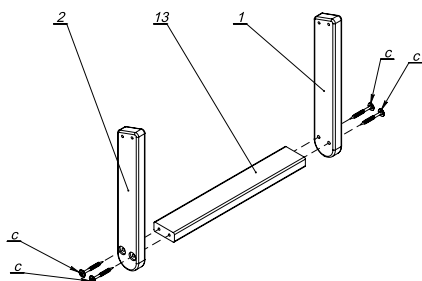 7




Assemble the leg. Take parts 1, 2, and 13 and fasten them together with self-tapping screws (c) using key (e). See Fig. 8.

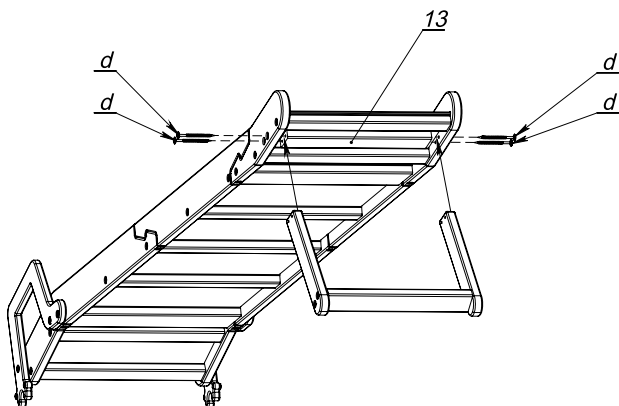 Insert the previously assembled leg with beam 1 (13) from below, aligning holes with mountings on the side panels and screw with self-tapping screws (d) using key (e). See Fig. 8.



9

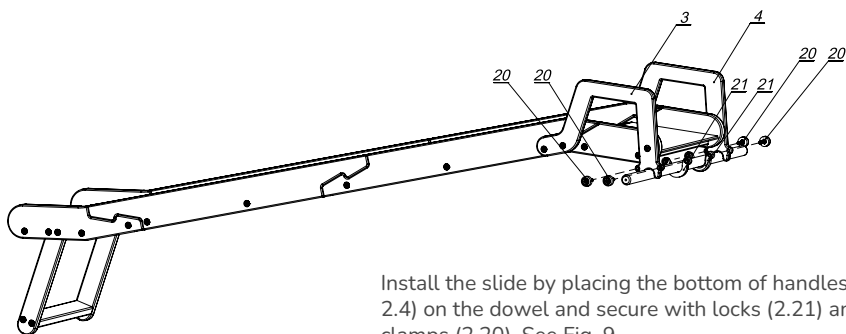 

Install the slide by placing the bottom of handles (2.3, 2.4) on the dowel and secure with locks (2.21) and clamps (2.20). See Fig. 9.

## DISPOSAL AND ENVIRONMENTAL INFORMATION

Dispose of the product in accordance with local waste regulations. Components can be recycled where applicable.

## MANUFACTURER

Look for manufacturer information on the product packaging.

## CONTACT INFORMATION

- ☎ + 1 804-500-1025 (USA, EN)  
+ 38 050 067 71 15 (UA)
- ✉ [unterstutzung@woodandhearts.de](mailto:unterstutzung@woodandhearts.de)  
[support.official@woodandhearts.com](mailto:support.official@woodandhearts.com)
- 🌐 [woodandhearts.de](http://woodandhearts.de)  
[woodandhearts.com](http://woodandhearts.com)