

Screen Display / Function	Icon	Icon Description
Pair Earbuds (Left & Right)		With the lid open, press and hold the button on the back of the case for 3 seconds to pair the earbuds (left & right). If currently connected to a phone, this will disconnect the Bluetooth connection. Close and re-open the lid to reconnect to the phone.
Power Button		<div><div> Press once: Wake screen</div><div> Press again: Sleep screen</div><div> Long press: Power off (Tap  to confirm,  to cancel)</div><div> Long press: Power on charging case</div></div>

#### Troubleshooting and tips

- If the earbuds are not working correctly, turn them on/off.
- If the earbuds won't turn on, recharge the battery and try again.
- If the earbuds won't charge, make sure the power supply works DC 5V>0.25A, and is not damaged.
- If the earbuds make no sound, adjust the volume.
- If the earbuds make no sound or do not show as an available device, make sure they are not paired to another device, if so, unpair the device and re-pair to the desired device.
- This device does not have a pairing code. If prompted for one, make sure you are connecting to the correct device. If you are not, "forget" the device and re-pair.

#### NOTE:

- The earbuds will power off if it is not used for more than 5 minutes.
- If the Bluetooth® connection range is more than 10 meters the earbuds / charging case will disconnect with a prompt sound from earbuds / in status bar of screen, indicating that the connection has been lost. If the connection is not re-established within 5 minutes, the earbuds will turn off automatically.

#### Need some help?

Can't get it to pair? Have a question or comment?



Call us 1-833-TGT-Tech

#### Safety

- Do not use near any water source
- Do not modify or repair this device
- Do not use in high temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth



Earbuds FCC ID: 2BAXW-TTY95

Charging Case FCC ID: 2BAXW-TTY95S

Model: TTY95 Input: 5V Max 0.25A Made in China

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct



4

the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- Target Corp.Mpls.MN,55403 Phone:1-833-TGT-Tech

5

## Heyday™ TWS Earbuds With Screen Case

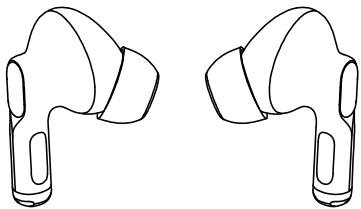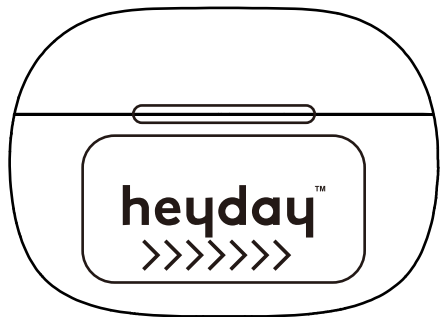

hey! welcome to your Heyday™ true wireless earbuds.  
Let's get you set up

#### Recharging charging case

- Full charge of the charging case requires approximately 2 hour.
- Plug the USB-C charging cable to charge.
- Plug USB-C end of charging cable into a DC 5V>0.25A power supply.

#### Earbuds Press/Hold instruction

Left	Right
VOLUME UP&ANSWER / END CALL	VOLUME DOWN&ANSWER / END CALL
PLAY / PAUSE	PLAY / PAUSE
Reset earbuds	Reset earbuds
Hold for 2 seconds, REJECT INCOMING CALL	Hold for 2 seconds, REJECT INCOMING CALL
Hold for 3 seconds, Power on	Hold for 3 seconds, Power on
Hold for 5 seconds, Power off	Hold for 5 seconds, Power off

SHORT PRESS   DOUBLE PRESS   FIVE TIMES PRESS   Hold

#### Screen display instruction

Screen Display / Function	Icon	Icon Description
Status Bar		Earbuds not connected to case
		Earbuds connected to case
		Earbuds, case, and phone connected
		Earbud battery (Yellow when charging)
Music		Rearbud battery (Yellow when charging)
		Case battery (Yellow when charging)
		Automatically synchronize the time of connected devicesTime display
		AM/ PM
Equalizer		Previous song
		Play/Pause
		Next song
		Operable when earbuds connected to case and phone
Ambient Sound		EQ toggle (Selectable when enabled)
		Next option
		EQ presets: JAZZ, VOCAL, BASS, CLUB, STUDIO, NORMAL
		Previous option
Spatial Audio		ANC Mode
		Transparency Mode
		NORMAL Mode (Default)
		Operable when earbuds connected to case and phone
Charging mode		Spatial audio toggle (Selectable when enabled)
		Cinema audio
		Music audio
		Gaming audio
Call Mode		Operable when earbuds connected to case and phone
		EQ presets: JAZZ, VOCAL, BASS, CLUB, STUDIO, NORMAL
		Previous option
		Operable when earbuds connected to case and phone

2

Screen Display / Function	Icon	Icon Description
Volume		Volume down
		Volume level (0-16) Volume up
Screen Brightness		Operable when earbuds connected to case and phone Previous option
		Screen brightness (Low/Medium/High) Next option
Find Earbuds		Operable when case only Locate left earbud
		Locate right earbud
Take Photo		Operable when earbuds connected to case When the camera is activated on the phone, Single-click the camera button to capture photos
		When the camera function is not in use, Single-click the camera button to turn up the volume
Voice Assistant		Operable when earbuds connected to case and phone, press once to activate, then again to deactivate Voice assistant activation/deactivate
		Answer Call
Call Mode		Reject Call
		The microphones of earbuds are activated
		The microphones of earbuds is muted
		Hang up the calling
Low Battery Alert		Low Battery Alert Note: When the charging case powers off due to low battery, connect it to a USB charger and long-press the power button to turn it on before charging the earbuds.
Charging mode		Plug in to charge, the charging icon displays for 2 seconds.

3

FRONT

P2

P3

P4

1

3