



65" 4K Ultra HD Smart TV with HDR

Model Number: ATV65UHDS-0319

INSTRUCTION MANUAL

AFTER SALES SUPPORT

  1300 886 649

 www.tempo.org

Model: ATV65UHDS-0319 Product Code: 7732 03/2019



Welcome

Congratulations on choosing to buy a BAUHN® product.

All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty.

We hope you will enjoy using your purchase for many years to come.

Contents

Welcome	2
General Safety Instructions	4
Warranty Details	9
Remote Control	10
Installation	14
Controls and Connections	16
Getting Started	23
Basic Operations	26
TV Guide	28
Recording	29
Media Mode	33
Smart TV	37
Menus	39
Troubleshooting	52
Specifications	54
Repair and Refurbished Goods or Parts Notice	55

General Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Follow all instructions and take notice of all the warnings.

This product complies with Australian Safety standard AS/NZS 60065 to ensure the safety of the product.



The RCM is a visible indication of a product's compliance with all applicable ACMA regulatory arrangements, including all technical and record-keeping requirements.



The equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require connection to electrical earth.



To reduce the risk of electric shock, do not remove the cover (or back).

This unit contains no user-serviceable parts inside. Refer all servicing to qualified service personnel only.



The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert you to the presence of non-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

IMPORTANT WARNINGS AND CAUTIONS

- Only connect this TV to a mains socket with a protective earthing connection.
- Do not change or modify the appliance in any way.
- Only use the attachments/accessories specified by the manufacturer.

IMPORTANT INFORMATION

If the TV is not positioned in a sufficiently stable location, it can be a potential hazardous and may fall. Many injuries, particularly to children, can be avoided by taking simple precautions:

- Use cabinets or stands recommended by the manufacturer of the television.
- Only use furniture that can safely support the television.
- Ensure the TV is not overhanging the edge of the supporting furniture.
- Do not place the TV on tall furniture (for example on a cupboard or bookcase) without anchoring both the furniture and the TV to a suitable support.
- Do not place the TV on cloth or other material between the TV and supporting furniture.
- Educate children about the danger of climbing on furniture to reach the TV or its controls.

General Safety Instructions (Cont.)

Installation

IMPORTANT

It is highly recommended that you install **Safety Straps** to prevent your TV from falling over. This is particularly important if young children have access to the TV. Safety Straps can be purchased separately from most electronic or hardware retailers. Please follow the instructions provided with the Safety Straps for correct installation.

When deciding on where to put the TV set, make sure the place is:

- Well ventilated, and away from damp and cold.
- Protected from overheating and away from direct sunlight.
- Away from moisture drips or splashes.
- Protected from excessive dust or grease.
- **Bookcase:** Do not install the unit in a confined space such as a bookcase or similar unit.
- **Heat:** Do not install the TV set near heat sources such as radiators, stoves or other audio visual equipment (including amplifiers) that produce heat.
- **Water:** Do not place containers with liquids (such as vases) or with small metallic objects on top of the unit. If liquid enters the unit or any metal object falls into the unit, it may result in short-circuit, fire or electric shock.
- **Fire or explosion:** Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the TV set.
- **Antenna:** Install the antenna away from high-voltage power lines and communication cables and make sure it is installed securely. If the antenna touches a power line, contact with the antenna could result in fire, electric shock or serious injury.
- **Ventilation:** Install the unit at an adequate distance from the wall to ensure sufficient ventilation. If the temperature inside the unit rises, it may result in fire.

Electrical Safety and Cord Handling

- **Voltage:** Before installing this TV set, make sure your outlet voltage corresponds to the voltage stated on the appliance rating label.
- **Protect from moisture:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture; do not use it anywhere near water; do not touch the power plug with wet hands.
- **Power outlet:** Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.

General Safety Instructions (Cont.)

- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- **Power plug:** Make sure the plug is properly installed before inserting it fully into the outlet. A loose or improperly inserted power plug may cause a fire.
- **Protect the cord:** Do not bend, twist or kink the power cord excessively. Do not allow anything to rest on or roll over the power cord and antenna cable. Doing so may cause a fire or an electric shock. Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- **Damage:** Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- **Disconnect:** Always grasp the plug when disconnecting the power cord. Pulling the cord can damage the internal wire and may cause a fire.
- **Terminals:** Terminals are HAZARDOUS LIVE and the external wiring connected to these terminals requires installation by an instructed person or the use of ready-made leads or cords.
- **Lightning storms:** Unplug this TV during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.

Usage Conditions and Restrictions

- **Adjustments:** Follow the instructions in this manual when installing and adjusting the TV set. Only adjust those controls that are covered in this manual, as improper adjustment of other controls may result in damage. If this happens, unplug the TV set and have it serviced by appropriately qualified personnel, or phone the after sales support line for advice.
- **Ventilation:** Do not cover the ventilation openings with items such as newspapers, tablecloths, curtains etc. as this could impede ventilation.
- **Cabinet slots:** Do not insert objects of any kind into this unit through the cabinet slots, as they could touch the current-carrying parts or short-circuit parts, resulting in fire, electric shock or damage to the unit.
- **Smoke or odour:** If you notice any unusual odours or smoke around the unit, immediately disconnect the unit from the outlet and contact the service centre. Failure to do so may result in fire or electric shock.
- **When not in use:** When not using the TV for long periods of time, disconnect the power cord from the wall outlet. Dust could accumulate over time on the unit and cause it to generate heat and ignite, or deteriorate insulation, which may result in an electrical fire.
- **Moving:** When moving the unit, be sure to turn it off and unplug it from the wall outlet. Moving the unit with the power cord connected to the outlet may cause damage to the cord, resulting in fire or electric shock.

General Safety Instructions (Cont.)

- **Packaging:** This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use.
- **Batteries:** When removing the batteries from the remote control, make sure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery. Please dispose of batteries responsibly by recycling at your nearest recycling centre.

WARNING!

Do not expose batteries to excessive heat such as sunshine, fire or sources of heating.

- **Usage restriction:** This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the product by a person responsible for their safety.
- **Children:** Supervise young children to ensure they do not play with the TV.

Cleaning and Maintenance

- **Unplug:** To reduce the risk of fire and electric shock, always unplug the TV before cleaning it.
- **Cleaning:** Only use a soft, dry cloth for cleaning the TV; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent or other chemicals. Wipe off any moisture, dirt or dust on the power plug pins with a clean, dry cloth.
- **Repair:** If the unit requires repair, contact the after sales support line; never disassemble or modify the unit or attempt to service it yourself.
- **Service:** Refer all servicing to qualified service personnel. Servicing is required when the TV has been damaged, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the TV, when the TV has been exposed to rain or moisture, does not operate normally, or has been dropped.

General Safety Instructions (Cont.)

Responsible disposal of the packaging

The packaging of your TV has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Responsible disposal of the TV

At the end of its working life, do not throw this TV out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Contact your local authority for your nearest recycling centre. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

Climate

If moving the apparatus from one location to another, for example from a cold environment to a warm one, allow sufficient time for the apparatus to acclimatise to the new location before switching it on. In tropical climates, keep the air surrounding the unit sufficiently dry to avoid condensation forming.



65" 4K Ultra HD Smart TV with HDR

Warranty Details

Register your purchase at www.aldi.com.au/en/about-aldi/product-registration to stay updated with important product information

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Remote Control

- 1 **⏻/⏻ POWER:** Press to enter or exit Standby mode.
- 2 **NUMBER BUTTONS:** Use to directly enter channels or to input passwords.
- 3 **INFO:** Display the current program information on the screen.
- 4 **■ ■ ■ ■ :** Functions are according to the on-screen display.
- 5 **QMENU:** Press to enter Quick Menu.
- 6 **OK:** Select the current item or enter into the function of the menu of the next level.
- 7 **▲/▼/◀/▶:** Press the direction buttons to select menu options or settings.
- 8 **⚙ MENU:** Press to enter the menu screen for various optional adjustable settings.
- 9 **GUIDE:** TV Guide (DTV mode).
- 10 **🏠 SOURCE:** Select the input signal source and access the USB multimedia and smart apps.
- 11 **+ ▴ ▾ -:** Press to adjust the volume level up or down.
- 12 **NETFLIX:** Launch the Netflix app.
- 13 **⏸ PAUSE:** Pause playback (in Media/PVR mode).
- 14 **▶ START:** Start playback (in Media mode).
- 15 **◀◀:** Reverse playback rapidly (in Media mode).
- 16 **◀◀:** Skip to the beginning of the previous chapter/track (in Media mode).



Remote Control (Cont.)




- 17** **⏮**: Skip to the beginning of the next chapter/track (in Media mode).
- 18** **⏭**: Advance playback rapidly. (in Media mode).
- 19** **REC**: Press to start recording (in DTV mode).
- 20** **■ STOP**: Stop playback (in Media/PVR mode).
- 21** **YouTube**: Launch the YouTube app.
- 22** **☰**: Enter Teletext. Press again to exit.*
- 23** **▲ P ▼**: Press to select channels in ascending or descending order.
- 24** **LIST**: Press to display the channel list. Press again to exit.
- 25** **EXIT**: Quit the current interface.
- 26** **↶**: Return to the previous menu or return to the previous channel (DTV mode).
- BACKSPACE**: Delete text.
- 27** **AUDIO** **∞/II**: Press to select the NICAM modes in Analog TV mode. Press to select desired audio language in Digital TV Mode.
- 28** **MUTE**: Press to mute or restore sound.

* Teletext or Austext is no longer available. However, one teletext option, "closed captions" is still working on most Australian television channels. This service allows you to activate subtitles for television programs that provide it.

Remote Control (Cont.)

Easy Remote Control

- 1 POWER:** Set the TV to standby mode; press it again to turn the TV on.
- 2 OK:** Confirm selection.
- 3 ◀/▶/▲/▼:** Navigate on-screen menus and adjust system settings to your preference.
- 4 VOL + :** Turn the volume up.
- 5 VOL - :** Turn the volume down.
- 6 ↶ BACK:** Return to the previous menu/ screen or return to the previous channel (DTV mode).
- 7 P ▼ :** Switch to the previous channel.
- 8 P ▲ :** Switch to the next channel.
- 9 SOURCE:** Change the input source.

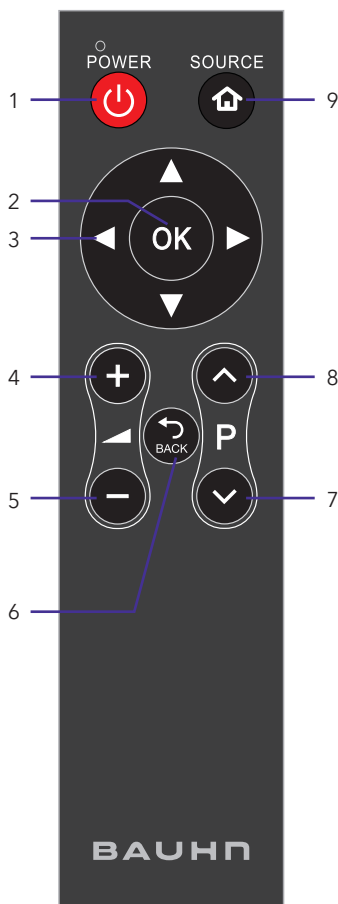

Remote Control (Cont.)

Using the Remote Control

To use the remote control, point it towards the remote sensor at the front of the TV.

The remote control has a range of up to approximately five metres (5m) from the TV at an angle of up to 30 degrees each to the right and left of the sensor, as illustrated on the right.

The remote control will not operate if its path is blocked.

NOTES:

- Do not drop, step on or otherwise impact the remote control as this may damage the parts or lead to a malfunction.
- The operating distance may vary according to the brightness of the room.
- Do not point bright lights at the remote control sensor.
- Do not place objects between the remote control and the remote control sensor.
- Do not use this remote control while simultaneously operating a remote control of other devices.


Remote Control Preparation

Install the batteries in the back of the remote control, ensuring to match up the polarity markings (+/-).

1. Open the cover at the back of the remote control.
2. Install two AAA size batteries. Make sure you match the "+" and "-" ends of the batteries with the markings inside the compartment.
3. Replace the cover.

- The batteries should last for around one year. The service life of the batteries will depend on how often they are used.
- If the remote control does not work when operated near the TV, replace the batteries.

NOTE: Remove the batteries if the remote control is not going to be used for a long time.

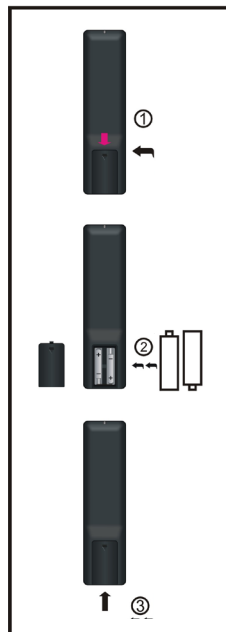

Installation


Your TV is packaged with the stand and the cabinet separated. Before using the TV, install the stand as described below, or if you want to mount it to a wall, see the next page for mounting advice (wall mount is not included).

- Make sure the TV is unplugged from the power supply before installing or removing the stand.
- The TV panel may be awkward to install on your own. We recommend you ask someone to help with installation and/or removal of the stand.
- **WARNING:** Do not place the TV standing upright without its stand attached, as this may damage the infra-red remote sensor at the bottom of the TV.

Attaching the Stand


Step 1

Place a soft cushioned material on top of a flat surface to prevent damaging the screen panel. Then place the TV screen flat on top, with the screen side facing down, as illustrated on the right (1).

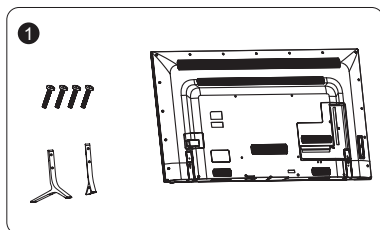


Step 2

Align the stand base to the installation point, as illustrated on the right (2).

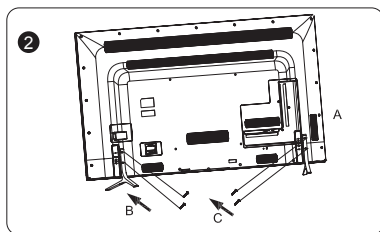

Step 3

Tighten the screws (supplied) with a screwdriver to affix the stand to the panel, as illustrated on the right (3).

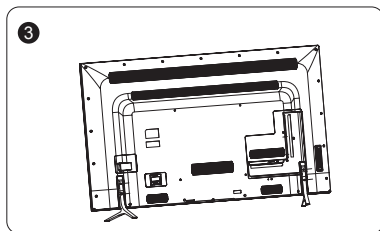

CAUTION!


- Do not apply excessive force as this may damage the screw holes.
- Unplug the power plug first when installing or removing the TV Stand.
- To avoid any damage to this TV, we recommend you ask someone to help with installation and/or removal of the stand.

Installation (Cont.)

Wall-Mounting Instructions

- Make sure the TV set is unplugged from the power supply before wall-mounting it and removing the stand.
 - We recommend you contact a professional for assistance when wall-mounting the TV. We assume no liability for any eventual damage to the product or injury to yourself if you mount the TV on your own.
-
- The TV set is equipped with holes on the back panel for use with wall-mounting brackets (not included). Please use the illustration below as a reference when buying wall-mounting brackets.
 - Use four standard M6*30mm screws (or longer, depending on the mounting bracket) to mount this TV (not included).


Back of the TV

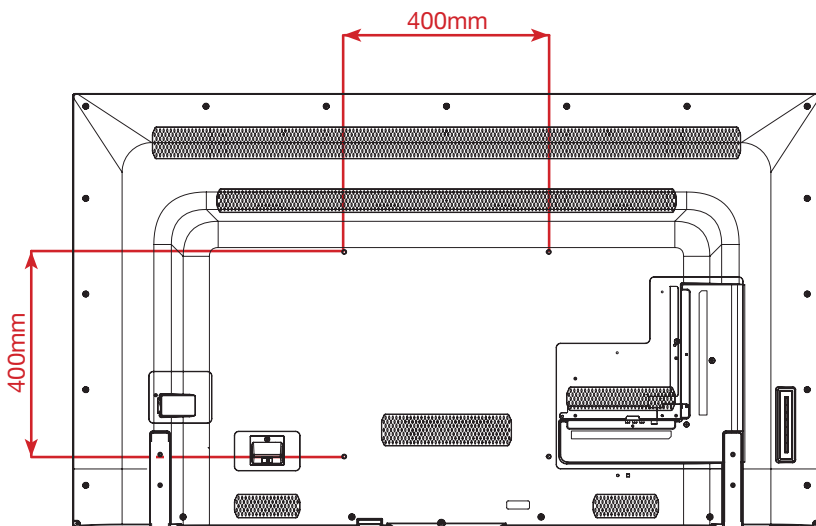



NOTE: The screws in the package are for securing the TV stand only. If you are wall-mounting the TV, please consult a professional installer for further instructions on bracket support and wall support.

Controls and Connections

Front View

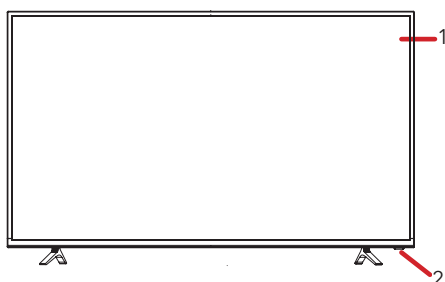


Back View

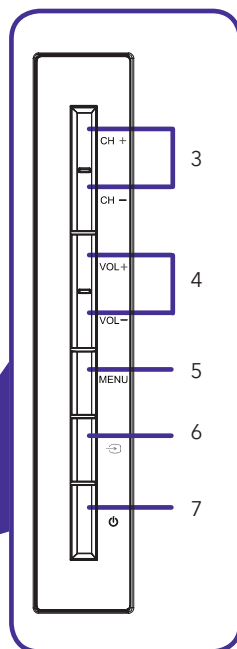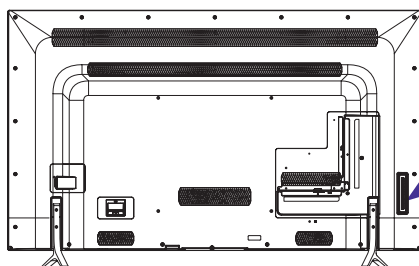

1. **LCD Display** Screen
2. **IR (infra-red)** Sensor for Remote Control
Power Indicator: In standby mode the indicator light is red; when switching on the unit the indicator light does not illuminate.
3. **CH +** : Select the next channel or move up.
CH - : Select the previous channel or move down.
4. **VOL +** : Increase the volume level or move left.
VOL - : Decrease the volume level or move right.
5. **MENU**: Enter the settings menu.
6. **SOURCE**: Access the input source list and smart apps.
7. **⏻**: Turn the TV to On/Standby.

Controls and Connections (Cont.)

Back View: Controls and Sockets

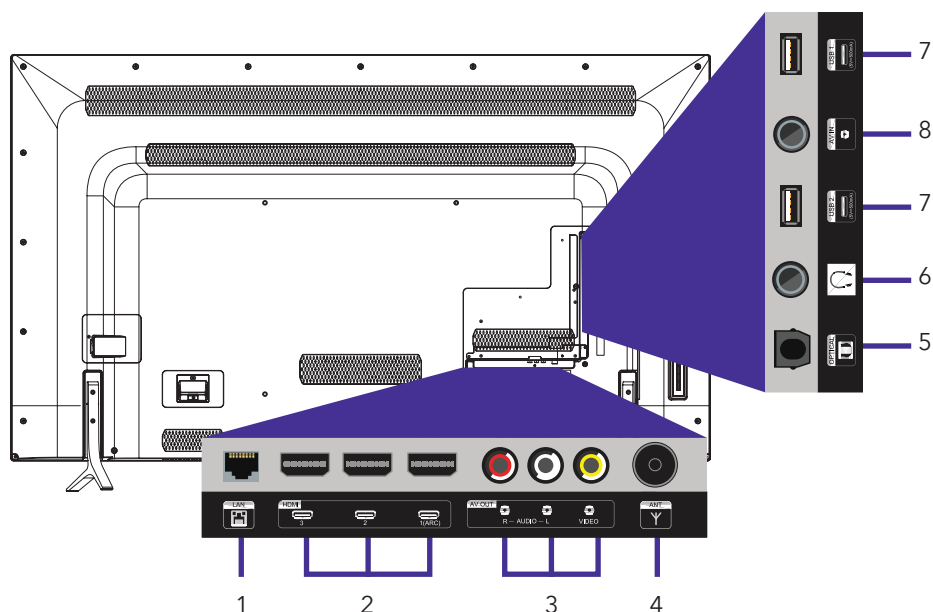


- 1. LAN INPUT** (Local-Area Network): For connecting to the internet.
- 2. HDMI INPUTS:** Provides a digital 4K UHD picture and audio connection between the TV and any HDMI devices, such as a DVD player or A/V receiver. The HDMI 1 port supports ARC.
- 3. AV OUTPUT (COMPOSITE):** Use a standard AV cable (not included) to send the DTV or AV signal to another display device.
- 4. ANTENNA INPUT:** For connection of the external antenna.
- 5. OPTICAL S/PDIF OUTPUT:** Connect to an external digital audio device.
- 6. HEADPHONES OUTPUT:** Connect your headphones via a 3.5mm jack.
- 7. USB:** Connect a USB storage device for PVR recording and multimedia file playback.
- 8. AV INPUT:** Connect the mini AV adapter cable (supplied) and standard AV cable (not supplied) to an external device for standard definition picture quality connection.

Controls and Connections (Cont.)

IMPORTANT!


Read these instructions before connecting the TV to other equipment.

Connecting to an AC Power Source

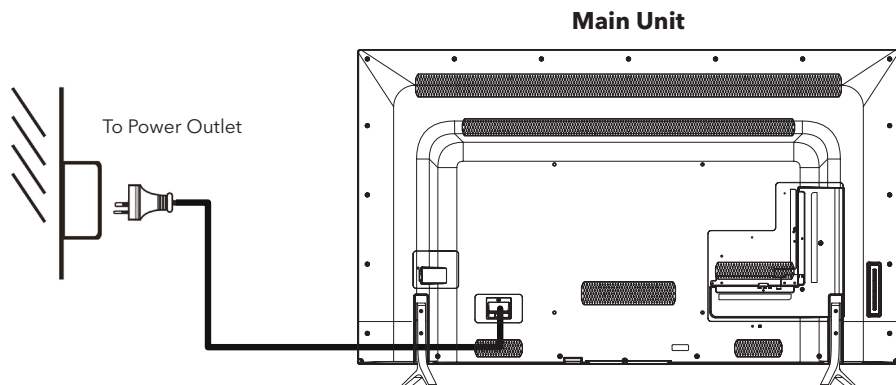

Connecting an External Antenna


For the best picture quality, we recommend connecting the TV set to an external antenna.

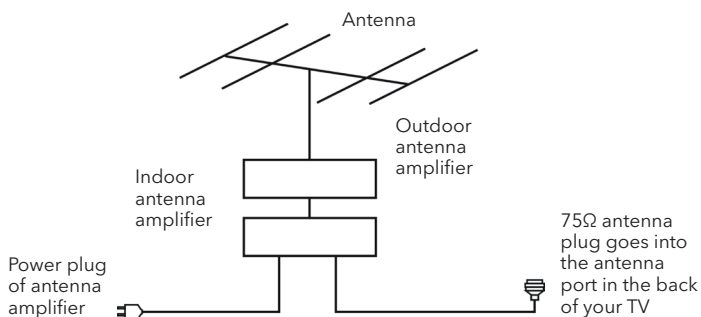


NOTE: Currently, TV programming in Australia is not available in Ultra HD. Therefore, the result of upscaling and displaying HD broadcast signals on a Ultra HD TV can be soft images, which don't have the detail or smoothness you see when watching the same content on an HD TV. For the best viewing experience, watch HD (High Definition) channels.

Controls and Connections (Cont.)

Composite Video (CVBS) Connection

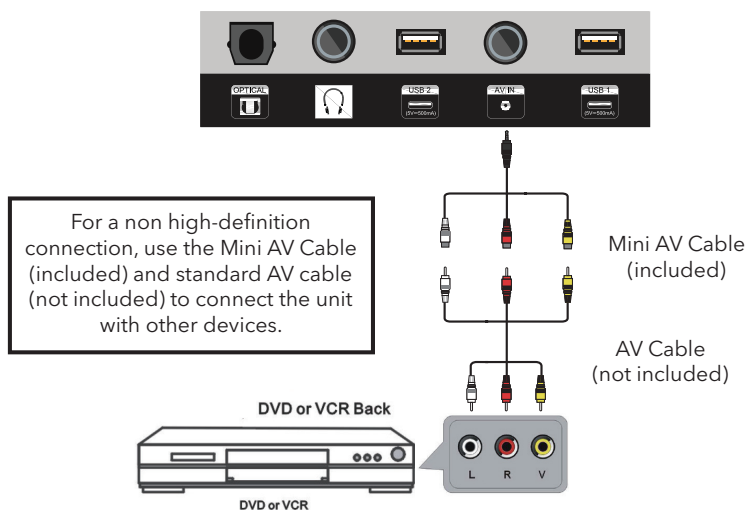


HDMI Connection

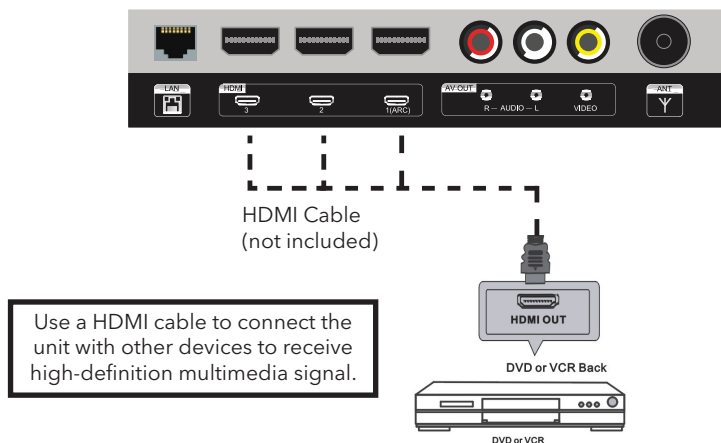

Controls and Connections (Cont.)


USB Connection

Insert a USB memory device into the USB port for PVR recording, time-shifting and playback of video/music/photo multimedia files.

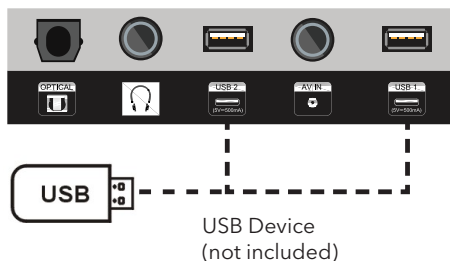


Optical (S/PDIF) Connection

Connect to an amplifier or other audio decoding devices for a high quality digital audio connection.

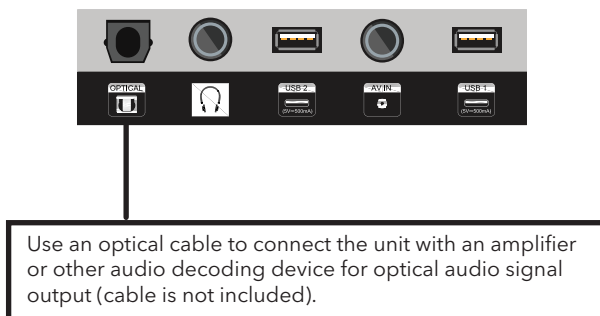

Controls and Connections (Cont.)


Internet Connection

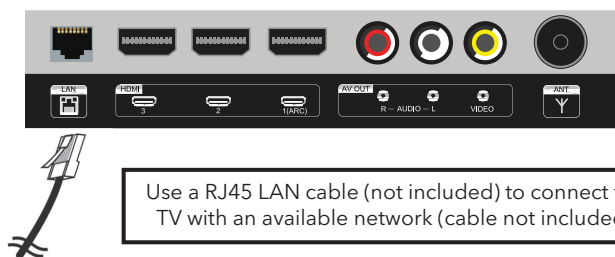

Connecting to a Wired Network

To connect to a wired network:


1. Ensure you have:
 - An ethernet cable long enough to reach your TV.
 - A router or modem with an available Ethernet port.
 - A high-speed internet connection.
2. Connect your ethernet cable to the router and the ethernet port on the back of your TV.
3. Use the Network Settings to configure your TV. See page 44 for more information.

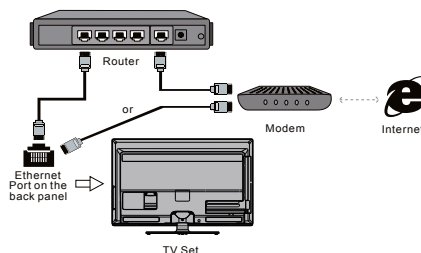

Connecting to a Wireless Network

To connect to a wireless network:

1. Ensure you have:
 - A router with a high-speed wireless signal.
 - A high-speed internet connection.
2. The TV has built-in Wi-Fi.
3. Use the Network Settings to configure your TV. See page 46 for more information.

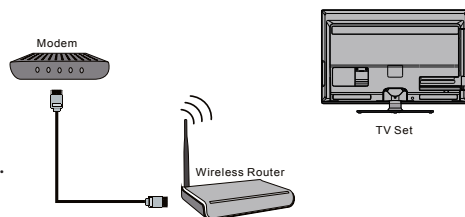


Controls and Connections (Cont.)

Earphone Connection





Earphone Cable
(not included)

AV Out Connection

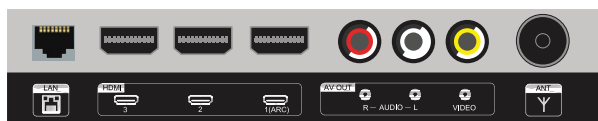

Use a standard AV cable (not included) to send the DTV or AV signal to another display device

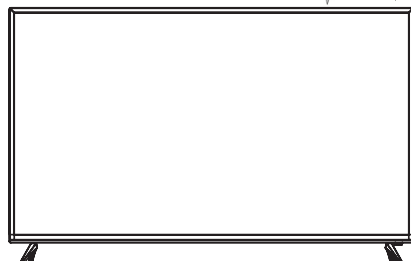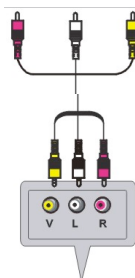

Getting Started

IMPORTANT!

Make sure all relevant equipment is properly connected (see previous pages) before connecting the unit to a wall socket and turning on the power.

Powering the TV

- Plug the power cord into a suitable power outlet, then turn on the power at the outlet.
- Press the **POWER** button on the the remote control, aiming it at the sensor at the bottom-right of the TV; the indicator light will go off. Press it again to power off (standby mode); the indicator light will go red.

Installation Guide

When you switch on the TV for the first time, the First Time Setup menu will be displayed on the screen.

Setup navigation

- Press the **▲ / ▼ / ◀ / ▶** buttons to select different sub-menus.
- Press the **OK** button to confirm settings.

Step One: Language

- Use the **▲ / ▼** buttons to select your On-Screen Display (OSD) language and then press the **OK** or **▶** button.

Step Two: Data Collection and Firmware Updates Notice

1. Select **Accept** and press the **OK** button to accept the EULA and go to the next step.
2. Select **View Additional Details** and then press the **OK** button to read a detailed EULA.
Press the **▲ / ▼ / ◀ / ▶** buttons to make your selection and then press the **OK** button to confirm and go to the next step.

NOTE: If **Decline All** is selected, no user information will be collected but you may still receive software update notifications and you will still be able to use smart applications.

Getting Started (Cont.)

Step Three: **Country**

1. Use the ▲ / ▼ buttons to select your country, then press the **OK** or ► button to go to the next step. Press the ◀ button to go to the previous step.

Step Four: **Time Zone**

1. Use the ▲ / ▼ buttons to select your time zone, then press the **OK** or ► button to go to the next step.
2. Press the ◀ button to go to the previous step.

Step Five: **TV Mode**

1. Use the ▲ / ▼ buttons to select a TV mode.
Home - For normal home viewing (recommended)
Store - For store demonstration purposes
2. Press the ► button to go to the next step. Press the ◀ button to go to the previous step.

Step Six: **Connect to the Internet**

1. Use the ▲ / ▼ buttons to select your connectivity mode (Wired or Wi-Fi), then press the **OK** button.

Wired mode:

- Connect an Ethernet cable to the LAN socket on the TV and your modem.
- Select 'Wired mode' and press **OK**. The TV will automatically detect network addresses from your modem and show a 'Connected' message on the screen to confirm connection to the internet.
- Press the ► button to go to the next step. Press the ◀ button to go to the beginning of the step.

Wi-Fi mode:

- Select 'Wi-Fi mode' and press **OK**. The TV will search for nearby Wi-Fi access points.
- Select your home Wi-Fi name and press **OK**. You will then be prompted to enter your Wi-Fi password.
- Press **OK** to access the on-screen keyboard. Use the ▲ / ▼ / ◀ / ► buttons to enter your Wi-Fi password. Press the **OK** or the ↵ button and then press **OK**.

Getting Started (Cont.)

- Press the ▼ button to highlight 'Visible' and press **OK** to make sure you have entered the password correctly.
 - Press the ▼ button to select 'Connect' and press **OK**. This will connect the TV to the internet.
2. Press the ► button go to the next step. Press the ◀ button to go to the previous step.

Step Seven: Channel Tuning

Make sure the antenna cable is plugged into the ANT socket on the back of the TV.

1. Select 'Air' and press the **OK** button to start tuning TV channels. When auto tuning is complete, the TV will automatically go to the next step.
2. Select 'Skip' and press the **OK** button to go to the next step.
NOTE: You can tune channels later by going to Menu > Channel > Auto Tuning.

Step Eight: Sign into Netflix

1. Select 'Start Netflix' and click **OK** to sign into Netflix straight away.
NOTE: This setting will exit the set up wizard.
2. To skip setting up Netflix at this point and finalise the TV setup, select 'Skip', then press the **OK** button.
NOTE: You can sign in to Netflix later by pressing the **NETFLIX** button on the remote control.
3. Press the ◀ button to go to the previous step.


Basic Operations

Selecting an Input Source

- Press the **SOURCE/HOME** button on the remote control, and then press the **▲** button to display the input source list.
- Press the **◀/▶** buttons to select the desired input source, and then press **OK** to confirm your selection from the following options: DTV, ATV, HDMI1, HDMI2, HDMI3, AV.

Channel Selection

- Press the **▲ P ▼** button to select the next/previous channel.
- Alternatively, press the number buttons to select a channel directly.
- While viewing a channel, press the **LIST** button to enter the Channel List directly.
- Press the **▲ / ▼** buttons to select the channel and press **OK** to watch it.

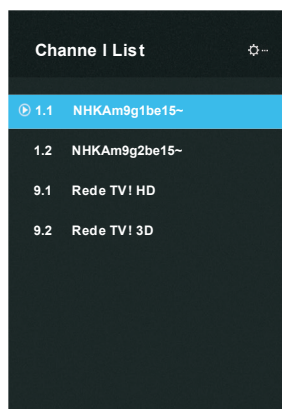

Volume Control

- Press the **+ ▴ - ▾** button to adjust the volume level.
- Press the **MUTE** button to mute the sound, press it again to restore sound.

Information Display

Press the **INFO** button to display information about the current program.

Basic Operations (Cont.)

Quick Menu (QMenu)

- Press the **QMENU** button on the remote control to display the Quick Menu.
- Use the **▲ / ▼** buttons to select menu items, and then also to adjust the setting.
- Press the **MENU** button to go back to the previous step.
- Press the **QMENU** button again to exit the menu.

NOTE: Availability of quick menu settings and setting options may change depending on the input source or the input signal.

Picture Mode: You can select the type of picture best suited to your viewing requirements. Available options: Standard, Movie, User, Home, Soccer.

Sound Mode: You can select an audio type to suit your personal preferences. Available options: Movie, Music, News, Game, Sports, Standard, User.

Sleep Timer: Set the sleep timer. Available options: Off/10/20/30/60/90/120/180/240 minutes.

Football Mode: Turn setting On or Off.

Aspect Ratio: You can select the picture size which best suits your viewing requirements. Options may vary for different input sources. Available options: Auto, 4:3, 16:9, Zoom 1, Zoom 2, PTP (Point To Point).

Audio Only: Press **OK** to turn off the TV screen and listen only to the audio. Press the **EXIT** button to get the picture on screen again.

Subtitle Languages: Select your preferred subtitle language (available for digital channels if multiple subtitle languages are broadcasted).

TV Radio: Press to interchange Radio and DTV programs when there is a radio program (in DTV mode).

MORE: Access full menu settings.

TV Guide

TV Guide (for DTV mode only)

The TV Guide is provided by the program broadcasters and offers information about the programs to be broadcast. You can access it in digital mode by pressing the **GUIDE** button on the remote control.

Time/Channel:

Press the  **GREEN** button to change the program list by Time or Channel. When Time is selected currently broadcasting program for all the channels will be displayed. Press the  button to highlight the date/time and press the  /  buttons to change the date.

When the channel is selected, all programs for the currently selected channel will be displayed. Press the  button to highlight the channel number and then press the  /  buttons to change the channel.


Record: Press the  **RED** button to schedule the program for recording. The TV is able to do schedule recording when TV is ON or in Standby mode. You can schedule multiple recordings. Different schedules should not overlap. When recording starts in standby mode, the LED power indicator will blink but there will be no picture or sound from the unit.

Schedule: Press the  **YELLOW** button to view the scheduled recordings list.

Remind: Press the  **BLUE** button to schedule a reminder for the selected program.

Page +/-: Press the    buttons on the remote control to navigate up or down the program list pages.

EXIT: Press the  **EXIT** button to exit the TV Guide.

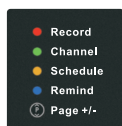

Recording

IMPORTANT!

Before you can record with this TV (including time-shift recording), you must insert a FAT32 formatted USB storage device into the USB port.

USB storage devices do not come with the TV.

- First, insert your USB memory device into the USB port.



Watching a Program in DTV Mode:

- Press the **REC** button on the remote control to start recording directly. Press the **REC** button again to minimise the information bar at the bottom of the screen.
- To stop recording, press the **STOP** button to display the dialogue box. Select **YES** and press **OK** to stop recording. Select **NO** to exit the dialog box and continue recording.
- If you wish to turn off the TV and continue recording, press the **POWER** button on the remote control. A dialog box will appear - select **YES** and press **OK**. Select **NO** to stop recording and turn off the TV. Press **EXIT** to exit the dialog box and continue watching and recording the program.

NOTE: You cannot change to a channel from another broadcaster or select another function while in recording mode.

Recording (Cont.)

Scheduled Recording (in DTV mode only)

The TV is able to record programmes when the TV is turned on or in Standby mode.

- Press the **GUIDE** button to view the TV Guide.
- Select the program you wish to record and press the  **RED** button.
- Press the  /  button to edit the mode of recording. Available options are: Once, Everyday and Weekly.
- You can further adjust the start and end dates and times by pressing the  /  /  /  buttons.
- After you have finished adjusting settings to desired options, press **OK** to confirm and save the scheduled recording.

NOTE:

- You can set up several schedule programmes to record. Different schedules should not overlap and there must be at least a 1 minute time gap to set up between two schedules.
- If the schedule conflicts with another scheduled recording, 'Overlay' message will appear. Then review the Schedule List (press the  **YELLOW** button while in the TV Guide) and reschedule your recording.

To watch a recorded programme

- Press the **MENU** button on the remote control and navigate to System > PVR File System > Record List.
- Use the  /  buttons to select a recorded file and press **OK** to start playback in full screen mode.
- Press the  **RED** button to delete the selected file.
- When playing a recorded file, use the PLAY/STOP/PAUSE/REV/FF buttons on the remote control to control the playback.

Recording (Cont.)

Time-Shift Recording and Playback (in DTV mode only)

IMPORTANT!

Before you can record with this TV (including time-shift recording), you must insert a FAT32 formatted USB storage device into the USB port.

USB storage devices do not come with the TV.

The time-shift function allows you to pause the live TV signal, then resume playback at your convenience.

First, insert your USB memory device into the USB port.

When Watching a Program in DTV Mode

- Press the **II** button on the remote control to initiate time-shift mode and pause the program; the toolbar pictured below will appear on the screen.
- Press the **▶** or **OK** button to resume playback.
- Use the Fast Forward, Rewind, Skip Forwards and Skip Backwards buttons to control playback.
- To stop time-shift, press the **■ STOP** button on the remote control.

NOTE: The USB storage device will not retain recorded data after exiting the time-shift function.



Recording (Cont.)

Important Notes

When using the USB/Media function, remember these important points:

- We strongly recommend you back up all data in the USB storage device to another storage device so you do not risk losing any data in case of an unexpected device failure or accident. We do not assume liability for any loss of data due to misuse or malfunction. Data backup is your personal responsibility.
- You cannot change to another channel or select another function while in recording mode.
- If the signal is interrupted or removed while in recording mode, the recording will stop until the signal is established. This may cause you to lose program content.
- The file recorded can only be used in this TV. Do not copy it to any other device.
- When you are in time-shift recording mode, you may experience some difficulty with a scheduled recording at different times without removing the USB recording device. You will need to remove the USB device as it is required to reset after each recording to protect the device from damage. If you see the message 'DISK NOT READY' displayed, remove the device, reconnect it, and proceed with your recording.
- Some USB storage devices may not be compatible for smooth operation with this TV.
- For large file sizes and large capacity storage devices, the loading speed may be longer. The recognition speed of a USB storage device may vary depending on the device.
- When connecting or disconnecting the USB storage device, ensure the TV is not in USB mode, otherwise the USB device or the files stored in it may be damaged.
- Only use a USB storage device formatted in a FAT32 file system provided with the Windows operating system. If it is formatted by a different utility program that is not supported by Windows, it may not be recognised.
- Ensure any USB devices connected to the TV do not use/exceed 500mA power rating.
- If an "Unsupported File" message is displayed, the file format or codec is unsupported or corrupted.

Media Mode

Media Playback

- First insert a USB memory device into the USB port.
- Press the **SMART HOME** button on the remote control and select **MEDIA** to switch the unit to Media mode.
- Press the ▲ / ▼ / ◀ / ▶ buttons to move the cursor.
- Use the ◀ / ▶ buttons to select the desired partition.
- To switch between Photo, Music, Files and Video sections, use the ▲ / ▼ buttons to select the desired section. Only supported files will be shown under each category.
- Press the **RETURN** button to go back to the previous screen.
- Press the ↩ **EXIT** button to exit Media mode.



Media Mode (Cont.)

Photo

- Photo files can only be played in this menu category.
- Use the ▲ / ▼ / ◀ / ▶ buttons to select the desired folder or file, then press the **OK** button to open the file in full screen.

Playing Photo Files

- Press the ▲ button on the remote control to hide/display the on-screen toolbar.
- To select a function such as Stop, Setting, Rotate and Info from the on-screen toolbar, use the ▲ / ▼ buttons, then press **OK**, or use the playback control buttons on the remote control.
- Press the ■ **STOP** or ➡ **EXIT** button to exit and return to the file list.
- Press the ⚙ **MENU** button to select the play mode.

Music

- Music files can only be played in this menu category.
- Use the ▲ / ▼ / ◀ / ▶ buttons to select the desired folder or file, then press **OK** to play the file.

Playing Music Files

- Press the ◀ / ▶ buttons to fast forward and rewind.
- Press the ▲ / ▼ button and then press **OK** to select another song, or use the ◀◀ / ▶▶ buttons.
- Press the ⚙ **MENU** button to enter Sound Mode and Balance settings.
- Press **RETURN** or **EXIT** to go back to the previous screen.

Media Mode (Cont.)

Video

- Video files can only be played in this menu category.
- Use the ▲ / ▼ / ◀ / ▶ buttons to select the desired folder or file, then press **OK** to play the file.

Playing Video Files

- Press the ▲ button on the remote control to hide/display the tool bar.
- Press the ▲ / ▼ buttons to select the preferred function, then press **OK** to confirm.

Remote Control Operations when Playing Multimedia Files

- Press the **II** button to pause playing. Press the ▶ or **OK** button to resume playback.
- Press the **■** button to stop playing.
- Press the ◀◀ button to move fast backward.
- Press the ▶▶ button to move fast forward.
- Press the ◀◀ button to play the previous file.
- Press the ▶▶ button to play the next file.
- Press the ⚙ **MENU** button to access the following settings: Picture Mode, Sound Mode, Balance, Subtitle, Audio Track and Screen Size.

NOTE: To play your multimedia files, make sure you have selected the correct icon in the main media playback menu.

Media Mode (Cont.)

High Dynamic Range (HDR)

About the HDR feature

High Dynamic Range (HDR) is a picture feature on your TV that attempts to mimic the way visuals are perceived in real life by the human eye.

By using this feature, the TV can reproduce greater dynamic range of luminosity by capturing and then combining several different exposures.

HDR promises better picture quality thanks to brighter, more realistic highlights, more realistic colour and other improvements.

It delivers the look that filmmakers intended to achieve, showing the hidden areas of dark shadows and sunlight with full clarity, colour and detail.

HDR on your TV

HDR is supported in HDMI and USB input sources and by Netflix app.

- When the TV is displaying HDR media, the information banner (press **INFO** button on remote) will display 'HDR'.

NOTE:

- When watching HDR content, make sure Menu > System > HDMI-EDID setting is set to Enhanced.
- It requires an HDR playback-capable external media player and HDR optimised media content.
- Use a High-Speed HDMI cable when connecting to an external media player.

Smart TV

Before you start using apps, your TV must be connected to the internet. If you haven't connected, see the Internet Connection section on page 21 for instructions.

The speed of your internet connection determines the quality of your audio/video experience when you watch streaming content.

In order to stream content, your home network must have high-speed broadband internet access. A minimum connection speed of 1.5Mbps is required, however, a connection of 5.0Mbps or faster is recommended. Contact your ISP if you have problems maintaining a fast, reliable connection.

If any of your other network connected devices such as computers, gaming consoles and network hard drives are transferring large amounts of data across your network (such as a file transfer, online gaming, or other instances of streaming video), your sound and picture quality may be compromised.

Accessing internet content may count towards your download limit and may incur fees from third parties such as your internet service provider (ISP).

- Press the **HOME** button on the remote control. Here you can run the apps installed and access input sources and menu options.
- Press the ◀/▶ buttons to select these functions.



Smart TV Applications

- | | |
|------------|-----------------------|
| • Netflix | • Screencast |
| • YouTube | • NetRange app portal |
| • Twitter | • Foxxum app portal |
| • Facebook | • Zeasn app portal |

NOTE: Downloading additional apps is not possible with this TV.

Smart TV (Cont.)

About Netflix

Netflix is a streaming service that offers unlimited viewing of a wide variety of award-winning TV shows, movies and documentaries.

- A paid subscription is required.
- This TV can play Netflix content in 4K Ultra HD HDR resolution, however the playback resolution may be lower depending on your subscription level and your network speed.
- Streaming Netflix content will count towards the data usage of your broadband plan.

Screencast

The Screencast feature enables you to echo the display from a compatible Android device like a smartphone or tablet on the TV screen by connecting your mobile device directly to the TV wirelessly. In order to use this feature, your device must support Wi-Fi Display technology.

NOTE: Apple iOS operating system is not supported.

- To start using the Screencast feature, select the Screencast icon and press **OK** to load the app.
- Turn on Wi-Fi and Wireless Display (a.k.a. Wi-Fi Display, Wi-Fi Direct, Cast Screen) function on your smart phone or tablet (Please refer to your device's user manual for information on how to turn on wireless display).
- Your mobile device will display a list of available devices. Choose the DeviceID name shown on the bottom right corner of the TV and click on it to connect.
- Your mobile device will connect to the TV and will display the device screen on the TV.
- Use your device to disconnect.

NetRange, Foxxum and Zeasn app portals

NetRange, Foxxum and Zeasn app portals gives you access to number of other content and service providers.

- Some apps may require a paid subscription.
- Streaming content will count towards the data usage of your broadband plan.

Menus

This TV contains different settings menus where you can program your preferred settings. Once you have programmed any settings, the unit will retain them in its memory until you change them, even when switching the unit to standby mode. This means you can always operate the system under the same preferences.

Menu Navigation

- Press the **MENU** button on the back panel, or  on the remote control, to display the main menu.
- Use the **▲** / **▼** buttons to cycle through the main menu. Press the **OK** or **▶** button to enter the sub-menu page.
- Press the **▲** / **▼** buttons to select the preferred option, then press the **OK** or **▶** button to enter.
- Press the  **MENU** button to return to the previous menu.
- Press the  **EXIT** button to exit the menu page.

NOTES:

- When an item in MENU is displayed in grey, it means that the item is not available or cannot be adjusted.
- Buttons on the TV have the same function as corresponding buttons on the remote control. If your remote control is lost or not working, you can use the buttons on the TV to select menus. This manual assumes operation via remote control.
- Some items in the menus may be hidden depending on modes or signal sources used.

Menus (Cont.)


Channel Menu

Auto Tuning

Press the **OK** button to enter the sub-menu.

- Tune Type: Press the **OK** button to set the tune type to DTV.
- Country: Press the **OK** button to select the country.
- Service Type: Press the **OK** button to set the service type to All.
- LCN: Display the current Logical Channel Numbering setting status.
- Search: Press the **OK / ►** button to start the auto searching.

Once the progress bar is full, the found channels will be stored.

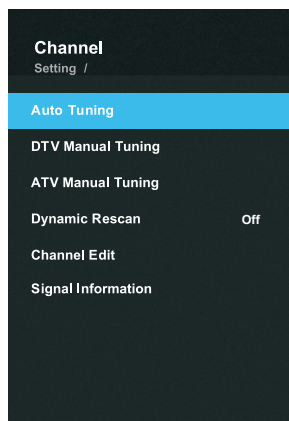

DTV Manual Tuning: Manual store for digital channels

1. Press the **◀ / ►** button to select a channel.
2. Press the **OK** button to start channel tuning. When a channel is found, the searching process will stop. The channel will be saved with its current channel number. Press the **EXIT** button to exit.

ATV Manual Tuning: Manual store for ATV channels

Storage To 1: Store the searched channel to 1 (you can adjust the channel number by pressing the **◀ / ►** button).

Current CH 1: Select the current channel.

System: Set the system for local programs.

Search: Use the **◀ / ►** buttons to search up and down from the current frequency. Select **SAVE** to save your chosen frequency. Press the **EXIT** button to exit the search.

Dynamic Rescan: Switch this function to On/Off.

Menus (Cont.)

Channel Edit

- Press the ▲ / ▼ buttons select the Channel Edit, then press the **OK** button to enter the sub-menu.
- Press the ▲ / ▼ button to select a channel.


Delete: Press the  **RED** button to delete the channel.

Skip: Press the  **BLUE** button to skip the channel.

Move: Press the  **YELLOW** button to set the channel to moving state. Use the ▲ / ▼ buttons to move it to the position you want and then press the **OK** button to save the channel in the new location.

Favourite: Press the  **GREEN** button to set the favourite channel. Press the **Channel +/-** buttons to scroll through the Channel List pages.

Signal Information (In DTV mode): Display the current Signal Information.

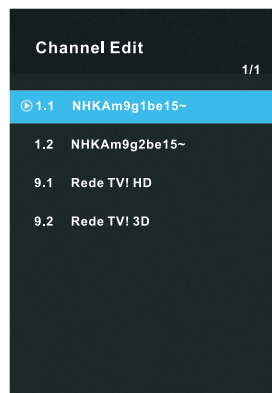

Menus (Cont.)

Picture Menu

Picture Mode

You can select the type of picture which best corresponds to your viewing requirements.

Contrast, Brightness, Colour, Sharpness, Tint (NTSC) and Backlight can be adjusted when the picture mode is set to User.

The manufacturer recommends Home mode for home viewing.

Picture Setting /	
Picture Mode	Home
Colour Temperature	Nature
Aspect Ratio	16 : 9
Noise Reduction	Low
Advance Settings	...

Contrast: Adjust the white level of the picture.

Brightness: Adjust darkness of black sections in the picture.

Colour: Adjust the colour intensity of the picture.

Sharpness: Object edges are enhanced for picture detail.

Tint: Adjust the hue of the picture. (Valid only for NTSC signals).

Backlight: Control the brightness of the screen.

Colour Temperature: Select the colour temperature of the picture.

Aspect Ratio: You can select the picture size which best corresponds to your viewing requirements.

Noise Reduction: Reduces screen noise without compromising video quality.

Advanced Settings: Use the ▲ / ▼ button to select Advanced Settings, and then press the **OK** button to access the submenu page.

MPEG NR: Reduces MPEG noise to provide improved picture quality.

Dynamic Contrast: Adjusts the contrast to the optimal level according to the brightness of the image.

Film Mode: This setting allows the TV to sense and process film signals from all sources automatically and adjust the picture for optimum quality.

PC Mode (in HDMI mode): When it is set to "On", the TV set is more suitable to be used as a monitor (valid only in the VESA mode of the HDMI channel).

OverScan (In DTV mode): The picture reproduction rate is adjusted. Picture

Picture Reset: Reset all picture settings to the factory defaults.

Menus (Cont.)

Sound Menu

Sound Mode

You can select a sound mode to suit your personal preferences. The following settings can be adjusted when the sound mode is set to User.

Surround Sound: Press the ▲ / ▼ buttons to select: Off, Low, Middle, High.

Dialogue Enhancer: Press the ▲ / ▼ buttons to select Off, Low, Middle, and High.

This feature allows you to clearly hear voice audio of the TV broadcast, thus avoiding background sound effects being too loud and dialogue voice being too small.

AVC (Auto Volume Control): Press the ▲ / ▼ buttons to select Off, Low, Middle, and High.

Seven-stage equalization setting: Press the ▲ / ▼ buttons to select: 120Hz, 300Hz, 500Hz, 1KHz, 3KHz, 6KHz or 12KHz, and then press the ◀ / ▶ buttons to adjust the frequency equalization of the sound.

Balance: You can adjust the speakers' balance to your preferred levels.


S/PDIF Mode: Press ◀ / ▶ buttons to select S/PDIF Type. You can select "PCM" or "Auto". S/PDIF (Sony Philips Digital Interface) provides digital audio output to speakers and various digital devices such as A/V Receivers and Home Theaters which reduces interference and distortion.

AD Switch (In DTV mode): This is only available in some countries, mainly in North America and Europe. This is an auxiliary audio function that provides an additional audio track for visually challenged persons. This function handles the Audio Stream for the AD (Audio Description), when it is sent along with the Main audio from the broadcaster. Users can turn the Audio Description On or Off and control the volume.

AD Volume: When the AD Switch is set On, the AD Volume can be adjusted.

Audio Delay: Correct audio-video sync problems, when watching DTV and when listening to digital audio output using an external device such as an audio receiver (0ms~250ms).

Sound Reset: Reset all audio settings to the factory defaults.

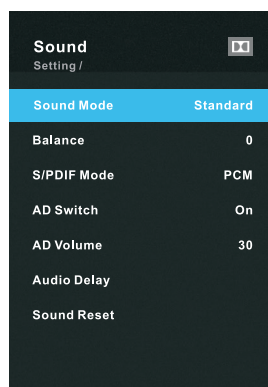

Menus (Cont.)


Network Setup

You can set up your TV so that it can access the Internet through your local area network (LAN) using a wired or wireless connection.

Connecting to a Wired Network

You can attach your TV to your LAN using a cable in three ways:

- Connect the LAN port on the back of your TV to an external modem using a Cat 5 cable.
- Connect the LAN port on the back of your TV to an IP Sharer which is connected to an external modem using a Cat 5 cable.
- Depending on how your network is configured, you may be able to connect your TV to your LAN by connecting the LAN port on the back of your TV directly to a network wall outlet using a Cat 5 cable. Note that the wall outlet is attached to a modem or router elsewhere in your house.

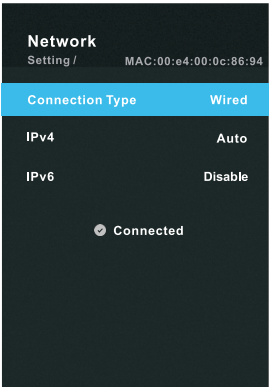

If you have a Dynamic Network, you should use an ADSL modem or router that supports Dynamic Host Configuration Protocol (DHCP).

Modems and routers that support DHCP automatically provide the IP address, subnet mask, gateway, and DNS values your TV needs to access the Internet so you don't have to enter them manually.

Most home networks are Dynamic Networks. Some networks require a Static IP address.

If your network requires a Static IP address, you must enter the IP address, subnet mask, gateway, and DNS values manually on your TV's Cable Setup Screen when you set up the network connection.

To get the IP address, subnet mask, gateway and DNS values, contact your Internet Service Provider (ISP). If you have a Windows computer, you can also get these values through your computer.

Menus (Cont.)

Wired Network Setup

Set up a Wired connection automatically

Use the Automatic Network Setup when connecting your TV to a network that supports DHCP.

1. Connect your TV to your LAN as described in the previous section.
2. Turn on your TV, press the  **MENU** button on your remote, use the  /  buttons to select 'Network'.
3. Press the **OK** or  button to enter. Then press the  /  button to select the Network type as 'Wired'.
4. Select the IPv4 or IPv6 setting, then press the **OK** button to proceed.
5. Set the IPv4 or IPv6 setting to Auto.
6. Select Connect and press **OK** to connect the internet. The TV will automatically pick up network information and connect. You will see an 'OK' confirmation once connected.

Set up a Wired connection manually

Use the Manual Network Setup when connecting your TV to a network that requires a Static IP address.

1. Follow steps 1-4 in the "How to set up automatically" procedure.
2. Set the IPv4 setting to Manual.
3. Press the  /  buttons to highlight the field you want to change, and then use the number buttons on the remote control or on-screen to input the network parameters, such as IP Address, Subnet Mask, Gateway, DNS1 and DNS2. Press the  **MENU** button to return.
4. When done, select Connect and press **OK** to connect the internet.

NOTE: IP, Subnet Mask, Gateway and DNS address field numbers must be between 0 and 255. If you manually set the IP address, you must not use the same IP address for any other device.

Tips for Network Connection:

- Use a standard LAN cable (Cat 5 or better with a RJ45 connector).
- Many network connection problems during set up can often be fixed by re-setting the router or modem. After connecting the TV to the home network, quickly power off and/or disconnect the home network router or cable modem. Then power on and/or connect it again.

Menus (Cont.)

Wireless Network Setup

You can connect your TV to your LAN through a standard wireless router or modem.

Wireless Network Configuration

Most wireless network systems incorporate a security system that requires devices that access the network through an access point or wireless router (typically a wireless IP Sharer) to transmit an encrypted security code called an access key.

Wireless Network Setup

How to set up Wifi:

1. Turn on your TV, press the  **MENU** button on your remote, use the **▲** / **▼** buttons to select Network, and then press the **OK** button.
2. Use the **▲** / **▼** buttons to select 'Network', and then again to select 'Wi-Fi', then press **OK**. The TV will automatically search nearby Wi-Fi access points. When done, it will display a list of available networks.
3. In the list of networks, press the **▲** / **▼** button to select a network, and then press the **OK** button.
4. Enter your network's password using the on-screen keyboard. Use the **▲** / **▼** / **◀** / **▶** buttons on the remote control to select a character and press **OK** to enter it.
5. Input the correct password, select 'Connect' and press the **OK** button to connect to the network.

Menus (Cont.)

Add: You can also add a WiFi network manually by selecting 'Avanced Settings'.

1. Press the ▲ / ▼ buttons to select Add, then press the **OK** button.
- Follow the displayed messages below the menu to input the network name, encryption mode and network password, and then press ▲ / ▼ buttons to select 'Connect'. The system starts to search wireless routing and connect.
 - When the network is connected, the current wireless network will be added into the list of wireless networks.

WOW: Switch the WOW on or off.

If the TV fails to connect to the internet:

- Your TV may not be able to connect to the internet because your ISP has permanently registered the MAC address (a unique identifying number) of your PC or modem, which it then authenticates each time you connect to the internet as a way of preventing unauthorized access. As your TV has a different MAC address, your ISP can not authenticate its MAC address, and your TV cannot connect.
- To resolve this problem, ask your ISP about the procedures required to connect devices other than a PC (such as your TV) to the internet.
- If your internet service provider requires an ID or password to connect to the internet, your TV may not be able to connect to the internet.
- The internet connection may fail because of a firewall problem. If this is the case, contact your Internet service provider.

System Menu

Language: Select your preferred On Screen Display language.

Subtitle: Switch the Subtitle function on or off.

Subtitle Hearing Impaired: When hearing Impaired is ON, the TV screen will give some information to the people whose hearing are impaired when Hearing Impaired is Off, the information will be hidden.

System Setting /	
Language	English
Subtitle	Off
Subtitle Hearing Impaired	Off
Audio Languages	
Subtitle Languages	
HBBTV	Off
Country	Australia
HDMI CEC	Off
Environment	Home

Menus (Cont.)

Audio Languages: Select your preferred audio language. (Available for digital channels if multiple audio languages are broadcasted.)

Subtitle Languages: Select your preferred subtitle Language. (Available for digital channels if multiple subtitle languages are broadcasted.)

HBBTV: Switch the HBBTV function On or Off.

NOTE:

- This service is not fully supported on this TV.
- Some broadcasting may not support the HBBTV.
- An application on HBBTV may malfunction temporarily depending on the circumstances of the broadcast station or application provider.

Country: Display the current country setting.

HDMI CEC: Command and control HDMI CEC supported devices connected via HDMI cable by using the TV's remote control.

NOTE: Some HDMI cables may not support HDMI CEC functions. Press the **OK** button to enter the submenu.

- HDMI CEC: Switch the HDMI CEC function On or Off.
- Auto Standby: When this is set to On, turning off the TV will turn off the connected device as well.
- Auto Power On: When this is set to On, turning on the TV will also turn on the connected device.
- ARC (Audio Return Channel): When this is set to On, the TV audio will be sent to a connected ARC-supported external home theatre system.

HDMI EDID (In HDMI mode): Switch EDID Version, Select Enhanced when source signal is transferred by HDMI2.0 specification and Select Standard when source signal is transferred by HDMI1.4 specification. (According to different external devices, the TV can be switched with EDID settings to match the external device EDID.)

Environment: You can select Home or Store for the TV environment. It is recommended to set the TV to Home Mode.

Restore Factory Default: Restore the system settings to the factory default. When the restore is complete, the TV will enter standby mode.

Menus (Cont.)


PVR Function

Preparing

Plug a USB flash drive or USB hard disk into USB slot on the TV set.

NOTE:

- Your USB disk should have a capacity at least 512MB.
- Your USB device must support USB 2.0 high-speed specification.
- Only use USB storage devices that are formatted with FAT32.

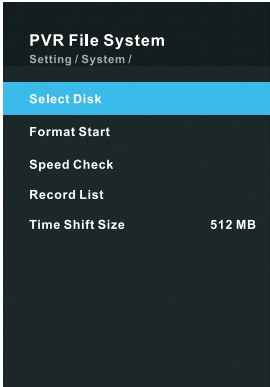

Setting

Select Disk: Select a disk used for PVR.

NOTE: Some models have two USB inputs and several disks can be used when two USB devices are plugged in.

Format Start: Format the connected USB disk.

NOTE:

- Before formatting, please back up all important files.
- During the device formatting, do not disconnect the device or turn off the power. If your USB device can't be formatted or fail to be checked by the system, it means the device isn't compatible with the TV or is damaged.

Speed Check: Press **OK** to check the speed of the storage device.

Record List: Shows the list of recorded programs.

Time Shift Size: You can select the memory size for the Time Shift function.

Menus (Cont.)

Lock Menu

Lock System: The feature can prevent unauthorized operating the TV set, unless entering 4-digit password.

Press 0-0-0-0 using Direct Channel Selection Buttons (0-9). (This is the default password.)


NOTE: If you forget your password, use the factory password 1-2-2-5, you can then gain access to change your password if necessary.

Set Password: Press the **OK** button to enter the submenu.

Here you can set your private password. Press the number buttons on the remote control to set the new password. When the new password has been entered twice, the setting is successfully completed. The TV will go back to the previous menu.

Block Channel (In ATV/DTV mode): Use the **▲ / ▼** buttons to select which program will be blocked, then press the **YELLOW** button to set the block. Press the **YELLOW** button again to unblock it. (Only available when Lock System is set to ON.)

Parent Lock (In DTV mode): Press the **OK** button and then use the **▲ / ▼** buttons to select the age rating. This feature can prevent children watching adult TV programs, according to the rating limit set.

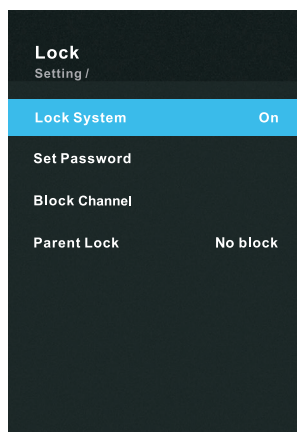

Menus (Cont.)

Timer Menu

Auto Sync: When this is set to ON, the TV will automatically sync to the local clock according to the DTV broadcasting time.

NOTE: When Auto Sync is ON, the clock option becomes grey and cannot be adjusted.

Clock: Display either the DTV signal stream time or set the time manually.

Sleep Timer: This feature automatically switches the TV to standby after a defined period of time. To cancel the Sleep Timer, set to "Off".

Auto Sleep: Select the Auto Sleep time you want. The TV will enter into standby mode automatically when there is no operation in set time.

Time Zone: Adjust your time zone.

No Signal Power Off: When set to "On", if there's no TV signal nor press-button operation, the TV will enter standby status automatically about 5 minutes later.

Timer Setting /	
Auto Sync.	On
Time Zone	New South Wales/ ACT GMT+10
Clock	00:39
Sleep Timer	Off
Auto Sleep	Off
No Signal Power Off	Off

Support Menu

USB Upgrade: Update the software using the USB memory device. Please be careful not to disconnect the power or remove the USB drive until updates are complete (service use only).

Internet Update Check: To use network upgrade, you must have configured your TV to connect to your network and the TV must be connected to the Internet.

Software Version: Display current software version information.

Installation Guide: This is an installation guide to help you to setup the TV.

View End-User License Agreement: Read and accept/decline the EULA.

App Settings: Display information about Netflix.

Support Setting /	
USB Upgrade	
Internet Update Check	
Software Version	
Installation Guide	
View End-User License Agreement	
App Settings	

Troubleshooting

If you experience any problems with your TV, check the list below before calling for service. If none of the solutions help you solve the problem, turn the power off and contact After Sales Support for advice.

General Troubleshooting

Problem	Solution
No power.	Insert the power plug securely into the power outlet and ensure the power outlet is switched on.
No picture.	• Ensure that the equipment is connected properly. • Adjust the antenna or use an external antenna. • Relocate the unit near a window (if inside a building). • Move the TV set away from any product that causes interference. • Auto-tune the unit again. • Try another channel.
No sound or distorted sound.	• Ensure that the equipment is connected properly. • Ensure that the input setting for the TV is correct. • Ensure the audio settings are properly set. • Ensure the volume is not muted. If it is, press the MUTE button to restore the sound. • If earphones are connected, unplug them. • Adjust the volume to a suitable level by pressing the VOL+/VOL- button.
No operations can be performed with the remote control unit.	• Check the batteries are correctly installed. • The batteries may be exhausted: replace them. • Make sure to point the remote control at the remote control sensor and try it again. • Make sure to use the remote control at a distance of no more than 6m from the sensor. • Remove any obstacles between the remote control and remote control sensor.
I want to adjust picture settings for Netflix and other apps.	• While in USB mode, plug in a USB storage device, play a video file and then make your picture setting changes while the video is playing. • Those settings will then be automatically applied to Netflix and other apps.

Troubleshooting (Cont.)

General Troubleshooting (Cont.)

No key operation (by the main unit and/or the remote control) is effective.	Disconnect the power plug and then reconnect it. (The unit may not be operating properly due to lightning, static electricity or some other factors.)
Noise or other interface	Electronic equipment near the unit is causing interface. Relocate the unit or move the equipment.

Problems Relating to the USB Device

Problem	Solution
My TV does not recognise my USB device or my external hard disk.	Please refer first to the instructions describing how to use USB devices with this unit. If the problem still occurs, your device may not be compatible. This machine has been tested with the majority of Flash memory-based devices and hard disks (Music/Movie players with HDD) on the market; however, it may not be compatible with certain devices, in particular external self-powered hard disks.

The ATV65UHDS-0319 4K Ultra HD Smart TV requires HDR Ultra HD content and additional HDR Ultra High Definition enabled devices (sold separately) in order to experience the HDR Ultra HD resolution effect. At this stage, TV programming in Australia is not available in HDR Ultra HD, and the HDR Ultra HD resolution effect can therefore only be experienced in HDMI and USB modes.

Specifications

Screen Size	64.5" (163.9cm)	
Resolution	3840 x 2160	
Aspect Ratio	16:9	
HDMI version	2.0	
HDCP version	2.2	
USB Multimedia Playback Format	Movie	MPEG-2, MPEG-4, H.264, H.265, VP9, TS
	Music	MP3, AAC
	Photo	JPEG, PNG, BMP
Power Input	100-240V~50/60Hz	
Power Consumption	180W	
Dimensions (w x h x d)	Without stand: 1463.1 x 853.1 x 79.5mm	
	With stand: 1463.1 x 918 x 325mm	
Weight	Net:	24 kg
	Gross:	32 kg

Version number	1.0
Date	03/2019



65" 4K Ultra HD LED LCD TV with HDR

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 886 649 or write to us at:

Tempo (Aust) Pty Ltd ABN 70 106 100 252
PO Box 6056 Frenchs Forest, NSW 2086, Australia
Tempo Help Desk: 1300 886 649 (Aust)

(Operating Hours: Monday-Friday 8:30am-6pm; Saturday 9am-6pm AEST)
Email: info@tempo.org





Online support

Visit www.bauhn.com.au for software updates to keep your TV up-to-date, as well as the latest Instruction Manual for information on the updated features.

Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, please contact our After Sales Support Centre on 1300 886 649 before returning it to the store for a refund.