

 


Technical Support and E-Warranty Certificate [www.vevor.com/support](http://www.vevor.com/support)

## STEAM IRON

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually Saving Half in comparison with the top major brands.

MODEL:EC1729CA-UL/ EC1729CA-GS

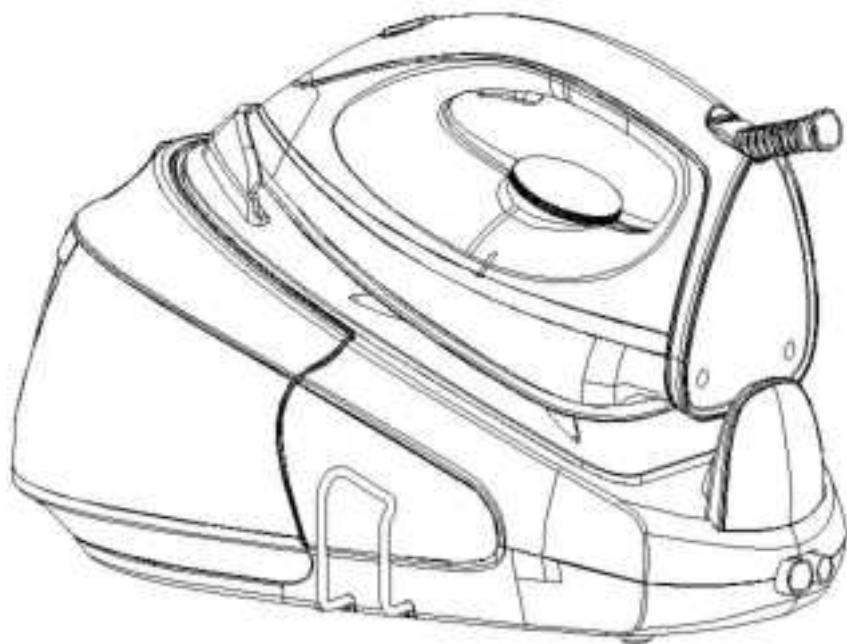



### NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

**Technical Support and E-Warranty Certificate**  
**[www.vevor.com/support](http://www.vevor.com/support)**

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Symbol	Symbol Description
	<b>Warning:</b> To reduce the risk of injury, the user must read the instructions manual carefully.
	This symbol, placed before a safety comment, indicates a kind of precaution, warning, or danger. Ignoring this warning may lead to an accident. To reduce the risk of injury, fire, or electrocution, please always follow the recommendation shown below.
	<b>CORRECT DISPOSAL:</b> This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.

## WARNING

Before using the electrical appliance, basic precautions should always be followed including the following:

- 1. Read all instructions.**
- Before using check that the voltage of wall outlet corresponds to the one shown on the rating plate.
- Do not use the appliance if the main cord, plug, light or the appliance itself shows visible damage, or the appliance has been dropped or is leaking. Take it to the nearest authorized service facility or a qualified serviceman for examination and repair in order to avoid a hazard.
- Do not allow the cord to come into contact with the soleplate when it is hot.

5. Burns may occur from touching hot metal parts, hot water, or steam
6. Do not let cord hang over edge of table or hot surface.
7. To protect against a risk of electric shock, never immerse the iron in water or other liquids. If this has happened, do not use this appliance anymore; dispose of the appliance.
8. Keep the appliance out of the reach of children.
9. Do not leave iron unattended while connected into power supply or on an ironing board.
10. Always place or use the appliance on a stable, level and horizontal surface.
11. The use of accessory not recommended by manufacturer may cause injury to persons or damage to appliance.
12. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
13. Never fill the water reservoir with hot water, scent, vinegar, starch, descaler, fabric softener or other chemical reagent.
14. Unplug from outlet when not in use or before cleaning, ensure unit to cool down completely before cleaning.
15. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
16. Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
17. The plug must be removed from the socket-outlet before the water reservoir is filled with water.
18. The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
19. Do not use the appliance for other than its intended use.
20. Do not use outdoors.
21. Type Y attachment: If the supply cord is damaged, it must be

replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**Save these instructions.**

## HOUSEHOLD USE ONLY

### FCC INFORMATION

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

**Note:** This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

 
- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.

- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

 
## SPECIFICATION

<b>Model</b>	EC1729CA-UL	EC1729CA-GS
<b>Voltage</b>	120V~ 60Hz	220-240V~50Hz
<b>Power</b>	1700W	2200-2600W

## KNOW YOUR STEAM IRON

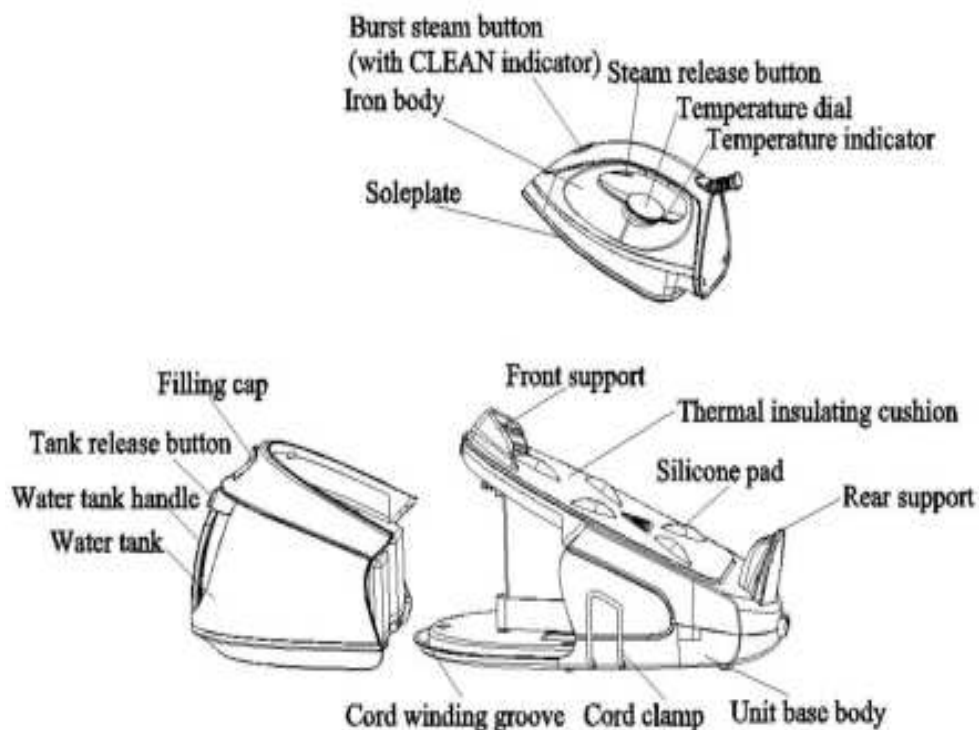

# TEMPERATURE DIAL

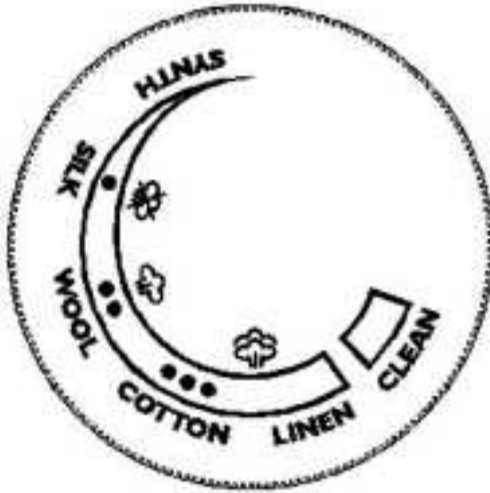

## BEFORE FIRST USE

1. Remove any sticker, protective foil or storage cover from the soleplate.
2. Heat up the iron to maximum temperature and iron over a piece of damp cloth for several minutes for the purpose of removing any residue on the soleplate.

**NOTE:** It is normal that strange odor comes out from the unit for the first use. This will cease after a short while.

**NOTE:** Some particles may come out of the soleplate when you use the iron for the first time. This is normal; the particles are harmless and stop coming out of the iron after a short while.

**NOTE:** When you switch on the appliance, the steam station iron may produce a pumping sound. This is normal; the sound tells you that water is pumped into the steam station iron.

**NOTE:** During the heating process of the soleplate, there will be little steam coming out from the soleplate automatically and this phenomenon will continue for about 3 seconds. This is normal.

## DRY IRONING

1. Place the steam station iron on a flat surface.
2. Connect the plug to wall outlet, the temperature indicator starts to flicker.

**Note:** The appliance will stop heating if no any operation within 10 minutes after plug in. If happens, unplug and plug the appliance again, and then continue to operate the appliance.

3. Turn temperature dial to your desired setting, which is depended on the fabric of garment, Refer to IRONING TIPS latter. The iron starts heating and the temperature indicator keeps flickering during heating process.
4. When the temperature indicator turns to illuminate constantly from flickering, it means that the selected temperature is reached. You now can start ironing.

**WARNING:** Never touch hot soleplate at any time before cooling down!

## STEAM IRONING

1. Grasp the water tank handle with the hand and press the tank release button with one finger to move out the water tank. Fill water into the water tank from water tank inlet. You had better use purified water with less calcium particles. The max capacity of water tank is 1.8L, the water level shall not be exceeded the MAX mark.

**Note:** If the tap water in your area is very hard, we advise you to mix it with an equal amount of distilled water.

2. Replace the detachable water tank properly.

**Note:** If the water tank is not properly placed, the iron does not produce any steam.

3. Put the iron on the steam station iron's thermal insulating cushion.
4. Connect the plug to wall outlet, the temperature indicator starts to flicker.

**Note:** The appliance will stop heating if it does not operate within 10 minutes of being plugged in. If this happens, unplug and plug the appliance again, and then continue to operate it.



5. Turn temperature dial to your desired setting, which is depended on the fabric of garment, refer to IRONING TIPS latter. The water in the reservoir will be heated and the temperature indicator keeps flickering during heating process. After a few minutes, the temperature indicator turns to illuminate constantly from flickering, it means that the soleplate temperature has achieved the selected temperature.

6. Until now, remove the iron and iron the garment with steam by pressing the steam release button of the iron. During operation, if you need to remove hard crease, you can press the Burst steam button once and then you can iron the cloth with shot of steam.

**Caution:** 1) *Do not touch hot soleplate at any time before cooling down!*

2) *Never direct the steam at people!*

3) *Never turn the soleplate upwards to release steam!*

7. After ironing, remove the plug from the wall socket. But the soleplate is still hot, never touch it with hand, place it on the thermal insulation plate until it cools down completely.

## CLEANING AND MAINTENANCE

Before cleaning, firstly disconnect the power outlet and let the appliance cools down.

1. Wipe flakes and any other deposits on the soleplate with a damp cloth or a non-abrasive (liquid) cleaner.

**NOTE: Do not use chemical, steel, wooden or abrasive cleaners to scrape the soleplate.**

2. Clean the upper part of iron with a soft damp cloth. Wipe the water drop on the unit base and wipe the thermal insulation plate with dry cloth.

3. CLEAN: When the appliance needs to be descaled, the clean indicator will be lightened together with warning can be heard. At that time, turn the temperature dial to "CLEAN" position and then hold and press the Burst steam button and Steam release button at the same time for 2 seconds to activate the calc clean procedure. After finish, the "CLEAN" indicator will be extinguished. If do not activate the calc clean procedure on time, the appliance will turn to the MIN steam amount automatically

 


 
 
- after operating for only 1 hour.
4. When do not use the appliance for a long time, pour out the water in the reservoir, and the steam iron can be stored onto the thermal insulation plate.

## IRONING TIPS

- Always check first whether a label with ironing instructions is attached to the article. Follow these ironing instructions in any case.
- The iron heats up quicker than cooling it down, therefore, you should start ironing the articles requiring the lowest temperature such as those made of synthetic fiber.
- If the fabric consists of various kinds of fibers, you must always select the lowest ironing temperature to iron the composition of those fibers.
- Silk and other fabrics that are likely to become shiny should be ironed on the inner side. -Velvet and other textures that rapidly become shiny should be ironed in one direction with light pressure applied. Always keeps the iron moving at any moment.
- Pure wool fabrics (100% wool) may be ironed with the steam iron. Preferably set temperature dial to the maximum position and use a dry cloth as a mat.
- Never iron over zip, rivet in the cloth. This will damage the soleplate. Iron around any such object.

***NOTE: When ironing woollen fabrics, shining of the fabric may occur. So it is suggested that you should turn the article inside out and iron the reverse side.***

## ADDITIONAL TABLE

Symbol	Fabric	Temp.	Variable steam
	Synthetic fibers/silk		×
	Wool		✓
	Cotton Linen		✓
	<b>Note:</b> The symbol means: This article cannot be ironed!		

## TROUBLESHOOTING

PROBLEM	THINGS TO CHECK	REMEDY
The product cannot generate steam or the generated steam is discontinuous	The power plug is not plugged in and the temperature knob is not turned to the corresponding fabric gear	Plug in the power plug and adjust the temperature knob to the corresponding fabric level
	The water tank is empty	Re fill the water tank to MAX for use
	Insufficient heating of the product	Wait until the temperature indicator light stays on before using it
	Product circuit malfunction or blown fuse	Send to designated repair shop for maintenance
	The wires of the steam pipeline are bent, making it difficult for the steam to flow smoothly	Ensure that the wires of the steam pipeline are not bent
Base leakage	The water tank is not	The water tank is securely

	installed properly	installed on the base
	Water tank rupture	Go to the designated repair shop to replace the water tank
	Internal piping is loose or damaged	Send to designated repair shop for maintenance
If the above method still cannot handle the fault		Please send it to the designated repair shop for maintenance
The base is leaking a lot of water		
Abnormal power outage		

Manufacturer: FOSHAN CITY SHUNDE DISTRICT DONLIM  
INTELLIGENT ELECTRICAL APPLIANCES TECHNOLOGY CO.,LTD  
Address: NO,26 SHUNYE EAST ROAD ,XINGTAN TOWN,SHUNDE  
DISTRICT,FOSHAN CITY, GUANGDONG, CHINA

**Imported to AUS:** SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD  
NSW 2122 Australia

**Imported to USA:** Sanven Technology Ltd. Suite 250, 9166 Anaheim  
Place, Rancho Cucamonga, CA 91730

<b>UK</b>	<b>REP</b>
-----------	------------

YH CONSULTING LIMITED. C/O YH Consulting  
Limited Office 147, Centurion House, London  
Road, Staines-upon-Thames, Surrey, TW18 4AX

<b>EC</b>	<b>REP</b>
-----------	------------

E-CrossStu GmbH  
Mainzer Landstr.69,  
60329 Frankfurt am Main.

**VEVOR®**  
**TOUGH TOOLS, HALF PRICE**

**Technical Support and E-Warranty Certificate**

**[www.vevor.com/support](http://www.vevor.com/support)**