

Chulovs

Diamond Electric Knife Sharpener

User Manual

Please read this manual in detail before the first use.

Warranty

Thanks for selecting and supporting Chulovs.

Chulovs provides all customers free 4 months of product-replacement services.

If there is any quality problem, please send emails to contact us. We will provide you with a satisfying solution.

Thank you for understanding!

Specification

Description: Chulovs Diamond Electric Knife Sharpener

Model: CS0290

Rated Voltage: 110-240V


Frequency: 50/60Hz

Rated voltage: DC12V

Rated Power: 20W

Gross Weight: 921g

Package Size: 324x141x102mm

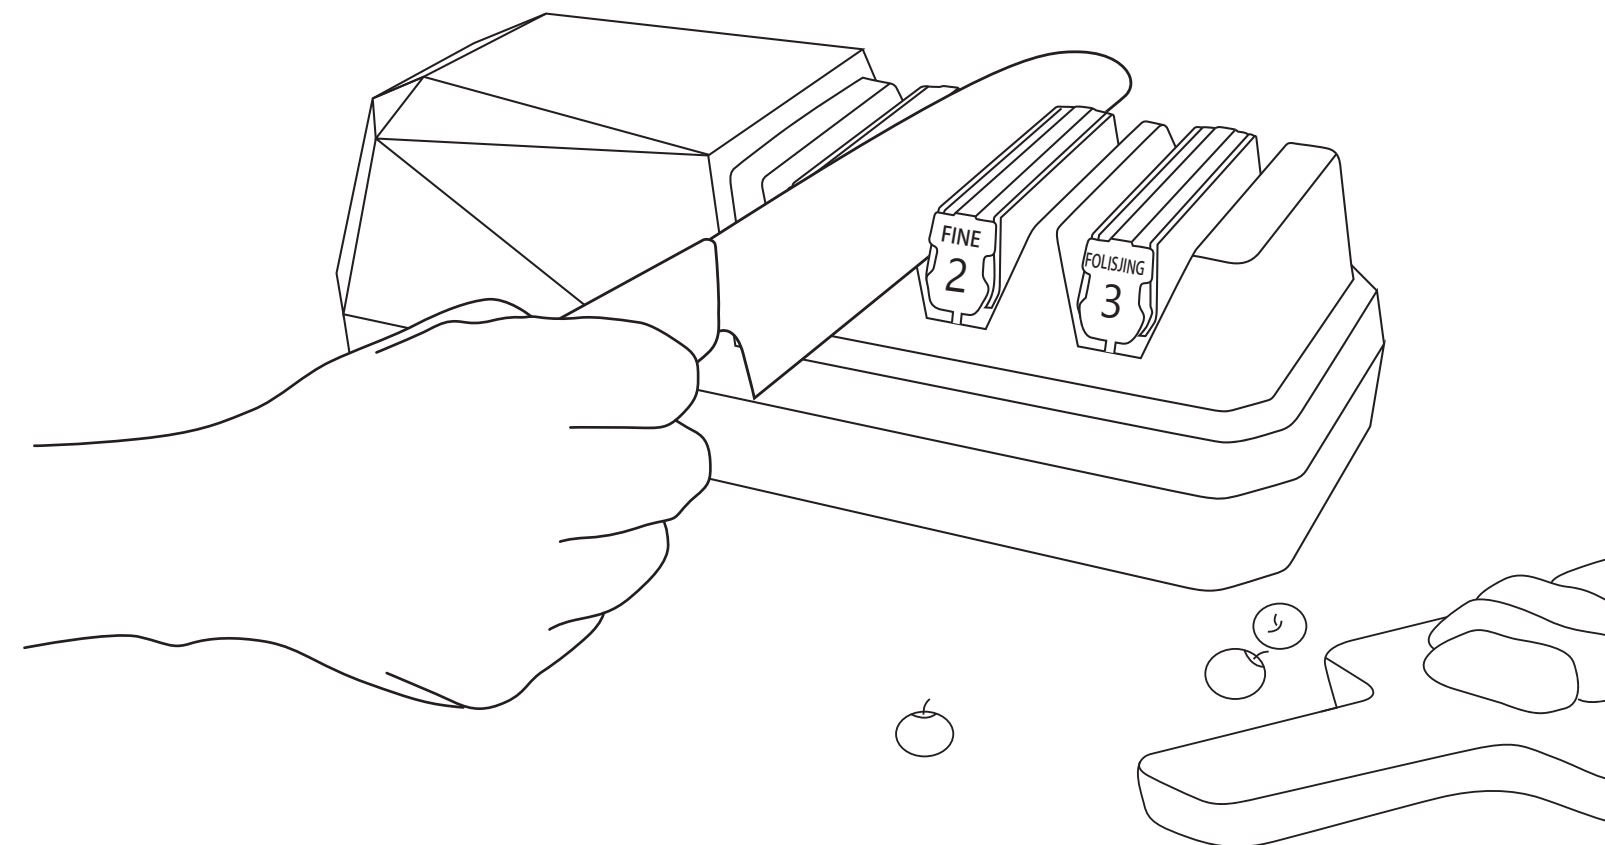



Components

This box contains:

- 1. Sharpener
- 2. Adaptor
- 3. Instruction Manual


Structure

- 1. 3 stage sharpening system
- 2. On/Off Button
- 3. Anti-Slip Feet
- 4. A removable panel for collecting metal shaving
- 5. Adaptor

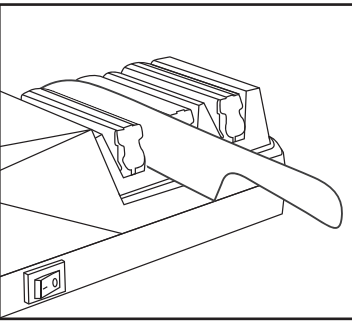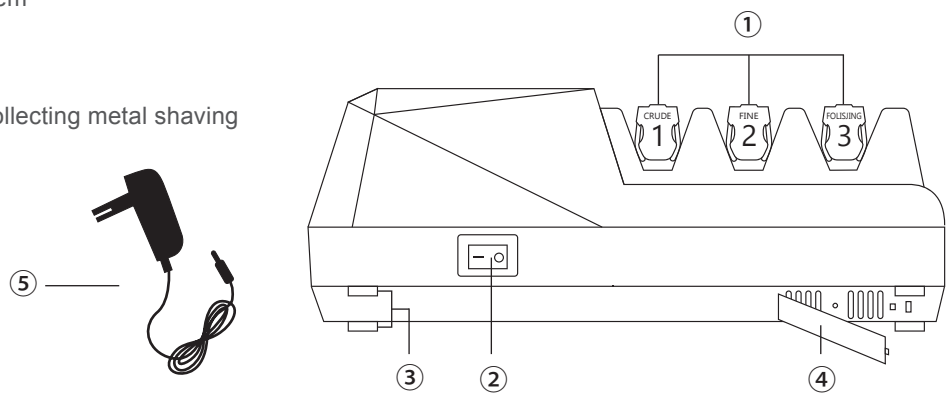


Stage 1 Crude

Begins the sharpening process with rough diamond grinding wheel to create the proper angle for blunt knives.

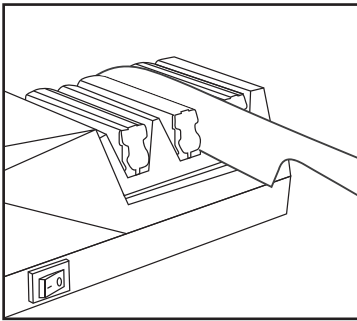

Stage 2 Fine

Continues sharpening with smooth diamond grinding wheel that gives the blade a precision edge.

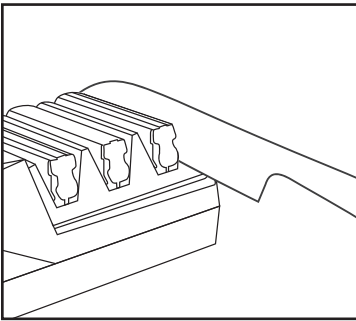

Stage 3 Polish

Completes the process with ceramic grinding wheel that polishes the blade to an extra, razor-sharp edge.



Features

- Compact Design, Superior Quality With Chulovs
- For optimum versatility in providing perfect edge for most types of knives.
- Three Stage Sharpening system for professional results at home.
- Automatically correct location, ensure that the best fixed.
- High quality Diamond abrasives for amazingly sharp edges in seconds.
- Powerful motor, fast speed and strong power, providing you with a better sharpening experience.
- The metal dust collection panel at the bottom ensure easy cleaning.
- Stable working conditions, low noise and a long lifetime.

Instructions For Use

1. Put the sharpener in a stable position, clean the knife and dry it.
2. Power on the sharpener and turn on the switch on the left.
3. Put the knife into the sharpening groove to make the blade touches the rotating grinding wheel.
4. Pull back slowly (about 5 seconds) until the blade all pass through the grinding wheel.
5. As the knife tip comes into the grinder, slowly raise your hand and follow the contour of the blade to ensure all the edge comes in contact with the grinder.
6. Repeat 3-5 in the right-side slot to sharpen both sides of the blade.
7. After completing several paired passes, check the blade for a burr (raised metal) along the knife-edge with your fingers. If there is no burr, repeat paired passes until a burr is present. (Number of passes will depend on how dull the blade is.)
8. Repeat the process in the next stage to remove the burr.
9. If you are using a 3-stage unit, repeat process in the final stage.
10. For a very clean edge, finish with a couple of quick (1 or 2 seconds) paired passes through the fine grit slots.
11. Clean the blade with mild soap and water and wipe dry to remove any residual metal filings.

Tips

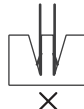1. Each stage have left and right grinding grooves for sharpening both sides of blades.
 2. Place the knife obliquely against the inclined side to get a better sharpening effect.
- 
3. To create more stability, hold the knife sharpener with one hand during use, ensuring your hand is away from the blade and sharpening motion.
 4. Open the removable collection panel at the bottom to clean metal dust.

Cleaning and Maintenance

1. Clean up debris after each use to avoid damage to the sharpener. Attention: Unplug the power plug before cleaning.
2. Unplug before cleaning.
3. Wipe the surface with a clean soft cloth.
4. DO NOT immerse the sharpener in water for cleaning.
5. Store the sharpener in a dry and ventilated place.

Precautions:

2. DO NOT add water, oil or other substances when sharpening knives to avoid danger.
3. The sharpener is not suitable for grinding curved, zigzag tools.
4. DO NOT allow water to flow into the sharpener to avoid damage.
5. In case the grinding wheel is stopped by knives, remove knives immediately to avoid damage to the sharpener.
6. Do not pull the plug out by the cord as this may damage the plug and/or the cable.
7. Close supervision is necessary when any appliance is used by or near children.
8. Children should not play with the appliance.
9. Do not run fingers along edge of knife to check sharpness. To avoid injury, handle knives with extreme care.