



Ball Valve Servo

SKU: BVSZWE01



Quick-Start

This is a secure wireless **Z-Wave Water Valve Motor Servo**. For wireless operation it requires a Z-Wave capable gateway supporting European frequencies. To **add the device, click the button three times in a row**. Success is **indicated by a green blinking LED**. Complete the adding (inclusion) by following the instructions for the gateway. This device supports Z-Wave Smart Start. Please scan the QR Code on the device label before adding if your gateway supporting Smart Start.

Important safety information

Please read this manual carefully. Failure to follow the recommendations in this manual may be dangerous or may violate the law. The manufacturer, importer, distributor and seller shall not be liable for any loss or damage resulting from failure to comply with the instructions in this manual or any other material. Use this equipment only for its intended purpose. Follow the disposal instructions. Do not dispose of electronic equipment or batteries in a fire or near open heat sources.

What is Z-Wave?

Z-Wave is the international wireless protocol for communication in the Smart Home. This device is suited for use in the region mentioned in the Quick-Start section.



Z-Wave ensures a reliable communication by reconfirming every message (**two-way communication**) and every mains-powered node can act as a repeater for other nodes (**meshed network**) in case the receiver is not in direct wireless range of the transmitter.

This device and every other certified Z-Wave device can be **used together with any other certified Z-Wave device regardless of brand and origin** as long as both are suited for the same frequency range.

This device supports **secure Z-Wave communication**. It will communicate with other Z-Wave devices secure as long as the other device provides the same or a higher level of security. Otherwise it will automatically turn into a lower level of security to maintain backward compatibility.

Product Description

The BVS is a motor to retrofit existing and installed ball valves into smart water controlling devices. The motor is powered by a 12 V external power supply or - optionally – a battery block.

The variable clamps allow mounting the device even in complex pipe installations, the patented motor coupling ensures easy installation and precise long-term operation. The device can operate in difficult environmental conditions, even submerged under water and allows directly connecting one additional local water sensor pad by cable.

The device can operate in two modes:

Stand-Alone: No further wireless connectivity is needed. A single click on the button opens and closes the valve. Clicking the button during open or close operation stops movement. The next click will continue the operation. Escaping water is detected by the external sensor pad and the valve is shut off accordingly. The

button on the device allows clearing the alarm. Device in factory reset state operate in stand-alone mode without further configuration.

Z-Wave Network Mode: The device is added to a Z-Wave network as Z-Wave Binary Switch Device. Adding can be achieved using Smart Start or Classical Z-Wave Inclusion. All functions of the Stand-Alone mode remain active. Leakage or Temperature Alarms are forwarded to the Z-Wave Gateway and other Z-Wave device are able to control the motor.

Calibration

The BSV is able to both measure the rotation angle and detect the end positions of the handle. It can therefore gently reach the end positions to avoid any friction and unneeded mechanical stress. Whenever the device is powered or repowered it will do a calibration run first. To start the calibration just hit the button once. You will witness some movements of the handle and after 10...20 seconds the device is ready to operate.

Calibration requires that the BVS is mounted to a ball valve. The device will detect if no valve is present and stop calibration. In this case the operation of the handle (both by button and by wireless command) is disabled.

Prepare for Installation / Reset

In order to include (add) a Z-Wave device to a network it **must be in factory default state**. Please make sure to reset the device into factory default. You can do this by performing an Exclusion operation as described below in the manual. Every Z-Wave controller is able to perform this operation however it is recommended to use the primary controller of the previous network to make sure the very device is excluded properly from this network.


Reset to factory default

This device also allows to be reset without any involvement of a Z-Wave controller. This procedure should only be used when the primary controller is inoperable:

Keep the button pressed for 10 seconds. Then click the button 5 times. The yellow LED will light up to confirm factory reset.

Installation

1. Make sure the power is disconnected.
2. Choose the right size of the fork according to the size of the valve handle.
3. Make sure the two tightening knobs and the handle face opposite direction (handle must have clearance to move)
4. Tighten clamps with hands while holding down the BVS.
5. If needed – unplug the dust cover and connect the local Water Sensor Probe.
6. Connect the DC Power Adapter to the power wire coming from the BVS and tighten the water seal.
7. Plug in the power adaptor into 230 V power socket.

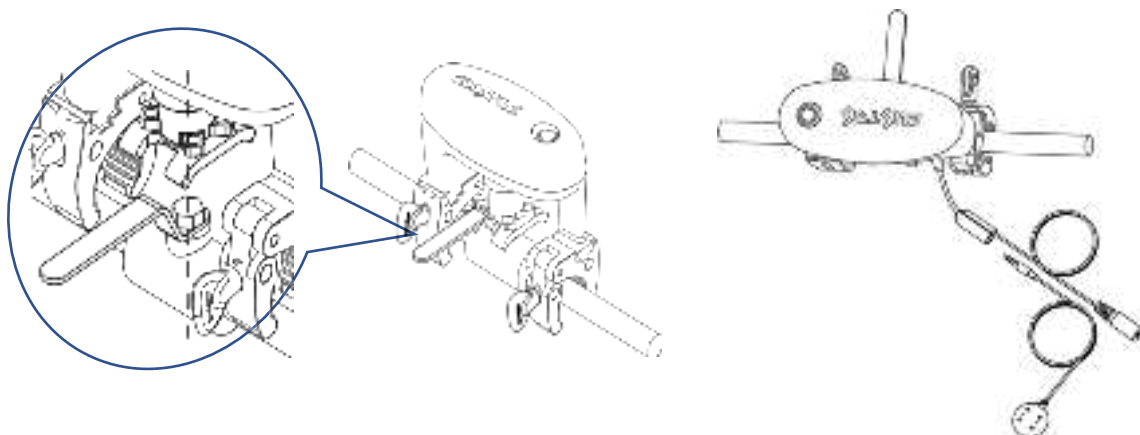

The BVS is designed for outdoor deployments. To prevent mis-operation by rain etc. users can disable the touch sense button. Once disabled the only accepted operation of the button is the reactivation. The operation of the touch sense button can also be enabled/disabled using Z-Wave configuration parameter #67.

Enabling and disabling is performed by holding down the button for 3 seconds followed by three short clicks on the button.

Inclusion/Exclusion

On factory default the device does not belong to any Z-Wave network. The device needs to be **added to an existing wireless network** to communicate with the devices of this network. This process is also called **Inclusion**.

Devices can also be **removed** from a network. This process is also called **Exclusion**. Both processes are initiated by the primary controller of the Z-Wave network. This controller is turned into inclusion respective exclusion mode. Inclusion and Exclusion is then performed doing a special manual action right on the device.

Adding

When using Smart start just scan the QR code on your device.

When using classical Z-Wave inclusion, triple click the button. Success is indicated by a green LED blinking for one second plus two short beeps by the buzzer

Removing

Triple click the button. Success is indicated by a green LED blinking for one second plus two short beeps by the buzzer

Usage

Button Usage

The device has one single button with a three color Led built in. You can click on the button or keep the button pushed for some seconds. The BVS will help you counting the second by beeping every second. The device is designed for outdoor use and must prevent malfunction caused by water drops on the button. Hence, please push the button firmly (not too shy) even for clicking so that the touchless button will recognize your finger.

Local or remote open and close of the valve

Single click on the button starts the opening or closing action. Clicking the button during phase of movement stops the movement. Another click of the button resume operation. (Please note that first operation of valve after power on will always cause calibration. Refer to chapter 'calibration' for more details.)

Z-Wave commands allow opening and closing of the valve using ON/OFF commands.

Local Alarm

When the local sensor probe is attached it will detect water and cause an alarm. The alarm is reported to a Z-Wave controller – when in Z-Wave network mode - and it causes the valve to close. Blinking of red Led plus frequent sound of the buzzer indicate the alarm status. You can't operate the valve anymore before alarm is cleared.

To clear alarm **perform two short clicks on the button (the buzzer will stop and the LED blinks green) and then keep the button pressed for two seconds (count two beeps)**. Triple green link of the LED confirms clearing the alarm.

Local Sensors

The device has built-in sensors that send sensor values to the Z-Wave Gateway when connected.

- Temperature Sensor Value
- Temperature Overheat Alarm (0x04-0x02, heat detected)

- External Sensor Probe
- Water Leak Alarm (0x05- 0x02 leak detected)

Quick trouble shooting

Here are a few hints for network installation if things don't work as expected.

1. Make sure a device is in factory reset state before including. In doubt remove from network before adding to network again.
2. If inclusion still fails, check if both devices use the same frequency.
3. Remove all dead devices from associations. Otherwise you will see severe delays.
4. Never use sleeping battery devices without a central controller.
5. Do not poll FLIRS devices.
6. Make sure to have enough mains powered device to benefit from the meshing

Association - one device controls other devices

Z-Wave devices control other Z-Wave devices. The relationship between one device controlling another device is called association. In order to control a different device, the controlling device needs to maintain a list of devices that will receive controlling commands. These lists are called association groups and they are always related to certain events (e.g. button pressed, sensor triggers, ...). In case of the event, all devices stored in the respective association group will receive the same wireless command wireless command, typically a 'Basic Set' Command.

Association Groups:

Number	Max Nodes	Description
1	5	Lifeline. All alarms and status information that shall be sent to the gateway
2	5	Switch Devices when Water Valve is operated (either local or by sensor o by wireless command)
3	5	Switch Devices when water leak was detected
4	5	Switch Devices when temperature raise above threshold
5	5	Switch Devices when temperature falls below threshold

Configuration Parameters

Z-Wave products are supposed to work out of the box after inclusion, however certain configuration can adapt the function better to user needs or unlock further enhanced features. IMPORTANT: Controllers may only allow configuring signed values. In order to set values in the range 128 ... 255 the value sent in the application shall be the desired value minus 256. For example: To set a parameter to 200 it may be needed to set a value of 200 minus 256 = minus 56. In case of a 2 byte value the same logic applies: Values greater than 32768 may needed to be given as negative values too.

Parameter 17: Water Valve Report Value

This parameter defines how the water valve position is reported.

Size: 1 byte, Default Value: 1

Value	Description
0	Normal
1	Reversed

Parameter 18: Command Sent into Association Group 2 on ON

Defines what BASIC command Value to send into Association Group 2

Size: 1 byte, Default Value: 1

Value	Description
-------	-------------

0	Disabled
1	Enabled Basic On (0xff)
2	Enabled, Basic Off (0x00)

Parameter 19: Command Sent into Association Group 2 on OFF

Defines what BASIC command Value to send into Association Group 2

Size: 1 byte, Default Value: 2

Value	Description
0	Disabled
1	Enabled Basic On (0xff)
2	Enabled, Basic Off (0x00)

Parameter 33: Temperature Sensor Report

Defines if and how a temperature value is reported.

Size: 1 byte, Default Value: 2

Value	Description
0	Disabled
1	Report in Celsius
2	Report in Fahrenheit

Parameter 34: Temperature Sensor Report Threshold

Defines the change in temperature value to cause unsolicited sending of an report.

Size: 2 byte, Default Value: 0001

Value	Description
0x00-0xff	Value in Celsius (Example: 0x02 = 2 °C)
0x100-0x1ff	Value in Fahrenheit (Example: 0x102 = 2 °F)

Parameter 35: Temperature Sensor Report Offset

Defines a temperature offset for the reported temperature. This parameter can be used to compensate for certain temperature deviations.

Size: 2 byte, Default Value: 0

Value	Description
0x00-0xff	Positive Deviation in Celsius (e.g. 0x02 = +2 °C)
0x1000-0x10ff	Negative Deviation in Celsius (e.g. 0x02 = -2 °C)
0x0100-0x01ff	Positive Deviation in Fahrenheit (e.g. 0x02 = +2 °F)
0x1100-0x11ff	Negative Deviation in Fahrenheit (e.g. 0x02 = -2 °F)

Parameter 36: Temperature Overheat Trigger

Sets the temperature to trigger and overheat alarm and

Size: 2 byte, Default Value: 40 / 104

Value	Description
0x00-0xff	Value in Celsius (example: 0x02 = 2 °C)
0x100-0x1ff	Value in Fahrenheit (Example: 0x102 = 2 °F)

Parameter 37: Temperature Overhead Reset Trigger Value

Sets the temperature to reset the overheat alarm and

Size: 2 byte, Default Value: 40 / 104

Value	Description
0x00-0xff	Value in Celsius (Example: 0x02 = 2 °C)
0x100-0x1ff	Value in Fahrenheit (Example: 0x102 = 2 °F)

Parameter 38: Temperature Overhead Action Value

Defines what BASIC command Value to send into Association Group 4

Size: 1 byte, Default Value: 0

Value	Description
0	Disabled
1	Enabled Basic On (0xff)
2	Enabled, Basic Off (0x00)

Parameter 39: Temperature Overhead Action Reset Value

Defines what BASIC command Value to send into Association Group 4

Size: 1 byte, Default Value: 0

Value	Description
0	Disabled
1	Enabled Basic On (0xff)
2	Enabled, Basic Off (0x00)

Parameter 40: Freeze Trigger Value

Sets the temperature threshold to cause a freeze alarm

Size: 2 byte, Default Value: 0

Value	Description
0x00-0xff	Value in Celsius (Example: 0x02 = 2 °C)
0x100-0x1ff	Value in Fahrenheit (Example: 0x102 = 2 °F)

Parameter 41: Freeze Trigger Reset Value

Sets the temperature threshold to reset a freeze alarm

Size: 2 byte, Default Value: 40 / 104

Value	Description
0x00-0xff	Value in Celsius (Example: 0x02 = 2 °C)
0x100-0x1ff	Value in Fahrenheit (Example: 0x102 = 2 °F)

Parameter 42: Freeze Valve Action

This parameter defines If detected freezing shall close the valve

Size: 1 byte, Default Value: 1

Value	Description
0	Disabled
1	Enabled

Parameter 43: Freeze Association Action Command

Defines what BASIC command Value to send into Association Group 5

Size: 1 byte, Default Value: 0

Value	Description
0	Disabled
1	Enabled Basic On (0xff)
2	Enabled, Basic Off (0x00)

Parameter 44: Freeze Association Reset Command

Defines what BASIC command Value to send into Association Group 5

Size: 1 byte, Default Value: 0

Value	Description
0	Disabled
1	Enabled Basic On (0xff)
2	Enabled, Basic Off (0x00)

Parameter 49: Leak Detection Command Value

Defines what BASIC command Value to send into Association Group 3

Size: 1 byte, Default Value: 1

Value	Description
0	Disabled
1	Enabled Basic On (0xff)
2	Enabled, Basic Off (0x00)

Parameter 50: Leak Detection Reset Command Value

Defines what BASIC command Value to send into Association Group 3

Size: 1 byte, Default Value: 2

Value	Description
0	Disabled
1	Enabled Basic On (0xff)
2	Enabled, Basic Off (0x00)

Parameter 51: Water Leak Detection Valve Control

Defines if the valve shall be closed when a water leak alarm occurs

Size: 1 byte, Default Value: 1

Value	Description
0	Disabled
1	Enabled

Parameter 65: Buzzer enable

Defines if built-in buzzer shall be active

Size: 1 byte, Default Value: 1

Value	Description
0	Disabled
1	Enabled

Parameter 66: LED Brightness Level

Defines the brightness level of LED in %

Size: 1 byte, Default Value: 0x50

Value	Description
0-100	Brightness level

Parameter 67: Touch Sensor Key Lock

Defines if touch button is active

Size: 1 byte, Default Value: 1

Value	Description
0	Disabled
1	Enabled

Parameter 81: Notifications

Defines which notifications are active

Size: 1 byte, Default Value: 0x0d

Bit	Description
0	Water Valve Report
1	Overheat Report
2	Freeze Report
3	Water Leak

Technical Data

Parameter	Value
Model No.	BVS-ZWU (US) / BVS-ZWE (EU)
Dimensions	14.8 x 9.6 x 13.3mm
Weight	BVS Unit: 603g
Body Color	White
Knob Color	Blue
Waterproof and Dustproof	IP66 level / Outdoor deployment
Usage	For Indoor and Outdoor Water Valve On/Off
Operation Temperature	14~122° F (-10 ~ +50°C)
Relative Humidity	8% ~ 80%

Parameter	Value
Z-Wave Module	ZGM130S037HGN1
Z-Wave RF Distance	40m (Indoor) / 140m (Outdoor)
Region Frequency	EU: 868.42 & 869.85MHz
Motor Torque Power	Adaptive torque output max: 6n.m
Water Leak Sensor	Local Water Leak Sensor Probe
Temperature Sensor	Built-in MCP9700x, Range from -40°C to +125°C / (-40°F to +257°F)
Action Button	Touch Sense Button x 1
LED Indicator	3 colors LED. (Green, Yellow & Red)
Sound Indicator	Buzzer (Max. 85dB)
Power Supply	AC-DC: AC (110V 60Hz / 220V 50Hz); DC (12V / 1A)
Power Consumption	Standby: ~10mA @ 12VDC = 0.12W Full Operation: Max ~700mA @ 12VDC = 8.4W

Parameter	Value
Wireless Technology	Z-Wave
Z-Wave Certification Type	Z-Wave Plus v2 Certification
Z-Wave SDK Version	v7.13.2
Z-Wave Library	Enhanced 232 Slave
Z-Wave Role Type	Always On Slave
Device Type	Binary Switch
Generic Device Type	Switch Binary
Specific Device Type	Valve Open Close
Security Class	Non-Security, S0, S2 Unauthenticated and S2 Authenticated
SmartStart	Support: After powering on, SmartStart is auto activated if it's out of Z-Wave network when power on
Firmware Update	Support: Firmware upgrade support via RF, "Over The Air (OTA)"
Z-Wave Product ID	0270.0001.000A
Power Down Memory	Support: Valve ON/OFF and Leak Alarm support suddenly power cut and restore previous status

Support and Contact

Should you encounter any problem, please give us an opportunity to address it before returning this product. Please check our website www.aqua-scope.com and particularly the support section for answers and help. You can also send a message to info@aqua-scope.com

While the information in this manual has been compiled with great care, it may not be deemed an assurance of product characteristics. Aqua-Scope shall be liable only to the degree specified in the terms of sale and delivery. The reproduction and distribution of the documentation and software supplied with this product and the use of its contents is subject to written authorization from Aqua-Scope. We reserve the right to make any alterations that arise as the result of technical development.

Phone: +372 (0) 6248002

eMail: info@aqua-scope.com

Web: www.aqua-scope.com



Declaration of Conformity

Aqua-Scope Technology OÜ, Sakala 7-2, 10141 Tallinn, Republic of Estonia,

The radio emitting device works on frequency 868...849 MHz with output power of 4 dBm. (2.5 mW)

Български С настоящото Aqua-Scope Technology OÜ декларира, че този тип радиосъоръжение BVSZWE е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: www.aqua-scope.com/ce
Čeština Tímto Aqua-Scope Technology OÜ prohlašuje, že typ rádiového zařízení BVSZWE je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: www.aqua-scope.com/ce
Dansk Hermed erklærer Aqua-Scope Technology OÜ, at radioudstyrtypen BVSZWE er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: www.aqua-scope.com/ce
Deutsch Hiermit erkläre Aqua-Scope Technology OÜ, dass der Funkanlagentyp BVSZWE der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: www.aqua-scope.com/ce
Eesti Käesolevaga deklareerib Aqua-Scope Technology OÜ, et kesolev raadioseadme tüüp BVSZWE vastab direktiivi 2014/53/EÜ nõuetele. ELi vastavusdeklaratsiooni terviklik tekst on kättesaadav järgmisel internetiaadressil: www.aqua-scope.com/ce
English Hereby, Aqua-Scope Technology OÜ declares that the radio equipment type BVSZWE is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.aqua-scope.com/ce
Español Por la presente, Aqua-Scope Technology OÜ declara que el tipo de equipo radioeléctrico BVSZWE es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: www.aqua-scope.com/ce
Ελληνικά Με την παρούσα ο/η Aqua-Scope Technology OÜ, δηλώνει ότι ο ραδιοεξοπλισμός BVSZWE πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: www.aqua-scope.com/ce
Français Le soussigné, Aqua-Scope Technology OÜ, déclare que l'équipement radioélectrique du type BVSZWE est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: www.aqua-scope.com/ce
Hrvatski Aqua-Scope Technology OÜ ovime izjavljuje da je radijska oprema tipa BVSZWE u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: www.aqua-scope.com/ce
Italiano Il fabbricante, Aqua-Scope Technology OÜ, dichiara che il tipo di apparecchiatura radio BVSZWE conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE disponibile al seguente indirizzo Internet: www.aqua-scope.com/ce
Latviešu Ar šo Aqua-Scope Technology OÜ deklarē, ka radioiekārta BVSZWE atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: www.aqua-scope.com/ce
Lietuvių Aš, Aqua-Scope Technology OÜ, patvirtinu, kad radijo įrenginių tipas BVSZWE atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo internet adresu: www.aqua-scope.com/ce
Magyar Aqua-Scope Technology OÜ igazolja, hogy a BVSZWE típus rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: www.aqua-scope.com/ce
Malti B'dan, Aqua-Scope Technology OÜ, niddikjara li dan it-tip ta' tagħmir tar-radju BVSZWE huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformit tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: www.aqua-scope.com/ce
Nederlands Hierbij verklaar ik, Aqua-Scope Technology OÜ, dat het type radioapparatuur BVSZWE conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: www.aqua-scope.com/ce
Polski Aqua-Scope Technology OÜ niniejszym oświadczam, że typ urządzenia radiowego BVSZWE jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: www.aqua-scope.com/ce
Português O(a) abaixo assinado(a) Aqua-Scope Technology OÜ declara que o presente tipo de equipamento de rádio BVSZWE está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: www.aqua-scope.com/ce
Română Prin prezenta Aqua-Scope Technology OÜ declară că tipul de echipamente BVSZWE este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: www.aqua-scope.com/ce
Slovensko Aqua-Scope Technology OÜ potrjuje, da je tip radijske opreme BVSZWE skladen z irektivno 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: www.aqua-scope.com/ce
Slovensky Aqua-Scope Technology OÜ týmto vyhlasuje, že rádiové zariadenie typu BVSZWE je v sľade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: www.aqua-scope.com/ce
Soumi Aqua-Scope Technology OÜ vakuuttaa, että radiolaitetyyppi BVSZWE on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: www.aqua-scope.com/ce
Svenska Härmed försäkrar Aqua-Scope Technology OÜ att denna typ av radioutrustning BVSZWE överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: www.aqua-scope.com/ce

Disposal Guidelines

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging health and well-being.

