



Heated Foot Warmer

Instruction Manual



AKFP2000

Rev 01

To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

IMPORTANT SAFETY INSTRUCTIONS - RETAIN FOR FUTURE USE

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

DANGER: TO REDUCE THE RISK OF ELECTRIC SHOCK:

- **ALWAYS** unplug the unit from the electrical outlet immediately after using and before cleaning.
- **DO NOT** reach for a unit that has fallen into water. Unplug it immediately.
- **NEVER** use pins or other metallic fasteners with this appliance.
- **DO NOT** place or store appliance where it can fall or be pulled into a tub or sink.
- **DO NOT** place in or drop into water or other liquid.

WARNING: TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

- An appliance should **NEVER** be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
- Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- Use this appliance only for its intended use as described in this manual.
- **DO NOT** use attachments not recommended in this manual; specifically any attachments not provided with the unit.
- **NEVER** operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. For examination and repair contact a Customer Service Centre (see warranty page).
- Keep the cord away from heated surfaces.
- **NEVER** drop or insert any object into any opening.
- **DO NOT** operate where aerosol (spray) products are being used or where oxygen is being administered.
- **DO NOT** operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- **DO NOT** carry this appliance by the supply cord or use cord as a handle.
- To disconnect, turn all controls to the OFF position, then remove plug from outlet.


SAVE THESE INSTRUCTIONS

- **DO NOT** use outdoors.
- Use heated surfaces carefully. May cause serious burns. **DO NOT** use over insensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or incapacitated persons may be dangerous.
- All servicing of this blanket must be performed by authorised personnel only.
- This unit is not intended for use in the hospital setting.
- **DO NOT** pull, twist or bend the power cable.
- **DO NOT** use this product on animals, this product is intended for use on people only.

CAUTION: PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING.

- If you have concerns regarding your health, consult your doctor before using this product.
- Those with the following conditions should consult their doctor before using this product:
 - Pregnancy
 - Malignant Tumor
 - Diabetes
 - Conditions requiring rest
 - Heart Disease
 - Pacemakers
- If at any time soreness, rash or pain occurs, discontinue use and consult your physician.
- **NEVER** use this product directly on swollen or inflamed areas, skin eruptions or an open wound.

INSTRUCTIONS FOR USE

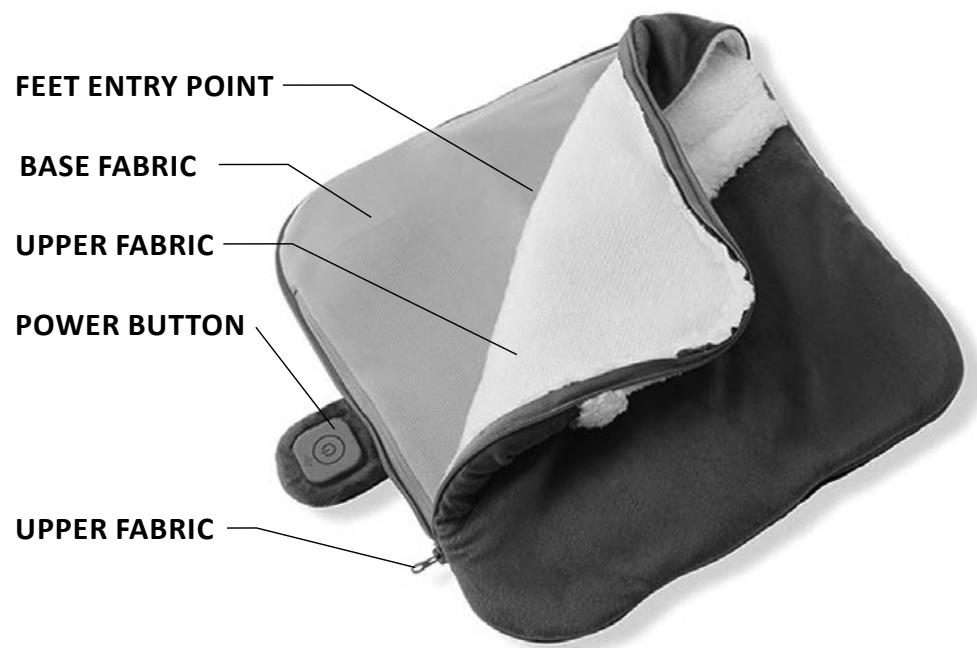

USB-C INPUT PORT



ZIPPER



INSTRUCTIONS FOR USE

TURNING ON

- Plug the USB-C cable into the input port at the side of the  button.
- Connect the USB end of the cable into a USB power adaptor.

WARNING: An Australian approved USB power adaptor must be used to power this unit. The output of the USB power adaptor must not exceed 5v.d.c.,2A

- Press the  power button for 3 seconds to turn the Heated Foot Warmer ON.

TEMPERATURE ADJUSTMENT

Short press the  again to choose between the 3 temperature settings: low, medium, high.

The approximate temperature $\pm 5^{\circ}\text{C}$ at each setting are:

Low - 45°C (Green Light)

Medium - 50°C (Yellow Light)

High - 55°C (Red Light)

TURNING OFF

- Press the  for 3 seconds to turn the Heated Foot Warmer OFF.

MAINTENANCE

TO CLEAN

WARNING: The foot Warmer must be turned off and disconnected from power first.

- Only the upper fabric section is washable.
- Use the zipper to disconnect the upper fabric from the base fabric.
- The upper fabric may be hand washed or washed by machine.
- Ensure the upper fabric is completely dry before connecting it to the base fabric and turning on.
- **DO NOT** immerse the product, cords or controls in water.
- **NEVER** use strong abrasives, detergents, or cleansing agents.
- **NEVER** use abrasive cleaners, brushes, gasoline, kerosene, glass or furniture polish, or paint thinner to clean.
- **DO NOT** switch on unit to dry it. **DO NOT** plug in until completely dry.
- **DO NOT** use or store until the throw is completely dry.
- **DO NOT** attempt to repair the unit. There are no user-serviceable parts. If any abnormalities, wear or defects are visible contact Customer Service on the number listed in the Warranty section for repairs and servicing.

TO STORE

- Turn off the unit, wait for the pouch to cool before storing in a cool, dry place.
- Avoid placing any objects on top of the Foot Warmer.

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us