

A233

**Horn Speaker
Quick Installation Guide**

 


[View PDF](#)

① Package Contents



A233 horn speaker



Screw and tool






Quick Installation
Guide

② Physical Specification

Size Description	285mm *285mm*205mm
------------------	--------------------

   
1) Panel

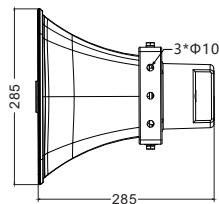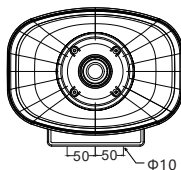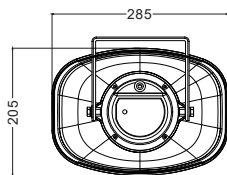

U-shaped bracket

Wiring harness

 
2) Wiring harness

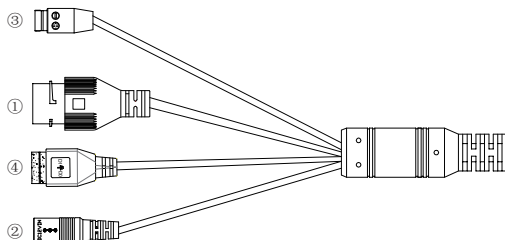

Serial number	Description	Wiring port description
①	Ethernet interface: standard RJ45 interface, 10/100M adaptive support PoE powered, it is recommended to use CAT5 or CAT5E network cable.	
②	Power interface: DC 24V/2A input.	
③	The short circuit input interface: input devices for connecting switches, infrared sensor, door sensor, vibration sensors etc.	
④	The short circuit output interface: corresponding to the short-circuit input interface, login device web page settings, can be connected to electric locks, etc.	

3) External device connection diagram

 Model 1: DC Power

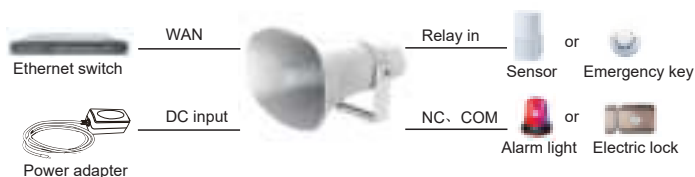


Model 2: PoE




3 Installation Diagram

 
A. Drill three mounting holes suitable for M10 expansion bolts on the wall first, and the distance between the holes is 50mm. Then install the M10 expansion bolts.



 B. Align the holes on the product bracket with the pre-drilled bolts on the wall, screw on the M10 nuts, and fix the product to the wall.

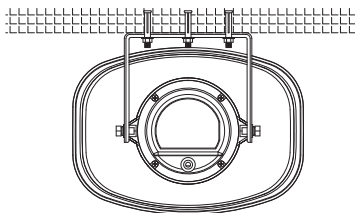

 C. Then adjust the required angle of the loudspeaker.

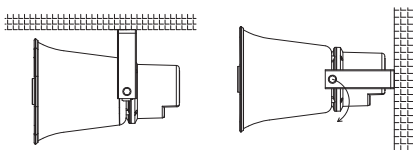

D. Power on the device, if it works normally, the installation is complete.

4 Searching IP Address

The default WAN mode is DHCP, Querying the IP address with the Device Manager:




Device ID	Device Name	Device Type	Device Model	Device IP	Device MAC	Device Status
1	Device 1	Device 1	Device 1	Device 1	Device 1	Device 1
2	Device 2	Device 2	Device 2	Device 2	Device 2	Device 2
3	Device 3	Device 3	Device 3	Device 3	Device 3	Device 3
4	Device 4	Device 4	Device 4	Device 4	Device 4	Device 4
5	Device 5	Device 5	Device 5	Device 5	Device 5	Device 5
6	Device 6	Device 6	Device 6	Device 6	Device 6	Device 6
7	Device 7	Device 7	Device 7	Device 7	Device 7	Device 7
8	Device 8	Device 8	Device 8	Device 8	Device 8	Device 8
9	Device 9	Device 9	Device 9	Device 9	Device 9	Device 9
10	Device 10	Device 10	Device 10	Device 10	Device 10	Device 10
11	Device 11	Device 11	Device 11	Device 11	Device 11	Device 11
12	Device 12	Device 12	Device 12	Device 12	Device 12	Device 12
13	Device 13	Device 13	Device 13	Device 13	Device 13	Device 13
14	Device 14	Device 14	Device 14	Device 14	Device 14	Device 14
15	Device 15	Device 15	Device 15	Device 15	Device 15	Device 15

5 Horn Speaker Setting

Step 1: Log in the web setting page of horn speaker

Input IP address (e.g. [http:// 172.18.26.3](http://172.18.26.3)) into the address bar of PC's web browser.

The default user name and password are both admin.

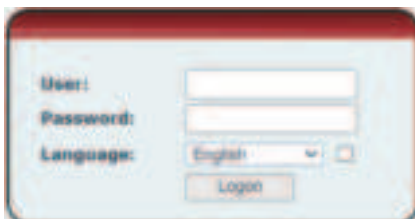

User:

Password:

Language: English

Step 2: Add the SIP account

Set SIP server address, port, user name, password and SIP user with assigned SIP account parameters. Select “Activate”, and then click “Apply” to save this setting.



Step 3: Device Setting



Step 4: Security Settings

If you need to connect other input and output devices, please set the Input and Output setting in the Security Settings:

