



INSTRUCTION MANUAL

SANDWICH MAKER



MODEL B30202J3C

PLEASE READ THIS MANUAL CAREFULLY BEFORE OPERATING
THE PRODUCT AND RETAIN IT FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS==

To prevent injury and property damage, please read this manual carefully and avoid misuse.

If the appliance is not used in the right way or the contents of this manual are ignored, serious damage and injury may result. Please pay attention to the following instructions.

Warnings

1. Do not touch hot surfaces. Use handles or knobs.
2. Close supervision is necessary when any appliance is used by or near children.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
4. To avoid fire hazards and injury, only use the appliance at 120V ~ and do not use the appliance if the power cord is damaged. (Do

not attempt to fix the power cord yourself, twist it, put it in a hot environment, or pull or wrap the power cord as this may damage the power cord and cause injury.)

- 5.If the power plug does not fit your power socket, do not use the appliance. Children must not play with the appliance.
- 6.To avoid scalds, do not touch the metal parts of the appliance or allow any part of your body to come into contact with the steam it emits.
- 7.Do not unplug the power plug with wet hands as this may cause an electric shock.
- 8.Never use the appliance near water sources or damp areas such as bathtubs, sinks, washing machines, damp basements, or swimming pools.
- 9.Only use the appliance with an extension cord capable of accommodating over 15A. Do not share the power plug in which the appliance is plugged with high-powered appliances to prevent fire hazards and overloading the power circuit.

10. Unplug the appliance when it is not in use.
11. The appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, the power plug is intended to fit into a polarized outlet only one way. If it does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
12. Unplug the appliance and allow it to cool before cleaning it or installing or removing any parts.
13. Only use the attachments provided by the manufacturer.
14. Do not use this appliance outdoors.
15. Do not allow the power cord to hang over the edge of a table or other surface or come into contact with hot objects.
16. Do not place the product in hot environments including ovens or microwaves.
17. If the product contains hot oil or other hot liquids, please move it carefully.

18.Only use the product for the purpose it was designed for (making sandwiches).

19.Keep this instructional manual.

ADDITIONAL SAFEGUARDS

20.To avoid fire hazards, do not overload the power cord or socket the appliance is plugged into.

21.To avoid overheating and power failure, do not drop, upturn, shake, or hit the appliance.

22.The product should be used away from anything hot such as stoves and away from the edge of tables and other surfaces.

23.Do not use the appliance for commercial purposes. It is intended for household use only.

24.Except for the first use, do not keep the appliance on for long periods without inserting ingredients.

25.Wait for the appliance to cool down before moving or storing it.


26.Do not immerse the body of the appliance in water.

- 27.Do not damage the surface of the baking tray fittings to avoid deterioration of the Teflon coating.
- 28.Do not leave the appliance unattended when it is in use or use it continuously for a long time.

TECHNICAL SPECIFICATIONS	
Model No.	AK-C021(B30202J3C)
Power Supply	120V~60Hz
Power Consumption	750W
Power Cord Length	0.7m
Dimensions	L237*W233*H89mm
Weights	1kg

Specifications and design are subject to change without notice.

PRODUCT OVERVIEW

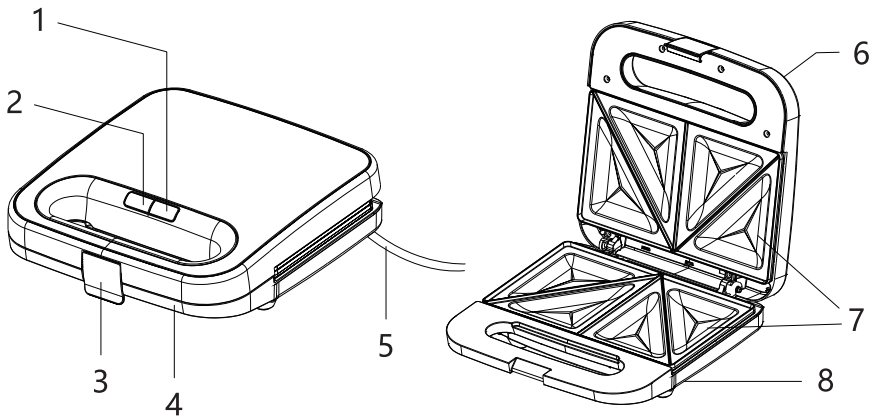

1. Working indicator light: The light indicates that the appliance is heating. When the light is off, the appliance has stopped heating. The appliance functions in this on/off cycle.

2. Power indicator light: The light indicates that the appliance is on. When the light is off, this indicates the appliance is off.

3. Handle lock.

4. Anti-scald handle.

5. Power cord.

6. Upper lid.

7. The baking plates are made with food-safe materials and food-grade coatings.

8. Base.

Note: The baking plates will be hot after use. To avoid scalds, allow them to cool completely before cleaning.

BEFORE FIRST USE

1. Before the first use, wipe and clean the appliance using a soft, dry cloth.
2. The baking trays are not detachable. You can heat the appliance for 5-10 minutes to remove unpleasant odors and sterilize the trays. Wipe and clean the appliance after it has cooled down completely.
3. When operating the appliance, keep it at a distance of over 20cm from walls and the edge of the surface on which it is placed.
4. In the process of heating, steam or some smells may be emitted. A ticking sound after the expansion of the heating tube is normal and not a sign of product failure. The smells emitted by the appliance after heating will gradually

disappear with use.

- 5.It is normal for the outer shell of the appliance to become hot during the heating process.
- 6.The appliance is heated at a constant temperature that cannot be adjusted during use. You can place your sandwich in the appliance first and then plug it in to start toasting your sandwich.

OPERATING INSTRUCTIONS

- 1.Place the dry and clean appliance on a flat surface.
- 2.Close the appliance and connect the power. The appliance will start heating (pre-heating) as soon as the power plug is inserted into the power socket.
- 3.When plugged in, the appliance' s two indicator lights will illuminate, indicating that the appliance is pre-heating. The green indicator light will turn off when the heating process is complete and the appliance will start to cool. Then, the two indicator lights will illuminate again and the appliance will heat and cool in a constant cycle.

MAKING A SANDWICH

1. Power on the sandwich maker and pre-heat it. During the pre-heating process (about 150s), you can prepare your sandwich filling, such as slices of bread, ham, eggs, lettuce leaves, etc.
2. After pre-heating, open the lid of the sandwich maker. Spread some butter on one side of two slices of bread and take one piece of bread and put the butter side down onto the baking pan. Then, put your prepared filling onto the slice of bread and cover it with the other slice of bread with the buttered side up. Finally, close the sandwich maker.
3. When the heating process is complete, open the lid and remove your sandwich. Enjoy.

CLEANING AND MAINTENANCE

- 1.After use and before cleaning, remove the plug from the socket and wait for the appliance to cool down.
- 2.Wipe the inside and edges of the baking plates with an absorbent paper towel or a soft cloth.
- 3.Should any filling be difficult to remove, pour a little cooking oil onto the plate and wipe it off after five minutes when the filling has softened.

- 4.Wipe the outside of the appliance with a slightly moistened cloth to ensure no oil or grease remains on the appliance.
- 5.Do not clean the inside or outside surface of the appliance with an abrasive scouring pad or steel wool as this will damage the finish.
- 6.Use only water or gentle washing-up liquid to clean the appliance. Do not use any other chemical solution to clean the appliance.

WARRANTY: 1 YEAR



AIGOSTAR INC
489 YORBITA RD, CITY OF INDUSTRY, CA 91744(UNIT A)

[HTTP://WWW.AIGOSTAR.COM](http://www.aigostar.com)

MADE IN CHINA