 




X6 **60V** ^{*} **||||** **BRUSHLESS** TM
LITHIUM-ION

CORDLESS LEAF BLOWER

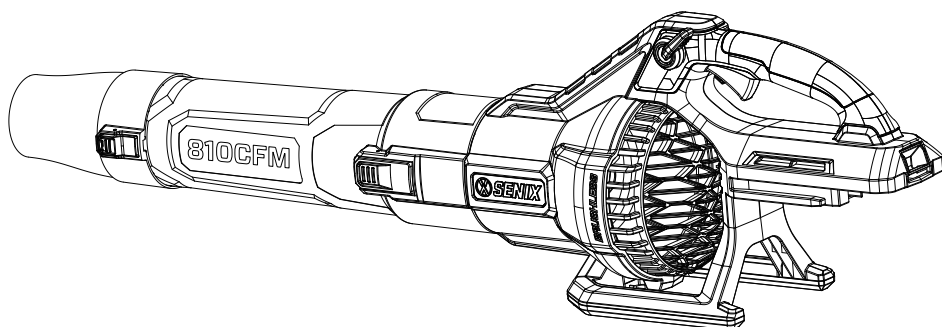

CAUTION: Before using this tool, please read this manual completely, and follow all operating safety measures.

- SAFETY
- ASSEMBLY
- OPERATION
- MAINTENANCE
- WARRANTY

YAT USA INC. 10506 Bryton Corporate Center Dr, #500 Huntersville, NC 28078
For customer support, please call 1-800-261-3981 or email us at senix.support@yatusa.com

TABLE OF CONTENTS

SAFETY & INTERNATIONAL SYMBOLS.....	2
SAFETY INSTRUCTIONS.....	3
KNOW YOUR UNIT.....	6
SPECIFICATIONS.....	7
ASSEMBLY.....	7
OPERATION.....	9
MAINTENANCE.....	10
TROUBLESHOOTING.....	12
WARRANTY.....	13

SAFETY & INTERNATIONAL SYMBOLS

The following table depicts and describes safety symbols that may appear on this product. Read, understand and follow all instructions on the machine before attempting to assemble and operate.



Caution / Warning.



WARNING - To reduce the risk of injury, user must read instruction manual.



Wear eye protection.



Wear ear protection.



Wear respiratory protection.



Do not expose the product to rain or wet conditions.



Wear protective, slip-resistant footwear.



Wear protective gloves.



Failure to keep long hair away from the air intake could result in personal injury.



Failure to keep loose clothing from being drawn into air intake vents could result in personal injury.



Do not operate without tube in place.



Keep all bystanders at least 50 ft. away.



Thrown objects can ricochet and result in personal injury or property damage.



Do not dispose of battery packs in rivers or immerse in water.



Do not dispose of battery packs in fire. They will explode and cause injury.



Do not disassemble, crush, heat above 212°F (100°C); Never expose the battery to microwaves or high pressures.



Indoor use only. Only use battery charger indoors.



Mexican Certification Mark.



Complies with UL standards.

SAFETY INSTRUCTIONS

ORIGINAL INSTRUCTIONS GENERAL POWER TOOL SAFETY WARNINGS



WARNING!

Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

- Keep Children Away – All visitors should be kept at a distance from work area.
- Dress Properly – Do not wear loose clothing or jewelry. They can be caught in moving parts. Use of rubber gloves and substantial footwear is recommended when working outdoors. Wear protective hair covering to contain long hair.
- Use Safety Glasses – Always use face or dust mask if operation is dusty.
- Wear Appropriate Personal Hearing Protection During Use – Under some conditions and duration of use, noise from this product may contribute to hearing loss.
- Use Right Product – Do not use product for any job except that for which it is intended.
- Check Damaged Parts – Before further use of the leaf blower, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting and any other condition that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced call our customer service help line for assistance.
- Lighting – Only operate blower in daylight or good artificial light.
- Don't overreach – Keep proper footing and balance at all times.
- Avoid Dangerous Environments – Don't use blower in rain, damp or wet locations. Do not operate blower in gaseous or explosive atmospheres. Motors in these tools

normally spark, and the sparks might ignite fumes.

- Don't Force product – It will do the job better and with less likelihood of a risk of injury at the rate for which it was designed.
- Stay Alert – Watch what you are doing. Use common sense. Do not operate product when you are tired.
- Store Idle Products Indoors – When not in use, products should be stored indoors in dry, and high or locked-up place – out of reach of children.
- Maintain Blower With Care – Keep guard and handles clean for best performance and to reduce the risk of injury. Keep handles dry and free from oil and grease.

BLOWER SAFETY WARNINGS

- The blower has been designed to clear light debris and leaves from hard surfaces – not for clearing grassed areas.
- This blower is intended for household use only. Commercial use of this product is prohibited and will void the manufacturer's warranty.
- Prevent unintentional starting. Ensure the throttle trigger is released and variable speed control is in the off position before connecting to battery pack, picking up or carrying the product. Carrying the product with a finger on the throttle trigger or energizing the product with variable speed control turned on invites accidents.
- Disconnect the battery pack from the product before making any adjustments, changing accessories, or storing product. Such preventive safety measures reduce the risk of starting the product accidentally.
- When operating the unit, never point the blower nozzle in the direction of people or pets or in the direction of windows. Use extra caution when blowing debris near solid objects, such as trees, automobiles, and walls.
- Be sure to secure the unit when transporting it.
- Never douse or squirt the unit with water or any other liquid. Clean the unit after each use as described in the cleaning and storage section.
- Carefully inspect your product prior to use and follow all label and marking instructions.

- Keep all parts of your body away from any moving parts and all hot surfaces of the unit.
- Do not put any object into the tool's openings. Do not use the tool with any opening blocked; keep openings free of dust, lint, hair, or any other object that may reduce air flow.
- Check the work area before each use. Remove all objects such as rocks, broken glass, nails, wire, or string, which can be thrown or become entangled in the machine.
- Service on the product must be performed by qualified repair personnel only. Service or maintenance performed by unqualified personnel could result in injury to the user or damage to the product.
- Never run the unit without the proper equipment attached. Always ensure the blower tube is properly installed.
- Always grasp the handle when operating the unit and only operate the machine in its intended orientation.
- may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns. (This advice is considered correct for conventional NiMH, NiCd, lead acid and lithium-ion cell types. If this advice is incorrect for a cell design that differs from these, then the correct advice may be substituted.)
- Do not use a battery pack or product that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or product to fire or excessive temperature. Exposure to fire or temperature above 212°F(100°C) may cause explosion.
- Follow all charging instructions and do not charge the battery pack or product outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Do not modify or attempt to repair the product or the battery pack (as applicable) except as indicated in the instructions for use and care.

BATTERY PACK AND BATTERY CHARGER SAFETY WARNINGS

- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use products only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

WARNING!

Use only with SENIX X6 battery:
B30X6/B40X6/B60X6/B80X6/B120X6
And chargers: CHX6-L/CHQX6/CHQX6-M/
CHDX6-M.

- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together

EMERGENCY

Familiarize yourself with the use of this product by means of this instruction manual. Memorize the safety directions and follow them to the letter. This will help to prevent risks and hazards.

1. Always be alert when using this product, so that you can recognize and handle risks early. Fast intervention can prevent serious injury and damage to property.
2. Switch off the product and remove the battery pack if there are malfunctions. Have the product checked by a qualified professional and repaired, if necessary, before you operate it again.

RESIDUAL RISKS

Even if you are operating this product in accordance with all the safety requirements,

potential risks of injury and damage remain. The following dangers can arise in connection with the structure and design of this product:

3. Health defects resulting from vibration emission if the product is being used over long periods of time or not adequately managed and properly maintained.
4. Injuries and damage to property due to broken attachments or the sudden impact of hidden objects during use.
5. Danger of injury and property damage caused by flying objects.
6. Prolonged use of this product expose the operator to vibrations and may produce 'whitefinger' disease. In order to reduce the risk, please wear gloves and keep your hands warm. If any of the 'whitefinger' symptoms appear, seek medical advice immediately. 'Whitefinger' symptoms include: numbness, loss of feeling, tingling, pricking, pain, loss of strength, changes in skin colour or condition. These symptoms normally appear in the fingers, hands or wrists. The risk increases at low temperatures.



WARNING!

 
This product produces an electromagnetic field during operation! This field may under some circumstances interfere with active or passive medical implants! To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their doctor and the medical implant manufacturer before operating this product!

SAVE THIS INSTRUCTIONS

INTENDED USE

The tool is intended for clearing hard surface, such as driveways and walkways, keeping decks and driveways free from leaves and pine needles.

KNOW YOUR UNIT

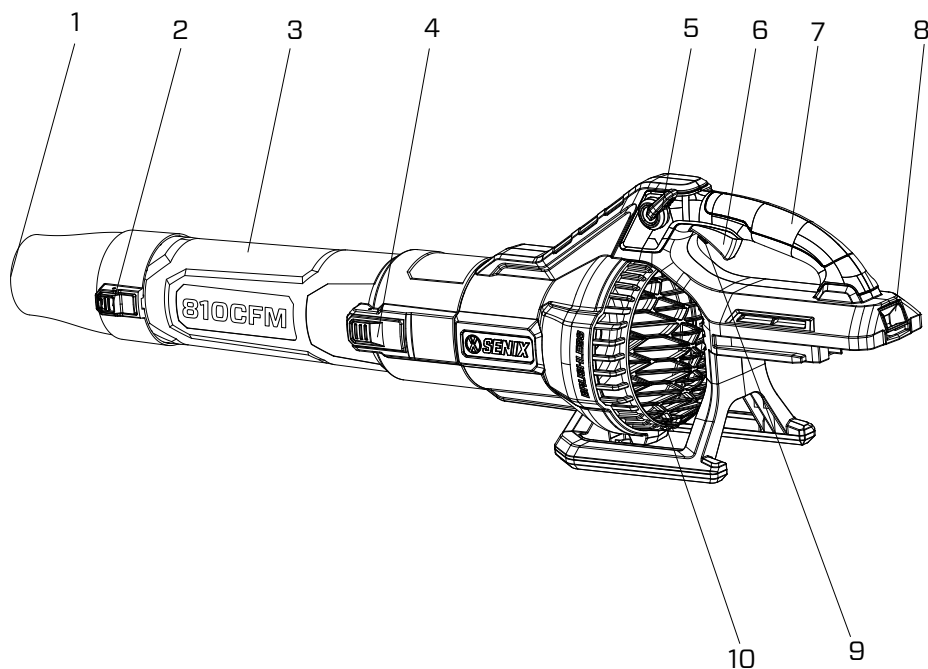

APPLICATIONS

Model: BLAX6-M1

As a blower:

Blowing leaves, garden waste such as grass, twigs and pine needles.

1	Blower nozzle
2	Nozzle-release button
3	Blower tube
4	Tube-release button
5	Speed/Lock-on dial
6	Air-speed trigger
7	Handle
8	Battery-release button
9	High-speed lock button
10	Intake hood

SPECIFICATIONS

Model	BLAX6-M1
Input Voltage	56V  (60 V max*)
Rated Output Power	1 300 W
No-Load Speed	0 - 25 000 RPM (Max)
Maximum Air Speed	170 MPH
Maximum Air Volume	810 CFM
Recommended Operating Temperature	5°F-104°F (-15°C-40°C)
Recommended Storage Temperature	-4°F-158°F (-20°C-70°C)
Weight (tool only)	5.51 lbs

*60V Max battery, maximum initial battery voltage (measured without a workload) is 60V. The nominal voltage is 56V.

ASSEMBLY

1. Unpack all parts and lay them on a flat, stable surface:
2. Remove all packing materials and shipping devices, if applicable.
3. The scope of delivery varies depending on the country and purchased variant.

Model BLAX6-M1

- Blower x1
 - Blower nozzle x1
 - Instruction manual x1
4. If you find that parts are missing or show damage do not use the product but contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.
 5. Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.



WARNING!



Wear protective gloves for this assembly work and always lay the product on a flat and stable surface while assembling.



Follow the assembly instructions step-by-step and use the pictures provided as a visual guide to easily assemble the product!
Do not insert the battery pack before the power tool is completely assembled or adjusted!


INSTALLING/REMOVING THE BLOWER TUBE




WARNING!

To avoid serious personal injury and damage to the unit, shut the unit off before removing or installing an attachment.

1. Align the groove in the tube with the knob on the blower housing. Push the tube onto the blower housing until the latch snaps into place.

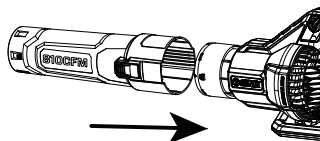 

_____Fig. 1 _____

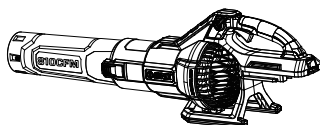 

_____Fig. 2 _____

2. To remove the tube, press and hold the tube-release button to disengage the latch, then pull the tube straight from the blower.

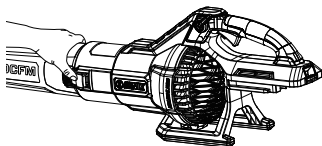 


Fig. 3

INSTALLING/REMOVING THE BLOWER NOZZLE

1. Align the groove in the blower nozzle with the knob on the tube. Push the nozzle onto the tube until it snaps into place.

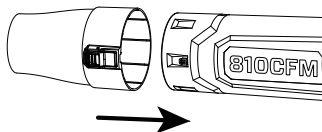 


Fig. 4

 


Fig. 5

2. To remove the blower nozzle, press and hold the nozzle-release button to disengage the latch, then pull the nozzle straight from the blower.

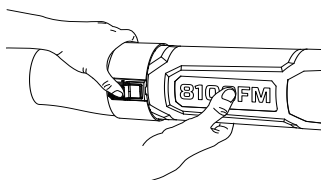 


Fig. 6

INSTALLING/REMOVING BATTERY PACK

To install:

1. Align the ribs of the battery pack with the mounting slots in the blower's battery port.
2. Press the battery pack into the battery port until it snaps into position.

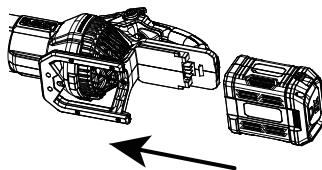 


Fig. 7

To remove:

1. Press the battery-release button. The battery pack will disengage from the latch and the ejection mechanism will assist with removal.
2. Remove the battery pack from the blower.

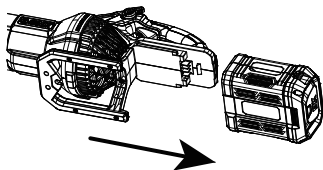 


Fig. 8

WARNING!

Always take care to note the location of your feet, children, or pets when pressing the battery-release button. Serious injury could result if the battery pack falls. NEVER remove the battery pack when in a high location.

NOTE:

Refer to the manuals for the charger and battery pack for more details about how to charge the battery pack and other information regarding to the charger and battery pack.

OPERATION

WARNING!

Inspect the tool for complete installation. Anything missing, damaged, or misplaced parts may cause serious injury. Wear protective equipment at all times while operating the power tool.

SWITCHING ON/OFF

NOTE:

Before use, turn the speed lock-on dial counterclockwise to the off position.

AIR-SPEED TRIGGER ONLY

1. Depress the air-speed trigger to turn on the blower.
2. The air speed of the blower is controlled with the variable speed trigger. More pressure on the trigger results in higher blowing speeds; less pressure on the trigger results in lower blowing speeds. Adjust the speed to suit the task at hand.
3. Release the air-speed trigger to turn off the blower.



NOTE:

Press the trigger to the end (do not press the high-speed lock button) to temporarily increase the air speed to the maximum level. Then turn the speed/lock-on dial clockwise to the end, the maximum speed will be locked automatically. Press the high-speed lock button to exit the maximum airspeed.

SPEED/LOCK-ON DIAL ONLY

The blower can be locked at any speed with the speed lock-on dial.

1. Turn the speed/lock-on dial clockwise to start the blower. The air speed will increase as the dial is rotated clockwise.
2. To decrease the air speed, turn the speed/lock-on dial counterclockwise.
3. Keep turning the speed/lock-on dial counterclockwise to the off position to stop the blower.



NOTE:

Turn the speed/lock-on dial clockwise to the end, and the air speed will reach its maximum and lock automatically. Then press the high-speed lock button to exit the maximum airspeed.

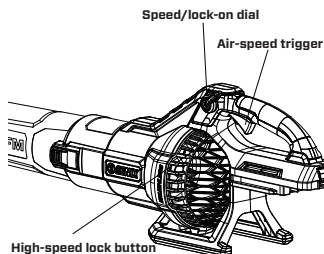 


Fig. 9

GENERAL

1. Double check that accessories or application tools are properly fixed.
2. Always hold the product by its handle. Keep the handle dry and clean to ensure safe support.
3. Ensure that the air vents are always unobstructed and clear. Clean them if necessary with a soft brush. Blocked air vents may lead to overheating and damage the product.
4. Switch the product off immediately if you are disturbed while working by other people entering the working area. Always let the product come to a complete stop before putting it down.
5. Do not direct the blower air stream toward any solid objects such as loose stones or fallen tree branches.
6. Before switching the product on, check whether it has been assembled correctly and all the moving parts are running smoothly!
7. While working, ensure that the product does not strike hard objects, as this can cause damage.
8. Do not blow any solid bodies such as stones, branches or other debris.
9. In dusty conditions using a misting attachment or other water source.

WARNING!

Operation risks may occur, such as blown debris cutting skin, getting into the eyes or mouth, or being inhaled into the lungs. Always wear eye, respiratory, hearing, hand, foot, and body protection to reduce the risk of injury when operating this unit.

BLOWING

1. Before blowing, loosen leaves that are stuck to the ground using a broom or rake.
2. Hold the tube approximately 4 inch (10cm) above the ground and walk slowly forward using a sweeping motion from side to side.
3. Direct the air stream away from yourself.
4. Ensure that you do not stir up any heavy objects at the risk of harming others or damaging your surroundings.

WARNING!

Immediately power off the blower in the event of any abnormal vibrations. Abnormal vibration often shows a mechanical problem and continuous use could result in injury or property damage.

MAINTENANCE

WARNING!

Always switch the blower off, remove the battery pack, and let the product cool down before performing cleaning and maintenance work!

Always wear eye, respiratory, hearing, hand, foot, and body protection to reduce the risk of injury when operating this unit. Only perform cleaning and maintenance work according to these instructions! Any additional maintenance or repairs must be performed by a qualified specialist using genuine replacement parts.

CLEANING

- Switch the product off, remove the battery pack from the product.
- Clear off debris from blower tube.
- Remove wood chips and other debris from air vents.
- Use a small brush to clean the outside of the unit. Do not use strong detergents. Household cleaners that contain aromatic oils such as pine and lemon, and solvents such as kerosene, can damage plastic.
- Wipe off any moisture with a soft cloth. The tool should never come in contact with water.

TRANSPORTATION

- Clean the product as described above.
- Always carry the product by its handle.
- Protect the product from any heavy impact or strong vibrations which may occur during transportation in vehicles.
- Secure the product to prevent it from slipping or falling over, becoming damaged, or falling over and causing damage or injury.

STORAGE

- Clean the product as described above.
- Store the product and its accessories in a dark, dry, frost-free, well-ventilated place.
- Always store the product in a place that is inaccessible to children.
- We recommend using the original package for storage or covering the product with a suitable cloth or enclosure to protect it against dust.



NOTE:

To prolong battery life, never store battery pack in a completely discharged condition. Make sure the battery pack is charged every six months or when the LED indicator shows only one light.

DISPOSAL

When this product is no longer usable, do not dispose of it with household waste. It must be recycled at a proper facility.



Electrical products should not be discarded with household products. Used electrical products must be collected separately and disposed of at collection points provided for this purpose. Talk with your local authorities or dealer for advice on recycling.

TROUBLESHOOTING

Suspected malfunctions are often due to causes that the users can fix themselves. Therefore, check the product using this section. In most cases the problem can be solved quickly.

Problem	Possible Cause	Solution
Product does not start	Battery pack not properly attached	Remove from product and reattach
	Battery pack capacity too low	Remove and charge battery pack
	Battery pack damaged	Inspection by a specialist electrician
	Air-speed trigger not set on start position	Refer to chapter "SWITCHING ON/OFF"
Product does not reach full power	Battery pack capacity too low	Charge battery pack
	Air vents are blocked	Clean the air vents
Vibration or noise is excessive	Bolts/nuts are loose	Tighten bolts/nuts
Product suddenly stops	Battery pack capacity too low	Remove and recharge battery pack
	Battery too hot	Remove battery pack and let it cool down

WARRANTY

SENIX TOOLS LIMITED WARRANTY

FOR FIVE YEARS from the date of original purchase this product is warranted against defects in material or workmanship. WITH PROOF OF ORIGINAL PURCHASE a defective product will receive free repair. If the product cannot be repaired it will be replaced free of charge.

For details to obtain warranty coverage, visit senixtools.com, email senix.support@yatusa.com or call **1-800-261-3981**.

- This warranty does not cover repairs necessary due to product accident or abuse, or failure to operate or maintain the product according to all supplied instructions.
- This warranty does not cover an included battery pack or charger, which offer three-year, replacement-only coverage. See battery pack or charger instruction manuals for complete warranty details.
- This warranty does not cover expendable items that can wear out from normal use within the warranty period, including but not limited to drill bits, cutting blades and trimmer spool or line.
- This warranty does not apply to damage resulting from repairs to the product made or attempted by other than SENIX authorized agents.
- This warranty does not cover the cost of mailing or transporting the power tool to receive warranty coverage.
- The warranty is void if the product has been used for commercial, professional, or rental service purposes.
- The warranty applies to the original retail purchaser and is not transferable.
- Proof of purchase is required to obtain warranty coverage.

THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHERS, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND EXCLUDES ALL INCIDENTAL OR CONSEQUENTIAL DAMAGE. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary in certain states or provinces.

NOTE: Battery pack warranty voided if the battery pack is tampered with in any way. SENIX is not responsible for any injury caused by tampering and may prosecute warranty fraud to the fullest extent permitted by law.

60-DAY MONEY-BACK GUARANTEE. If for any reason within 60 days from the date of original purchase you are not completely satisfied with the performance of this SENIX product, you can return it with the original sales receipt for a full refund.

Latin America: This warranty does not apply to products sold in Latin America. For products sold in Latin America, see the country-specific warranty information contained in the packaging, call the retailer from which it was purchased, or visit the website for warranty information.

Free warning label replacement: If your warning labels become illegible or are missing, call **1-800-261-3981** for a free replacement.

REGISTER ONLINE - www.senixtools.com/pages/product-registration

Thank you for your purchase! Register your product now for:

Warranty Service: Registering your product will help you obtain more efficient warranty service in case of a problem with your product.

Confirmation of Ownership: In case of an insurance loss, such as fire, flood, or theft, your ownership registration will serve as proof of purchase.

For your safety: Registering your product will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act.



YAT USA INC. 10506 Bryton Corporate Center Dr, #500 Huntersville, NC 28078
For customer support, please call **1-800-261-3981** or email us at senix.support@yatusa.com