Package Contents



Inflatable LED Tube Light ×1








Magnetic Stand ×1

USB C Charging Cable ×1

Air Pump ×1

Storage Bag ×1

Product Illustration

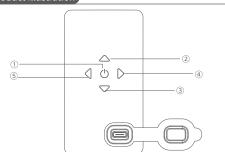

- 1 Power button:
- 1. Short press to activate. Press and hold for 3 seconds to power on; repeat to power off.
 2. When powered on, double press for scene selection. Use the left, right, and power
- buttons to select bi-color scenes, 17 special scenes, and HSI scenes.
- 3. In bi-color mode, short press to cycle through brightness levels: 0% 25% 50% 75% 100% 0%.
- 4. In scene selection mode, short press the up or down button to enter charge/discharge selection. Then, press the left or right button to choose between Type-C charging-only mode or charge/discharge mode.
- Triple press to enter HSI mode. Use the up and down buttons to select hue (H), saturation (S), and intensity (I), then use the left and right buttons to adjust values.
 In this mode, double press the power button to return to scene selection.

Product Illustration

② Up/Brightness + Button:

In bi-color mode, press once to increase brightness by 1% increment, press and hold to increase continuously:

③ Down/Brightness - Button:

Press once to decrease brightness by 1% increment, press and hold to decrease continuously;

 
 $\hbox{$4$ Right/Color Temperature + Button:} \\$

In bi-color mode, press once to increase color temperature by 1%. Press and hold to increase continuously;


 $\ \, \mbox{\Large (§)} \ Left/Color \ Temperature - \ Button :$

In $\dot{\text{bi}}$ -color mode, press once to decrease color temperature by 1%. Press and hold to decrease continuously.

Instructions for Use



- Inflate before powering on. Inflate by exhaling into the valve or by using a manual or electric air pump (sold separately);
- When used for the first time, the product should be completely charged and discharged before recharging.

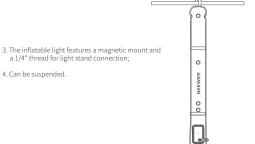

EN

Instructions for Use

17 Special Scenes

F01	6 Lightning	F02	Paparazzi	F03	Defective Bulb
F04	Explosion	F05	Welding	F06	CCT Flash
F07	Color Flash	F08	CCT Pulse	F09	Color Pulse
F10	Police Car	F11	Candlelight	F12	HUE Color Loop
F13	CCT Loop	F14	Brightness Loop	F15	Screen
F16	Fireworks	F17	Party		

Battery Alerts

- Do not disassemble, modify, or repair the built-in battery. Any unauthorized modication may result in battery leakage, overheating, fire, or explosion.
- 2. Do not use a non-original or uncertified charger to charge the product to prevent overcharging, short circuits, or other hazards.
- If abnormal charging speed or unusual blinking of the indicator are observed, please stop using the product immediately and contact our after-sales service for assistance.
- 4. Do not place the product near flammable or explosive materials.

Notes

- Before turning on the light, please inflate it to prevent the TPU exterior from coming into contact with and being damaged by the heat from the LEDs.
- The tube light contains an inflatable airbag. Do not let it touch sharp objects, or expose it to corrosive fluids or gases. Avoid using it in high-temperature, high-humidity environments, and do not squeeze or drop it from high places to prevent damage.
- 3. Do not store the product while it is still hot to prevent the material from melting and sticking together.

Specifications

Model	GC30C			
Product Size (Uninflated)	Approx. 0.9m x 0.12m			
Power	30W			
Type C Input	DC 5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/2.25A			
Type C Output	30W			
Battery Capacity	7.2V 5000mAh 36Wh			
Color Rendering Index	95			
Weight	377g			
Color Temperature	2700-6500K			
Maximum Illuminance	3000lux/0.5m			
Number of Scenes	17			
Hue Angles	0°-359°			
Saturation	0%-100%			
Intensity	0%-100%			
Full Power Runtime	Approx. 70 minutes			