

Insert batteries

05

1

2

3

*For remote control, Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.

Follow on-screen setup

06

Roku TV | Set up with Roku TV Ready 10:05 am | Options

Let's set up your onn. 32" 2.0 Soundbar. Please use your existing Roku TV remote for setup.

To read the Privacy Policy & Terms of Use, press " " on your remote.

Continue

Follow the instructions on your TV screen to set up your 32" 2.0 Soundbar.

Other Connections

<30ft / 9m

Bluetooth

onn. 32" Soundbar Connected

Now Discoverable

*If your TV without HDMI ARC jack, you can also connect your TV with soundbar by other connections (Optical, Bluetooth, Aux or USB).

Hints and Tips

If you have a problem, check the following table for tips:

- When you switch to another channel, the Bluetooth is disconnected.
- When the LED indicator is flashing, the Bluetooth is in disconnected status.
- When the LED indicator is solid, the Bluetooth is connected
- The Soundbar will automatically switch to standby mode when no audio input is received for over 20 minutes, and wake up automatically with any source input again.

Problem	Solution
No power	<ul style="list-style-type: none">• Make sure the main power cords are connected at both ends.• Make sure that the <i>On</i> mode is selected.
Remote Not Working	<ul style="list-style-type: none">• Move closer to the unit.• Point the remote directly at the unit's sensor.• Try new batteries in the remote control.• Remove anything blocking the unit's sensor.
Optical Not working	<ul style="list-style-type: none">• (A) try setting the TV/Display output to PCM or (B) Connect directly to your Blu-ray/ other source, some TV/Display do not pass through digital audio.

If the unit doesn't function correctly, unplug it, wait 30 seconds, and plug it back in.

June 02, 2021_V1

We'd love to hear from you. Scan with your Walmart app and let us know what you think.

100056522

6 81131 41375 6

onn.™

32" 2.0 Soundbar

Quick Start Guide

Roku TV Ready

Simple setup
One remote
Quick settings

HDMI

HIGH-DEFINITION MULTIMEDIA INTERFACE

Roku TV Ready and the Roku TV Ready logo are trademarks of Roku, Inc. The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

What's in the Box?

Check to make sure you have everything below.

1

2

3

4

5

6

7

8

1. Soundbar

2. Remote control

3. AAA batteries

4. Power cable

5. HDMI cable

6. Wall mounting kit

7. Wall mounting template

8. Quick Start Guide

Get to Know Your 32" 2.0 Soundbar

Front

Back

Controls

Red: Standby mode
Green: Optical source
White: Aux in source
Blue: Bluetooth mode
Yellow: HDMI mode
Purple: USB Source

1

2

3

4

5

6

7

8

9

10

11

1. Status indicator

2. Wall mount

3. HDMI(ARC)

4. Aux in

5. USB

6. Optical

7. Power

8. Power on / off

9. Source

10. Volume up

11. Volume down

Adjust TV settings

01

Roku TV

OR

Have a Roku TV?
Simply use the remote that came with your Roku TV and follow **steps 2 and 3**. The rest is automatic, even linking your Roku account.

All other TVs
You may need to enable your TV's HDMI-CEC and ARC settings.

Connect to power

02

Power cable

Use the included power cable to connect your 32" 2.0 Soundbar to a wall outlet.

TIP:
Place your 32" 2.0 Soundbar at the front edge of your TV stand for the best sound experience.

Connect to Your TV

03

HDMI (ARC)

HDMI

(ARC)

HDMI

X

HDMI

ARC

HDMI

Connect your 32" 2.0 Soundbar to the HDMI® port on your TV labeled **"ARC"** with the included cable.

Don't see an HDMI-ARC port?
Use the included optical cable along with the HDMI Cable to connect.

Select input

04

Input

Antenna

A/V 1

HDMI 1

HDMI 2

Use the remote that came with your TV to select the HDMI® input (source) you used to connect your 32" 2.0 Soundbar.

贴纸类\说明书类

- 公差：0~50mm（含）为-0.2/+0.3mm，50~150mm（含）为-0.5/+1mm，150mm以上为-1/+1.5mm，图纸对尺寸有特殊标示的，按标示公差执行；
- 所有材质需满足RoHS2.0、Reach环保及WEEE回收要求，
- 所有贴纸材质满足奋达可靠性测试标准，高温60度，低温-20度，湿度93%，时间24小时，要求黏贴在产品上标签不起翘；

F&D 奋达科技	时 间	20210616	订 单 号	GM2100405				外尺寸/套装数	570X108mm(展开尺寸),190X108mm(成型尺寸)
客户名称	沃尔玛	公司型号	SB2128	料 号	12.005.0004.05142			材质/厚度	128G铜版纸
品牌名称	Onn.	客户型号	100056522	品 名	说明书	产品经理	涂明辉	盒型/页码/条码	风琴折
包装设计师	马野	结构工程师	杨道军	电子/软件	杨红	项目经理	何帅芳	爆破/边压	
平面设计师	李莹	电声工程师		合规	陈忠华	业 务	陈琳云	印刷/表面处理	2色印刷，两面印刷，不可掉色
备 注	设计版本	变更提出人	变更原因		是否有可参考刀模/颜色			工艺/单双驳/AB同版	单驳，禁止打钉，接驳口粘合位用胶粘
	A0				无			正负公差	无特殊要求参照共用公差
					有-料号:				

版本：A/0

onn.TM
2.0 Soundbar
Model:100056522
Wall Mounting Template

MARK HERE

How to Wall-mount the Soundbar

1. Place the included wall mounting template against the wall.
Mark the two bracket holes using a pencil (not included).

onn.
Wall Mounting Template
668.7mm(26.327inch)

2. Put the screws into the plastic brackets.
Fasten the screws and screw brackets to the wall on the bracket holes.

Screw Size: 47 x 4mm (1.85 x 0.157inch)
Screw Bracket Size: 40 x 8mm (1.575 x 0.315inch)

① ②
3~4mm (0.118~0.157inch)
WALL

3. Hang the soundbar on the screws.

MARK HERE

LEGAL & COMPLIANCE

1. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
☐ Reorient or relocate the receiving antenna.
☐ Increase the separation between the equipment and receiver.
☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
☐ Consult the dealer or an experienced radio/TV technician for help.
3. RF Exposure Statement
To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body. Use only the supplied antenna.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

IMPORTANT SAFETY INSTRUCTIONS

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
16. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
17. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
18. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

IMPORTANT SAFETY INSTRUCTIONS

19.
- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

20.The equipment shall be used at maximum 35 degree C ambient temperature.
21. WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

IMPORTANT SAFETY INSTRUCTIONS

22. Batteries should not be exposed to excessive heat such as sunshine, fire, or the like.

WARNING: Danger of explosion if the remote control batteries are incorrectly replaced. Replace only with the same or equivalent type.

23. Keep new and used batteries away from children.
24. If the battery compartment does not close securely, stop using the product and keep it away from children.
25. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
26. **HDMI**
The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

800x80mm folding to 160x80mm
31.5x3.15in folding to 6.3x3.15in

贴纸类\说明书类			时 间	20210618	订 单 号	GM2100405		外尺寸/套装数	800X80mm(展开尺寸) 160x80mm(成型尺寸)	
	客户名称	沃尔玛	公司型号	SB2128	料 号	12.005.0004.05141		材质/厚度	80g书纸	
	品牌名称	Onn.	客户型号	100056522	品 名	挂墙示意卡	产品经理	涂明辉	盒型/页码/条码	5页 风琴折页
	包装设计师	马野	结构工程师	杨道军	电子/软件		项目经理	何帅芳	爆破/边压	
	平面设计师	李莹	电声工程师		合规	陈忠华	业 务	陈琳云	印刷/表面处理	单色 双面印刷
	备 注	设计版本	变更提出人	变更原因			是否有可参考刀模/颜色 <input type="checkbox"/> <input type="checkbox"/>		工艺/单双驳/AB同版	单驳，禁止打钉，接驳口粘合位用胶粘
		A0					<input type="checkbox"/> 无 <input type="checkbox"/> 有-料号:		正负公差	无特殊要求参照共用公差

1、公差：0~50mm（含）为-0.2/+0.3mm，50~150mm（含）为-0.5/+1mm，150mm以上为-1/+1.5mm，图纸对尺寸有特殊标示的，按标示公差执行；

2、所有材质需满足RoHS2.0、Reach环保及WEEE回收要求，

3、所有贴纸材质满足奋达可靠性测试标准，高温60度，低温-20度，湿度93%，时间24小时，要求黏贴在产品上标签不起翘；