

# DART



## USER MANUAL

Hardware Installation and Setup

## Table of Contents

Introduction .....	2
Key Features .....	2
Package Contents .....	2
Getting Started .....	3
Device Components .....	3
Installation .....	4
Hardware Installation.....	4
Web interface Setup .....	5
Admin setup.....	5
Data Monitoring.....	7
Remote Monitoring.....	9
Ambience Readings .....	9
Alerts and Notifications .....	9
Troubleshooting .....	10
Technical Support .....	10
Maintenance .....	10
Replacing Sensors.....	10
Cleaning and Care.....	10
Safety Guidelines.....	10
Electrical Safety .....	10
Environmental Considerations.....	10
Support .....	10

# Introduction

---

**CAUTION:**

Read this manual carefully before installing and using the product. Improper use of the product can cause personal injury and damage to property.

---

1.1 Overview: The DART is an innovative solution that enables remote monitoring of Variable Speed Drives and their surrounding environmental conditions. This manual provides comprehensive guidance on setting up, configuring, and using the device to its full potential.

The equipment and its functioning may be impaired if used in a manner not specified by the product provider.

## Key Features:

- Remote monitoring of Variable Speed Drives
- Temperature, humidity, H2S, and particulate sensors for ambient readings
- Cloud connectivity for real-time data access
- Alerts and notifications for critical events

## Package Contents:

- DART Device
- Power Adapter
- Installation Guide
- Sensor assembly
- Antenna

# Getting Started

## Device Components:

- Dart Gateway
- Power Port
- Sensor Ports
- Ethernet/Internet Port
- Modbus Port



---

#### DANGER: Electrical Hazard

Before starting work on the unit, make sure that the unit and the control panel are isolated from the power supply and cannot be energized. This applies to the control circuit as well.

## Installation



## Hardware Installation

- Unpack the contents of the box: DART device (bigger box), sensor box (smaller box), antenna, power adapter.
- Mount the DART device on a wall or in a cabinet using appropriate fixtures.
- Position the sensor box in the desired location for ambiance measurement, preferably closer to the drives.
- Connect the power adapter to the appropriate port on the DART device.
- Connect the drive(s) using an appropriate three-core screened cable. Ensure proper connections.
- Connect either the EFB ports of the drive or an extended Modbus connector to the indicated ports of the DART device.
- For multiple drives, connect them via a daisy chain configuration.
- Connect the sensor box's USB cable to the DART device.
- Attach the antenna to the designated port on the DART device for wireless communication.
- After turning on the DART Device and making sure the drive(s) are on, configure parameter 58.01 to Modbus RTU and 58.03 to the node of the drive. For example: node 1 for first drive connected after the DART, node 2 for second drive and so on.
- A good drive to DART connection can be ensured by checking transmitted and received packets in parameter group 58.

Ensure all connections are secure and cables are properly routed.

## Web interface Setup

### Admin setup:

- Log into <https://admin-edc-app.azurewebsites.net/> with the unique login details provided to you.
- This database will allow you to manage all your DART devices in one place.
- Add a client in the client tab.
- In the sites tab, select a client first and then add a site under the client.
- Finally, Add a device under the specified site of a client.
- Give your device any name, however, only add the device ID that has been provided to you.
- If the DART is connected to multiple drives, again, assign any given name to the following drives but, only assign DeviceD\_1 for first drive, DeviceID\_2 for second drive, DeviceID\_3 for third drive and so on.



Figure 1: After logging into the admin panel, users can be added in the Users tab. This will allow that particular user to login into the data panel web app.

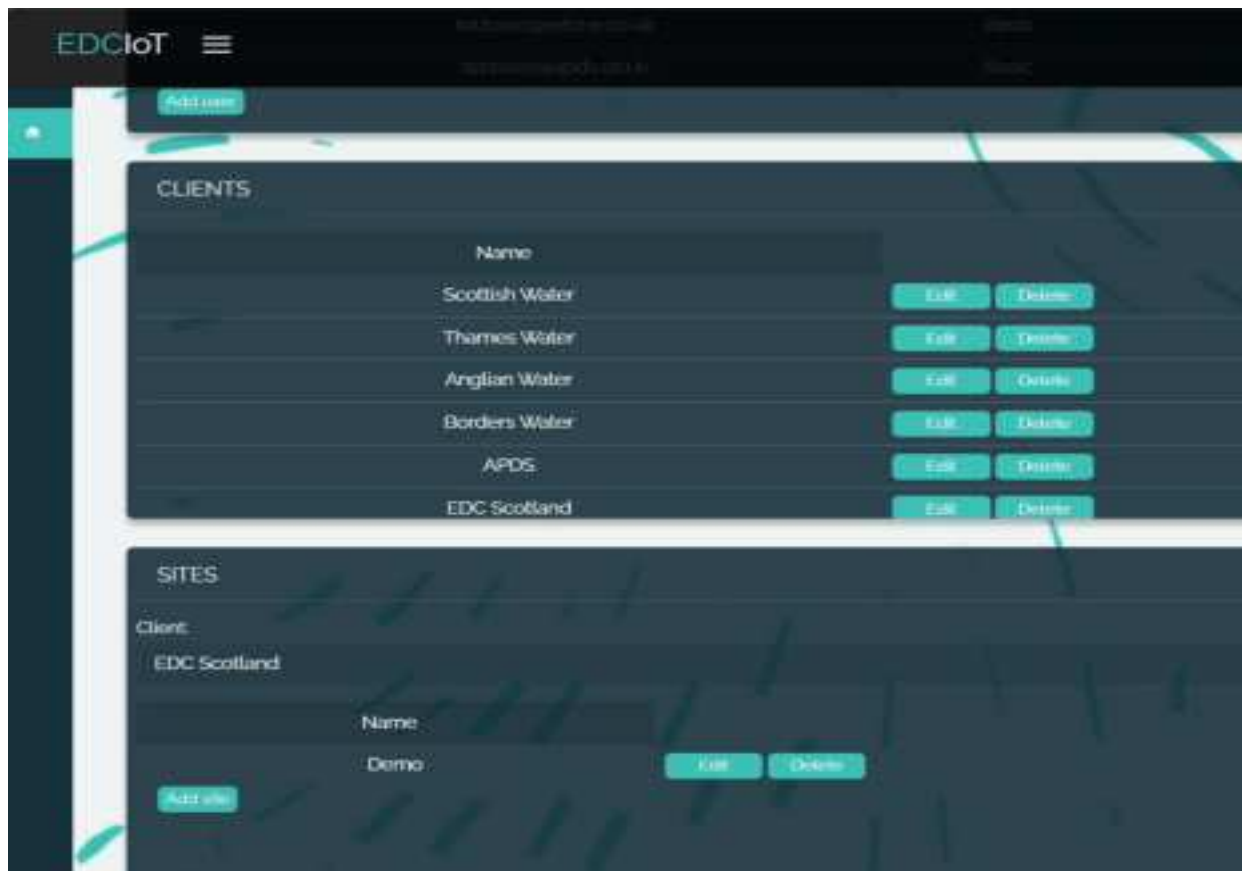


Figure 2: Clients and their sites can be added in the tabs shown in the figure.



Figure 3: In the DEVICES tab, select the site under the client you want to add the device to. The drive name for the device can be anything but the device address should be the same as provided.

## Data Monitoring:

- Log into <https://edc-app.azurewebsites.net/> with unique login details provided to you.
- On the Data Panel Page, select the drive you want to monitor in a site under a client.
- Data should automatically populate to various tabs on the page.
- Select live data option if you want to monitor live data continuously.
- Set your various alarm limits under the ALARM RULES tab.
- Graphs of different variables can be viewed under the TIME HISTORY tab.





## Remote Monitoring

**Ambience Readings:** After setting up a new DART device, it is always a good practise to verify the ambience readings by comparing it to a controlled variable during commissioning.

**Alerts and Notifications:** When an alarm is triggered, the user will be notified via email which can be setup in the DEVICE INFORMATION tab. Multiple users can be added to this alarm recipients tab.



Figure 4: An example of a fault code email received by the user.

## Troubleshooting

**Technical Support:** If issues persist, contact technical support for assistance.

## Maintenance

**Replacing Sensors:** If sensors need replacement, Contact EDC Scotland's technical support team.

**Cleaning and Care:** Make sure the DART Device is installed a dry environment typically with other electronic devices.

## Safety Guidelines

**Electrical Safety:** Adhere to electrical safety precautions during installation and maintenance.

**Environmental Considerations:** Ensure the device is installed in suitable environmental conditions as specified in this manual.

## Support

Contacting EDC Scotland Support: Call 0141 812 3222 / 07943818571 or email [rkamat@edcscotland.co.uk](mailto:rkamat@edcscotland.co.uk)