Bullet - SPK - Spotlight on Spike

Model: BSP07

Installation Instructions


All installations must be carried out by a qualified electrician following local regulations. Make sure that the power is switched off before installation. Please read and follow the 'Installation instructions' and 'Safety instructions' sections carefully before commencing installation.

Installation of this model can change from time to time please read instructions every time before installation. For detailed specification, please go to our website eurotechlighting.co.nz

Code:	Beam angle:	IP Rating:	Kelvins:	Lumens:	Material:	Voltage:	Wattage:
BSP07	30°	IP65	3500K	130lm	Powder coated Anodised aluminium with marine grade paint	24V DC (Parallel) Driver Required	ЗW

Product Information



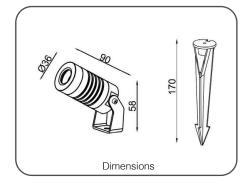


Installation Instructions

- 1. Make sure power is turned off. Put spike into the ground. Make sure to put scoria in the hole for drainage.
- 2. Connect the head of the fitting to the spike.
- 3. Connect cables to your remote driver paying attention to live + neutral markings.

Blue = Negative


Brown = Positive

  4. Ensure installation is correct before switching on the fitting to test.









Saftey Instructions

Read these instructions carefully before commencing installation.

- The light source contained in this luminaire shall only be replaced by the manufacturer or this service agent or a similar qualified person.
- $\textbf{2.} \quad \text{This LED luminaire must be installed by a licensed electrician ONLY following all local regulations}.$
- ${\bf 3.}\;\;$ Ensure that the cables will not be squeezed or damaged by sharp edges.
- 4. Clean the light with a soft cloth and a standard PH-neutral detergent.

- 5. Misuse of/or changes to the appliance shall void all warranties.
- 6. Do not install on a surface that is not suitable or deformed.
- 7. Do not install on or above a surface with a high temperature.
- 8. There should not be any materials that are corrosive, explosive



