


User Guide

Wireless Controller

PAR-WT60R-E

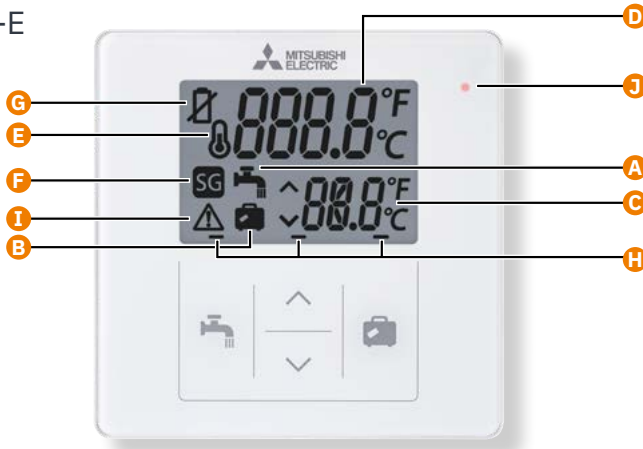

Button	Function	
 Forced DHW Boost	Used to allow Ecodan to force start the Domestic Hot Water (DHW Mode)	
 Holiday Mode	Used to allow Ecodan to enter Holiday Mode	
  Up / Down	Used to adjust room temperature and set duration time in Holiday Mode	
Main Screen Icons	Description	
 DHW Boost Indicator	Indicates that Ecodan is in Domestic Hot Water (DHW) Boost Mode	
 Holiday Mode Indicator	Indicates that Ecodan is in Holiday Mode	
 Set Temperature Display	Indicates the set room temperature	
 Room Temperature Display	Indicates the room temperature	
 Room Sensor Status	Indicates this remote controller is used to measure the room temperature	
 SG-Ready Display	Indicates Smart Grid ready	
 Battery Replacement Indicator	Indicates when to replace batteries	
 Touch indicator	Indicates when buttons are touched	
 Error Display	Indicates unit failure or communication error received	
 Error LED	Mode	
	Flash	
	Failed*	1 time per 3 minutes
	Back up heater operation	
	Low battery	1 time per 3 minutes

*When any malfunction occurs in the indoor unit, outdoor unit, remote controller or receiver.