

Tripod Fan

Owner's Manual

English



Model

90626-WH
90626-ORB
90626-GP
90626-WG

61810-01
R20210301

Hunter®

TABLE OF CONTENTS

Introduction	3
Safety and Warnings.....	3
Fused Plug	5
Unpacking.....	6
Fan Assembly.....	6
Operation.....	7
Off / Speed Selection	7
Fan Tilt Adjustment	7
Maintenance.....	8
Troubleshooting	9
Technical Support.....	9
Warranty.....	9



INTRODUCTION

Thank you for choosing the Hunter Tripod Fan. This manual gives you complete instructions for assembling and using your fan. Here are some of the features you will enjoy with your fan:

- ✓ An attractive design that enhances any decor
- ✓ A powerful motor for maximum air flow
- ✓ Three speeds to adjust your comfort level
- ✓ All metal construction

SAFETY AND WARNINGS

READ AND SAVE THESE INSTRUCTIONS! To reduce the risk of fire or electrical shock, DO NOT use this fan with any solid-state speed control device.

When using electrical appliances, basic precautions should always be taken to reduce the risk of fire, electric shock and personal injury:

Read all instructions before using this fan.

1. Improper installation may result in the risk of fire, electric shock or personal injury.
2. To prevent the risk of fire and electric shock, DO NOT use the unit near windows. Rain and moisture may create an electrical hazard.
3. The power plug must be removed from the power socket when not in use, before cleaning, servicing, maintenance and before moving to another location.
4. DO NOT put fan in a damp place or where humidity is high, such as a bathroom.
5. The fan should be placed on a flat, stable surface to avoid overturning.
6. Use fan only for intended use, as described in this instruction manual.
7. To protect against electrical shock, DO NOT immerse any part of the unit in water or spray with liquids.
8. Close supervision is necessary when any appliance is used near children.



9. NEVER insert fingers, pencils or any other objects through the grill when the fan is running.
10. DO NOT operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner. Discard fan or return to an authorized service facility for examination and/or repair.
11. To disconnect, grip plug and pull from wall outlet. NEVER yank on cord.
12. ALWAYS use on a dry surface.
13. This product is intended for household use only and not for commercial or industrial use.
14. DO NOT operate fan in the presence of explosive and/or flammable fumes.
15. DO NOT place fan or any parts near an open flame, cooking or any other heating appliances.
16. DO NOT use near curtains, plants, window treatments, etc.
17. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit in a polarized outlet one way only. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to bypass this safety feature.
18. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.



WARNING

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or intellectual disabilities, and persons with lack of experience, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.

FUSED PLUG

User Servicing Instructions:

This plug is a safety feature. It contains a safety device (fuse) that should not be removed. Discard the product if the attachment plug is damaged. To reduce the risk of fire, electric shock and personal injury, **DO NOT** remove, replace, repair or tamper with the originally supplied plug. If the fan does not function properly, it may be due to the safety device incorporated in this plug.

If the fuse fails, it is generally due to a short circuit or circuit overload. Replace the fuse as per the instructions below. If the replacement fuse fails, immediately unplug the unit and contact our technical support department for assistance.

Fuse Replacement:

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord. Locate the door on top of the plug. Figure 1
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades. Figure 2.
3. Turn fuse holder over to remove fuse. Remove fuse carefully. Figure 3.

Warning! Electrical Hazard! Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse. If the product fails a second time, immediately unplug it and contact our technical support at 1-888-880-3267.

4. Gently push the fuse back into the pins that will hold it in place.

Note: If the fuse is not seated properly, the unit will not function.

5. Close fuse cover. Slide the fuse cover closed on the plug.
6. Plug the fan back in and resume use. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

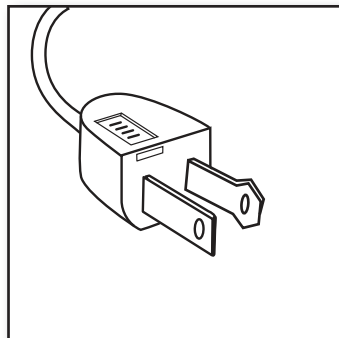 


Figure 1

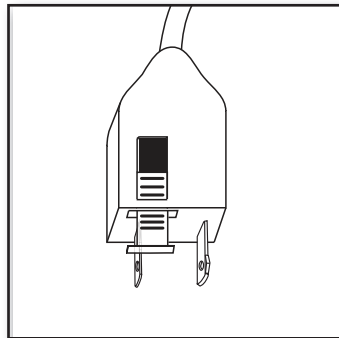 


Figure 2

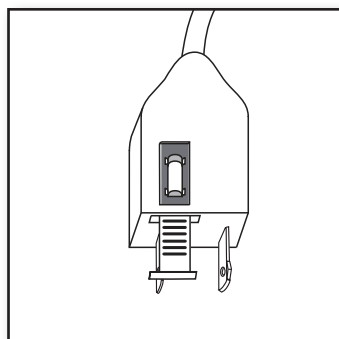 


Figure 3

UNPACKING

As you unpack the fan, save the carton and packing materials in case you want to move or ship the unit in the future. Carefully remove all items from the box.

NOTE: It is best to have someone hold the box while you lift the fan and the protective packaging out of the carton. Make sure all shipping materials are removed from fan before operating.

FAN ASSEMBLY

Follow below steps to attach the fan head to the tripod.

1. Fully extend the tripod legs and place it on a firm, level surface. (Figure 4)
2. Remove the bolt cover from the top of tripod adapter, then loosen the bolt and the nut by turning the nut counter-clockwise. (Figure 5)
3. Turn the fan head perpendicular to the fan head bracket. Carefully fit the fan head bracket into the slot of the tripod adapter, making sure the hole on the fan head bracket align with the hole on the tripod adapter. Insert the bolt through the aligned holes and tighten with the nut to secure the fan head in position. (Figure 6)
4. Place the bolt cover back onto the tripod. (Figure 7)

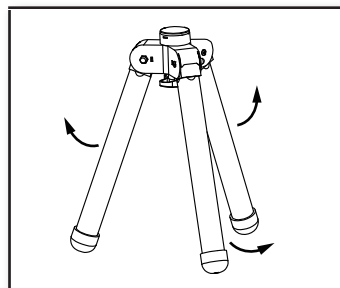 


Figure 4

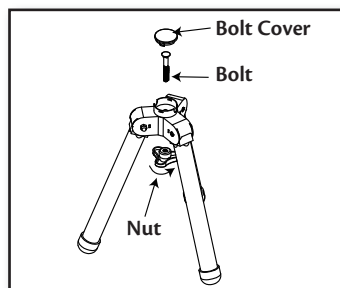 


Figure 5

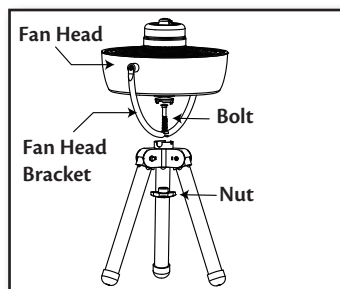 


Figure 6

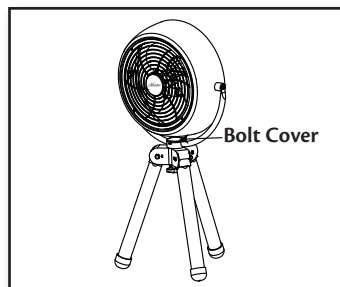 


Figure 7

OPERATION

Off / Speed Selection

Turn the fan "ON" or "OFF" by rotating the power/speed knob at the back of the fan head. The power should always be OFF before unplugging the fan. To select the speed, turn speed control from OFF to the desired speed setting: 0 (off), 1 (low), 2 (medium), 3 (high). (Figure 8)

Fan Tilt Adjustment

To control the upward and downward direction of airflow, adjusted the fan head manually to the desired angle. (Figure 9)

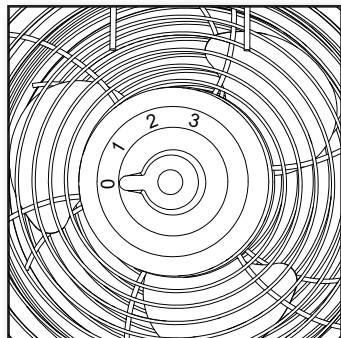 


Figure 8

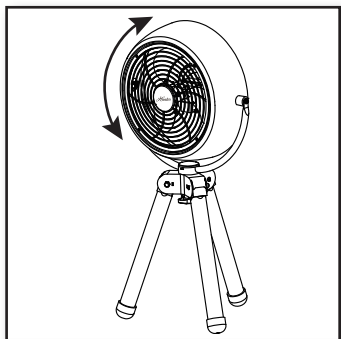 


Figure 9

MAINTENANCE

This fan is permanently lubricated and will not require additional lubrication (oil) for the life of the fan.

 
This fan requires little maintenance and contains no user serviceable parts. **DO NOT** try to fix it yourself. Contact qualified service personnel if servicing is needed.

Before cleaning, turn the fan off and unplug from electrical outlet. Wipe off excess dust with a lint-free cloth. To ensure adequate air circulation to the motor, keep vents located at the rear of the motor free from dust accumulation. A vacuum cleaner hose can be used to clean these vents.

DO NOT immerse the fan in water or any other liquid.

CLEANING THE FAN:

1. Turn the fan off and unplug from the electrical outlet.
 2. Use a dry or slightly damp lint-free cloth to clean the fan.
- ✓ Use a soft, slightly damp cloth to wipe the remaining fan parts.
 - ✓ **DO NOT** allow water or any other liquid to get into the motor housing or base.
 - ✓ **DO NOT** plug the fan into an electrical outlet until it has been fully reassembled.

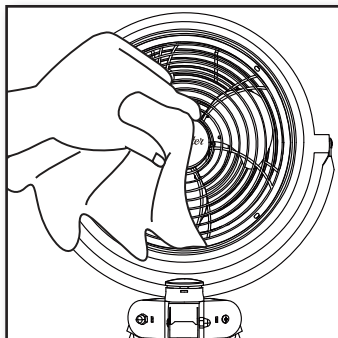


TROUBLESHOOTING

1. Problem

✓ Cannot adjust the angle of the fan.

Solution

 ✓ Loosen the screws on the side of the fan head bracket. Adjust to the desired angle and tighten the screws.

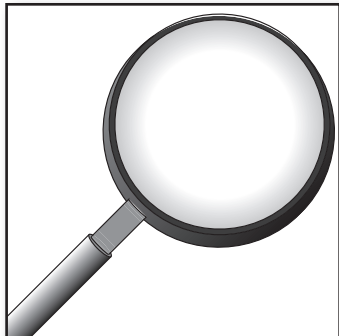

TECHNICAL SUPPORT

If you need any assistance with setup, operation, or parts for your new Hunter Portable Fan, please call us. Our technical support staff is ready to help! We are open 24 hours a day, 7 days a week.

USA: 1-888-880-3267 (FANS)
info@hunterhomecomfort.com

You may also reach us online at
www.HunterHomeComfort.com.

An electronic copy of this user manual can also be obtained online at www.HunterHomeComfort.com.



WARRANTY

Hunter Home Comfort makes the following limited warranty to the user or consumer purchaser of this Hunter Portable Fan:

If your Hunter Portable Fan motor fails at any time within one year after the date of sale due to a defect in material or workmanship, labor to repair the defect will be provided free of charge at our nearest service center or our Service Department in Kennesaw, Georgia. You will be responsible for labor costs after this one-year period. The foregoing limited warranty applies only to the motor itself, and does not apply to electronic controls such as remote controls, remote control receivers or transmitters used in conjunction with the motor. These electronic control items are included in the one year limited warranty below.

If any part of your Hunter Portable Fan other than the motor fails at any time within one year after the date of



sale due to a defect in material or workmanship, we will repair or, at our option, replace the defective part free of charge for parts and labor performed at our nearest service center or at our Service Department in Kennesaw, Georgia.

IF THE USER OR CONSUMER PURCHASER CEASES TO OWN THE FAN, THIS WARRANTY AND ANY IMPLIED WARRANTY WHICH THEN REMAINS IN EFFECT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE VOIDED. NO WARRANTY, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS MADE IN RESPECT TO THE GLASS GLOBES OR LIGHT BULBS OR THE FINISH ON ANY METAL PORTION OF THE FAN. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IN RESPECT TO ANY HUNTER FAN MOTOR OR OTHER FAN PART, IS EXPRESSLY LIMITED TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE FOR SUCH MOTORS AND OTHER PARTS.

This warranty is voided if your Hunter Fan is not purchased and used in the contiguous United States.

This warranty excludes and does not cover defects, malfunctions or failures of any Hunter Portable fan which were caused by repairs by persons not authorized by us, use of parts or accessories not authorized by us, mishandling, improper installation, modifications, or damage to the Hunter Portable fan while in your possession, or unreasonable use, including failure to provide reasonable and necessary maintenance.

To obtain servicing, contact the nearest Hunter authorized service center or the Hunter Home Comfort Service Department, 980 Cobb Place Boulevard NW, Suite 100, Kennesaw, GA 30144. Please contact us before shipping your fan to us. If we authorize you to ship it to us, you will be responsible for all insurance and freight or other transportation charges to our factory service center. We will return your Hunter Fan freight prepaid. Your portable fan should be properly packed to avoid damage in transit since we will not be responsible



for any such damage. Proof of purchase is required when requesting warranty service. The purchaser must present sales receipt or other document that establishes proof of purchase.

IN NO EVENT SHALL HUNTER HOME COMFORT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.



Hunter[®]

980 Cobb Place Boulevard NW, Suite 100,
Kennesaw, GA 30144

Hunter is a trademark of the Hunter Fan Company
and is used under license to Hunter Home Comfort.

Printed in China