

Transmission Lifter Passenger Vehicle Lubrication Guide

Product Code: 2022T / 2063T

Periodic lubrication is essential for the efficient operation of Manual Transmission Lifters. Lack of lubrication can cause severe wear, premature failure.

Lubrication Instructions

1. Pivots and pins in all manual pump and release mechanisms [marked X] should be lubricated with a Light Bearing Grease or 30/40W Machine Oil to ensure long life and prevent premature wear.



2. Wheels and Castors should be lubricated with a Light Bearing Grease or 30/40W Machine Oil to ensure long life and prevent premature wear.



3. Cradle Pins, Pivots and Threaded Adjustor Rods [marked X] should be lubricated with a Light Bearing Grease or 30/40W Machine Oil to ensure long life and prevent premature wear.

