

Using Remote Control



Power Turns the TV on or off.



Shows information on the current program.



Recalls your preferred subtitle in digital mode.



Dash Inserts a — between numbers such as 2-1 and 2-2.

Displays the program event according to time scheduler.



Accesses the [Edit Quick Access].

[Edit Quick Access] is a feature that allows you to enter a specified app or Live TV directly by pressing and holding the number buttons.

Volume buttons Adjusts the volume level.



Channel buttons Scrolls through the saved channels.



Home Accesses the Home menu.



Home Launches the last used apps.



OK Selects menus or options and confirms your input.



OK Accesses the [Magic Explorer]. When using [TV Guide], [Settings], [Sports Alert], or [Art Gallery], press and hold down on the text.

 
Back Returns to the previous screen.



Accesses the saved channel list.



Starts to record. (Only Time Machine Ready supported model)

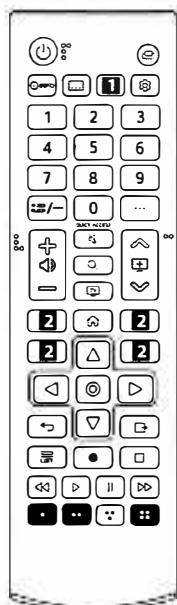

Input Changes the input source.

Enables SAP (Secondary Audio Program) Feature.



Resizes an image.



Q. Settings Accesses the Quick Settings.

Number buttons Enters numbers. Accesses the [Quick Help].



More actions Displays more remote control functions.



Mute Mutes all sounds.



Mute Accesses the [Accessibility] menu.



Search Check for recommended content. (Some recommended services may not be available in some countries.)



Shows the search mode.

You can watch TV or LG Channels.



Streaming Service buttons Connects to the Video Streaming Service.



Navigation button (up / down / left / right) Scrolls through menus or options.



Clears on-screen displays and returns to last input viewing.



Control buttons Control buttons for media contents.



These access special functions in some menus.



**** To use the button, press and hold for more than 1 second.**

 
 
 
The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly.

(Some buttons and services may not be provided depending upon models or regions.)



70JQ7070ZUD 70JQ759CPJK 70U0600CPUD 75U07070ZUM 75U08000AUS
 70JQ7070ZUD 70JQ759CPJK 70U0600CPUD 75U07070ZUM 75U08000AUS
 70JQ759CPJK 70JQ800CALK 75UQ7070ZUD 75UQ7500TUK 75UQ9000TLD

814000274A

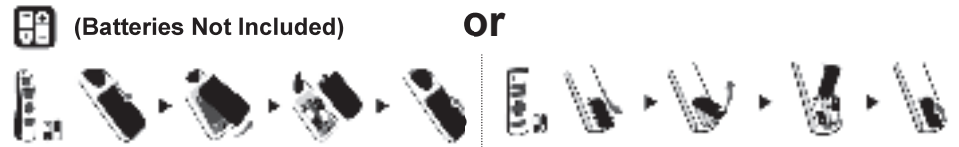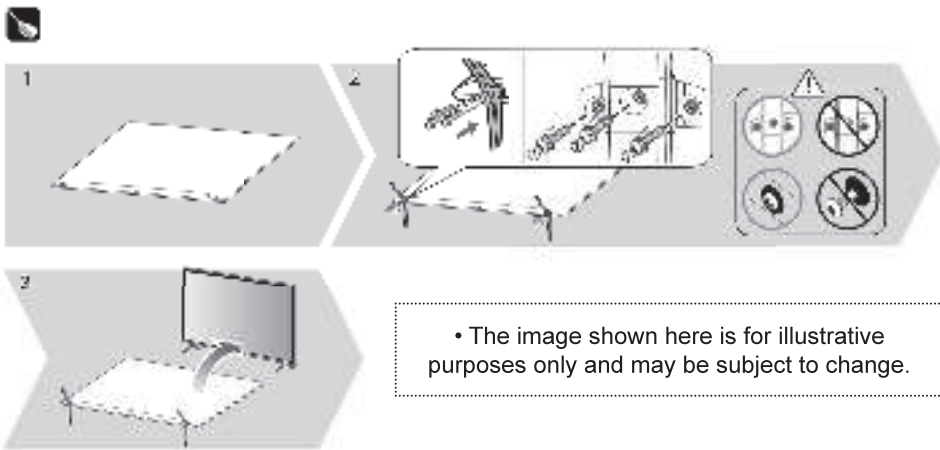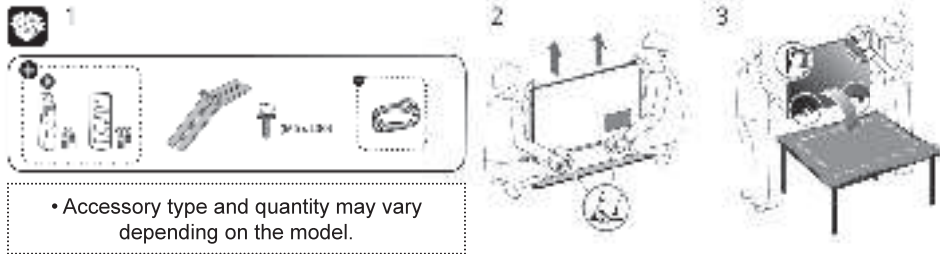

• The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.



• The image shown here is for illustrative purposes only and may be subject to change.

Model	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
70JQ7070ZUD	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100

• The image shown here is for illustrative purposes only and may be subject to change.

• The actual number of ports may have a different name or location.

814000274A

PRINTED IN MEXICO Elbrd: J.E.
 OBPB: *MFL718785192403REV05*
 SHNMDL: 70UQ7070ZUD_H SC: 09-23-2024_2P