

# KENWOOD FDP303WH 800-Watt Food Processor Instruction Manual

[Home](#) » [KENWOOD](#) » KENWOOD FDP303WH 800-Watt Food Processor Instruction Manual 

## Contents [ [hide](#) ]

- [1 KENWOOD FDP303WH 800-Watt Food Processor](#)
- [2 Safety](#)
- [3 Glass Thermoresist Blender only](#)
- [4 Cleaning](#)
- [5 Service and Customer Care](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

# KENWOOD

## KENWOOD FDP303WH 800-Watt Food Processor



## Safety

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.

- If the plug or cord is damaged it must, for safety reasons, be replaced by Kenwood or an authorised Kenwood repairer in order to avoid a hazard.
- DO NOT touch the sharp blades. The blades and discs are very sharp, handle with care. Always hold by the finger grip at the top, away from the cutting edge, when handling the sharp cutting blades, emptying the bowl and during cleaning.
- DO NOT process hot ingredients.
- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to sudden steaming.
- Never leave the appliance unattended when it is operating.
- Do not exceed the maximum capacities stated in the recommended usage chart.
- Do not operate your appliance for longer than the times specified below without a rest period. Processing continuously for longer periods can damage your appliance.

Function/Attachment	Maximum Operation Time	Rest Period Between Operations
Blender/Blend-Xtract 2GO	60 secs	Unplug the appliance and allow to cool down for 15 minutes
Heavy mixtures in the bowl (e.g. Dough)	60 secs	
Mini Chopper/Mill	30 secs	
Grinding Mill	60 secs	

- Do not lift or carry the processor by the handle – or the handle may break resulting in injury.
- Always remove the knife blade before pouring contents from the bowl.
- Keep hands and utensils out of the processor bowl and blender goblet whilst connected to the power supply. If food needs to be pushed down use a suitable utensil such as a spatula.
- Always switch off the appliance and disconnect from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Never use your fingers to push food down the feed tube. Always use the pusher supplied.
- Never fit the blade assembly to the power unit without the glass goblet/bottle or mill jar/lid fitted.
- CAUTION: Before removing the lid from the bowl, blender or mill from the power unit:
  - switch off;
  - wait until the attachment/blades have completely stopped;
  - be careful not to unscrew the glass goblet/bottle or mill jar/lid from the blade assembly.
- Do not use the lid to operate the processor, always use the on/off speed control.
- This appliance will be damaged and may cause injury if the interlock mechanism is subjected to excessive force.
- Never use an unauthorised attachment.
- Never use a damaged appliance. Get it checked or repaired: see 'Service and customer care'.
- Never let the power unit, cord or plug get wet.
- Do not let excess cord hang over the edge of a table or worktop or touch hot surfaces.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience

and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

- Only use the appliance for its intended domestic use. Kenwood will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.
- Misuse of your processor, blender or mill can result in injury.
- The maximum rating is based on the mini chopper/mill attachment that draws the greatest load. Other attachments may draw less power.

#### Blender/Blend-Xtract 2GO

- DO NOT process hot ingredients.
- SCALD RISK: Hot ingredients must be allowed to cool to room temperature before placing in the goblet/bottle or before blending.
- Always take care when handling the blade assembly and avoid touching the cutting edge of the blades when cleaning.
- Only operate the blender with the lid in place.
- Never run the blender empty.
- Smoothie recipes – never blend frozen ingredients that have formed a solid mass during freezing, break it up before adding to the goblet/bottle.

#### Blend-Xtract 2GO

- Only use the bottle with the blade assembly supplied.
- Never drink any hot liquids from the bottle.
- When drinking through the lid, take care that the drink is smooth. Some experimentation may be necessary to achieve the desired result, particularly when processing firm or unripened foods as you may find that some ingredients remain unprocessed.
- Do not blend frozen ingredients or ice cubes without liquid.
- Never blend dry ingredients (e.g. spices, nuts) or run the Blender empty.

#### Glass Thermoresist Blender only

##### **IMPORTANT: HOT BLENDING INSTRUCTIONS**

To minimise the possibility of scalding when blending hot ingredients keep hands and other exposed skin away from the lid to prevent possible burns.

The following precautions must be observed:

- **CAUTION:** Blending very hot ingredients may result in hot liquid and steam being forced suddenly past the lid or filler cap.
- We recommend that hot ingredients are allowed to cool before blending.
- NEVER exceed the hot liquid marking on the goblet if processing hot ingredients, such as soups.
- ALWAYS commence blending at a low speed and gradually increase the speed. NEVER blend hot liquids by using the Pulse setting.
- Liquids which tend to foam such as milk, should be limited to a maximum capacity of 1000mls/4 cups.
- Take care when handling the blender as the goblet and its contents will be very hot.
- Take particular care when removing the lid. The lid is designed to be a tight fit to prevent leakage. If necessary protect your hands with a cloth or oven gloves when handling.

- Ensure the goblet is securely attached to the base and when removing from the appliance, guide the base and ensure it is removed together with the goblet.
- Ensure that the lid and filler cap are securely in place before every blending operation.
- Always ensure that the vents in the filler cap are clear before every blending operation.
- When fitting the lid to the goblet always ensure that the lid and goblet rim are clean and dry to ensure a good seal and prevent spillage.

## **Mill Attachments**

- Never fit the blade assembly to the power unit without the jar/lid fitted.
- Never unscrew the jar/lid while the mill is fitted to your appliance.
- Do not touch the sharp blades – Keep the blade assembly away from children.
- Never remove the mill until the blades have completely stopped.
- The appliance will not work if the mill is incorrectly fitted.
- Do not process hot ingredients in the mill allow to cool down to room temperature before processing.

## **Mini Chopper/Mill**

- The processing of spices is not recommended as they may damage the plastic parts.

## **Grinding Mill**

- Do not process dried turmeric root as it is too hard and may damage the blades.

## **Juice extractor**

- Do not use the juicer if the filter, juicer lid or bowl are damaged or has visible cracks.
- The cutting blades on the base of the filter drum are very sharp, take care when handling and cleaning the drum.
- Only use the pusher supplied. Never put your fingers in the feed tube. Unplug before unblocking the feed tube.
- Before removing the lid, switch off and wait for the filter to stop.

## **Express Dice/Express Serve Attachment and Discs**

- The cutting grid and discs are very sharp; handle with care when fitting, removing and cleaning. Always hold by the finger grip away from the cutting edge when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Never use your fingers to push food down the feed tube. Only use the pusher supplied.
- Do not use excessive force to push food down the feed tube –you could damage your attachment.
- Before removing the lid, switch off and wait until the disc has completely stopped.
- Do not pour hot liquids down the feed tube.

## **Express Serve**

- Avoid contact with moving parts. Keep fingers out of the food outlet opening.
- Do not operate when using the Dicer or Discs without the slinger plate fitted. If the slinger plate is not fitted food will clog under the plate and not exit the food outlet, resulting in damage to your attachment.
- The citrus juicer is not designed to be used with the Express Serve. Always use the citrus juicer with the main bowl.

## Cleaning

1. Wipe the power unit and whisk drive head with a damp cloth, then dry. Ensure that the interlock area is clear of food debris.
2. Do not immerse the power unit, whisk drive head or blade assemblies in water.
3. The bowl, lid, pusher and all attachments/tools apart from the blade assemblies and whisk drive head are suitable for both handwashing and dishwashing.
4. The blade assemblies should be brushed clean and rinsed under running water.
5. Blender with fixed blades – Do not dishwash or immerse the blender base in water. Fill with warm water, fit the lid, then switch on for 20-30 seconds. Empty, then rinse. If it is still dirty use a brush. Wipe, then leave to air-dry.

## Service and Customer Care

- If you experience any problems with the operation of your appliance, before requesting assistance refer to the 'Troubleshooting Guide' section in the usage manual or visit [www.kenwoodworld.com](http://www.kenwoodworld.com)
- Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.
- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up to date details of your nearest authorised KENWOOD Service centre visit [www.kenwoodworld.com](http://www.kenwoodworld.com) or the website specific to your Country.

## Documents / Resources

<div data-bbox="164 1464 250 1487">KENWOOD</div> <div data-bbox="164 1487 250 1509">Important Safety</div> <div data-bbox="164 1509 250 1680"> <ul style="list-style-type: none"> <li>68 Important Safety 2-4</li> <li>69 Important Safety 2-4</li> <li>70 Important Safety 2-4</li> <li>71 Important Safety 2-4</li> <li>72 Important Safety 2-4</li> <li>73 Important Safety 2-4</li> <li>74 Important Safety 2-4</li> <li>75 Important Safety 2-4</li> <li>76 Important Safety 2-4</li> <li>77 Important Safety 2-4</li> <li>78 Important Safety 2-4</li> <li>79 Important Safety 2-4</li> <li>80 Important Safety 2-4</li> <li>81 Important Safety 2-4</li> <li>82 Important Safety 2-4</li> <li>83 Important Safety 2-4</li> <li>84 Important Safety 2-4</li> <li>85 Important Safety 2-4</li> <li>86 Important Safety 2-4</li> <li>87 Important Safety 2-4</li> <li>88 Important Safety 2-4</li> <li>89 Important Safety 2-4</li> <li>90 Important Safety 2-4</li> <li>91 Important Safety 2-4</li> <li>92 Important Safety 2-4</li> <li>93 Important Safety 2-4</li> <li>94 Important Safety 2-4</li> <li>95 Important Safety 2-4</li> <li>96 Important Safety 2-4</li> <li>97 Important Safety 2-4</li> <li>98 Important Safety 2-4</li> <li>99 Important Safety 2-4</li> <li>100 Important Safety 2-4</li> </ul> </div>	<div data-bbox="316 1525 1342 1626"> <p><a href="#">KENWOOD FDP303WH 800-Watt Food Processor</a> [pdf] Instruction Manual FDP303WH, 800-Watt Food Processor, FDP303WH 800-Watt Food Processor, Food Processor</p> </div>
--	--

## Related Posts



### [KitchenAid KFP0719 7 Cup Food Processor User Manual](#)

KitchenAid KFP0719 7 Cup Food Processor User Manual - Optimized  
PDF KitchenAid KFP0719 7 Cup Food Processor User...

### [Cuisinart CompleteChef Cooking Food Processor \[FPC-100\] Instruction Booklet](#)



CompleteChef Cooking Food Processor [FPC-100] Instruction Booklet - Optimized PDF Cuisinart  
CompleteChef Cooking Food Processor [FPC-100] Instruction...



### [Cuisinart FP-110 10-Cup Food Processor User Guide](#)

Cuisinart FP-110 10-Cup Food Processor User Guide Operation  
Instructions With the work bowl on the base, use the...



### [RANBEM USB Food Processor Instruction Manual](#)

RANBEM USB Food Processor Important safety instructions When using  
electrical appliances, basic safety precautions should always be followed,  
...