



# User Guide

 
## 구성품



GB LASER lite2 본체



휴대용 케이스



사용설명서



CR2 배터리



카라비너




마이크로 화이버  
(렌즈 청소 전용)

## 각부 명칭 및 버튼 설명



 
## 뷰 파인더(LCD) 설명

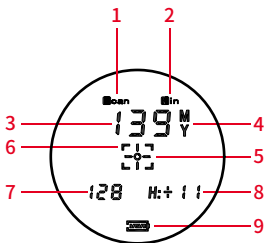

|   |                                                                                     |                                   |
|---|-------------------------------------------------------------------------------------|-----------------------------------|
| 1 |    | 스캔 기능 작동 시에만 표시                   |
| 2 |    | 핀 파인더 기능 작동 시에만 표시                |
| 3 | 139                                                                                 | 고저 차(오르막/내리막)가 보정된 거리             |
| 4 | M<br>Y                                                                              | 거리 단위 표시(Meters / Yards)          |
| 5 |    | 측정 목표 조준용 십자선                     |
| 6 |    | 측정 목표 탐색시 깜빡이고 탐색 성공 시 사라지는 측정 박스 |
| 7 | 128                                                                                 | 레이저로 측정된 직선 거리                    |
| 8 | H: + 11                                                                             | 목표물의 고저 차(수직 높이, 오르막+, 내리막-)      |
| 9 |  | 배터리 잔량 표시                         |


# 제품 사용법 및 주요 기능 설명
 
## ▶ 배터리 보호필름 제거 및 초점 맞추기

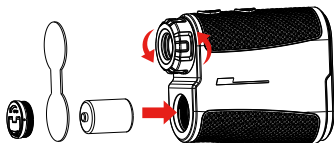

### ① 배터리 보호 필름 제거

 - 배터리 캡을 시계 반대 방향으로 돌려서 분리
- 배터리와 캡 사이 보호 필름 제거
- CR2 3V 배터리 음극(-)을 밑으로 향하도록 삽입



### ② 초점 맞추기 (접안부 디옵터 조정 링)

- 뷰 파인더를 통해 측정 목표 조준선 및 측정 거리와 물체가 뚜렷하게 보일 때까지 조정 링을 돌려 초점 변경



## ▶ 작동법

1. 전원/측정 버튼 눌러 전원 켜기
2. 모드 선택
3. 초점 조준용 십자선에 목표물 맞춤
4. 전원/측정 버튼 누름  
→ 측정 박스가 활성화되면서  
거리가 측정됩니다.

## ▶ 거리 단위 표시 변경

- 모드 버튼을 약 3초간 누른 상태 유지, LCD  
거리 표시가 M : Meters / Y : Yards로 변경

## ▶ 고저(Slope) ON/OFF

- 모드 버튼을 5초간 누름 : ON ⇄ OFF 전환

## ▶ 고저 차(Slope) 기능

[슬로프 ON] 목표물까지 고저 차를 자동으로 보정한 거리를 화면 상단에 표시  
직선 거리 및 고저 차(+/-)는 화면 하단에 표시 됨

[슬로프 OFF] 목표물까지 직선거리를 화면 상단에 표시

 
## ▶ 모드 설정(총 2가지 모드)

- 모드 버튼을 짧게 누르면 표준 → 스캔 → 표준 모드의 순서로 번갈아 변경됩니다.
- 모드 변경은 초점 조준용 십자선 노출 시에만 변경이 가능하며, 측정 박스가 활성화되어 있는 경우 변경이 불가능합니다.



※ 측정 박스는 전원/ 측정 버튼을 한번 누를 때마다 활성화되므로 비활성화된 후 모드를 변경하시기 바랍니다.

### [표준 모드 및 핀 파인더 기능]



- 전원/측정 버튼을 짧게 한번 누르면, 목표물을 찾을 경우 진동과 함께 거리가 표시
  - 전원/ 측정 버튼을 1초 이상 길게 누르면 자동으로 '핀 파인더 기능'이 켜짐
  - 해당 기능은 2개 이상의 사물이 포착되었을 경우에 가장 가까운 사물까지의 거리를 제공하고, 핀 뒤 편 나무나 바위 등 다른 사물이 있더라도 핀까지의 정확한 측정을 하게 해주는 기능
- ※ 전원/측정 버튼을 길게 누른 상태로 뒤편의 특정 사물(나무)을 향한 후, 다시 핀을 향해 거리 측정을 움직여 뷰 파인더의 조준용 십자선을 핀에 맞추면 진동과 함께 핀까지의 가장 정확한 거리가 측정됩니다.

### [스캔 모드]



- 다양한 목표물들이 거리를 확인할 때 유용
- 전원/ 측정 버튼을 한 번 누르면, 5초간 연속 스캔되어 여러 목표물까지의 거리를 지속 제공

※ 스캔 모드에서는 전원/측정 버튼을 짧게 한 번만 누르면 흔들림 없이 거리가 측정됩니다.

※ 전원/측정 버튼을 계속 누르고 있을 필요가 없습니다.

## 유의사항

기기 사용 전에 아래의 유의사항을 충분히 확인하시기 바랍니다.

- 사람의 눈 또는 태양을 향해 직접 조사하지 마십시오. (시력 손상의 원인이 될 수 있습니다.)
- 대물렌즈 혹은 레이저 수신부를 바라보며 전원/측정 버튼을 누르지 마십시오.  
레이저 제품은 유리를 투과하여 거리를 측정할 수 없으므로 사용 환경에 유의하시기 바랍니다.
- 직사광선에 제품을 오래 노출되지 않도록 주의하십시오. (제품 고장의 원인이 됩니다.)
- 어린이의 손이 닿지 않는 곳에 보관하십시오.
- 각종 액체 및 이물질이 제품에 묻었을 경우 신속히 닦아 주십시오.
- 본 제품은 생활 방수 제품으로 빗물 또는 물이 들어가지 않도록 주의하십시오.
- 제품을 임의 분해하지 마십시오.(분해 시 A/S를 받을 수 없습니다.)
- 휴대용 케이스(파우치)는 흰색을 포함한 연한 색상의 의류, 벨트 등에 이염이 될 수 있어 주의 바랍니다.  
(땀, 습기, 물 등 주의 요망)
- 사용자 과실에 의한 제품 손상은 무상 A/S를 제공하지 않습니다.



### 경고

사용자 부주의로 인한 고장 및 제품의 손상이나 상해에 대해서는 당사가 책임지지 않습니다.  
(보증 기간 내에도 무상 A/S 불가)

#### ▶ 제품이 켜지지 않을 때

- 배터리 극성(+/-) 확인
- 배터리 잔량 유무 확인
- 버튼을 제대로 작동했는지 확인

#### ▶ 거리가 나오지 않을 때

- 표준/스캔 모드 설정 확인
- 렌즈와 레이저 수신부를 막고 있는 물체(특히 손이나 손가락) 유무 확인
- 목표물이 선명하게 보이도록 집안부를 돌려 초점 조절
- 어둡거나 움직임이 있는 목표, 난반사 표면, 소형, 유리 투과, 역광, 날씨(안개, 비 등) 등에 영향을 받을 수 있음
- 1M 이내 거리 또는 800M 이상의 거리는 측정 불가

#### ▶ 내부 뷰어가 흐리게 보일 때

- 집안부 (디오프터 조정 링)를 돌려 거리 표기와 화면이 선명하게 보이게 초점 조절
- 배터리 잔량 유무 확인

## 제품 사양 및 규격

| 항목       | 규격              |
|----------|-----------------|
| 배율       | 6X              |
| 크기       | 95x77x36.4 mm   |
| 무게       | 140g            |
| 측정 속도    | 0.2초            |
| 측정 범위    | 2~880Y / 2~800M |
| 측정 정확도   | +/- 1 yard      |
| 대물렌즈 구경  | 20 mm           |
| 접안렌즈 구경  | 14.6 mm         |
| 배터리 종류   | CR2 3V Lithum   |
| 핀 파인더 기능 | 지원              |
| 고도 측정 기능 | 지원              |
| 방수 등급    | IPX4            |

## 품질 보증서

- 본 제품은 엄격한 품질관리 및 철저한 검사과정을 거쳐서 생산되었으며, 재정경제원 고시 소비자 피해 보상규정에 의거, 소비자의 정당한 피해를 보상해 드립니다.
- 보증기간 이내에 정상적인 사용상태에서 발생한 고장의 경우 무상 서비스를 받을 수 있습니다.
- 무상수리 보증기간 이내임에도 사용자의 부주의로 제품에 이상이 발생한 경우 유상 서비스가 가능합니다.
- A/S 및 피해보상 요청 시에는 본 보증서 및 구입 증빙서류(영수증)를 반드시 제시해 주시기 바랍니다.

|        |           |             |  |
|--------|-----------|-------------|--|
| 제품명    | GOLFBUDDY | 보증기간        |  |
| 모델명    |           | 제품 구입 후 2년간 |  |
| 시리얼번호  |           |             |  |
| 판매일자   |           | 성명          |  |
| 구입자 주소 |           | 전화          |  |

본 제품의 상세설명은 골프버디 홈페이지에서 확인 가능합니다.

[www.golfbuddy.com](http://www.golfbuddy.com)

**GOLF BUDDY®**  
ACCURACY MATTERS™

 
## PACKAGE INCLUDES



GB LASER2S



Carrying Case



User Guide



CR2 Battery




Carabiner




Microfiber Cloth  
(For the Lens)

## OVERVIEW

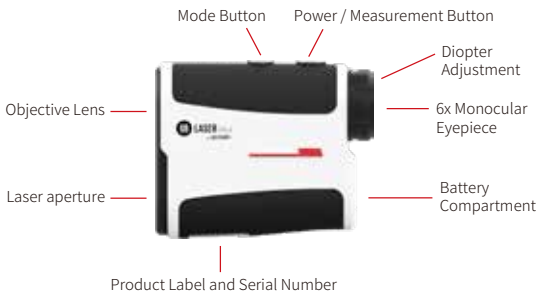 


# LCD DESCRIPTION

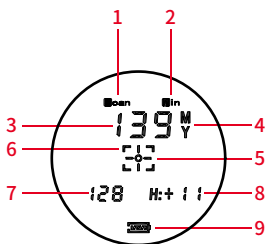 

|   |                                                                                     |                                                                                         |
|---|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| 1 |    | Displays when scan is activated                                                         |
| 2 |    | Displays when pin finder is activated                                                   |
| 3 | 139                                                                                 | Slope-adjusted distance                                                                 |
| 4 | M<br>Y                                                                              | Distance unit (Meters / Yards)                                                          |
| 5 |    | Targeting Crosshair                                                                     |
| 6 |    | Focus Square (Blinks when searching the target, disappears when the target is captured) |
| 7 | 128                                                                                 | Straight Line Distance                                                                  |
| 8 | H: + 11                                                                             | Height of the Target (uphill: +, downhill: -)                                           |
| 9 |  | Battery Indicator                                                                       |


# GETTING STARTED
 
## ► INSERTING THE BATTERY & SETTING FOCUS

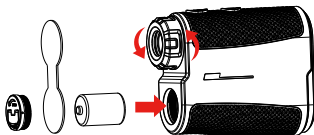

### ① Remove the battery cover

 - Lift and rotate the battery cap counterclockwise
- Remove the protective film between battery and cap
- Insert a CR2 3V battery into the compartment with negative end facing in



### ② Setting Focus (adjusting diopter dial)

- Use the viewfinder to aim and turn the diopter dial until you can see the target clearly



## ► HOW TO OPERATE

1. Power On(Press the Power / Measurement Button)
2. Select the targeting mode(By pressing the Mode Button)
3. Align the crosshairs with the target
4. Press the Power /Measurement Button  
→ Focus Square will appear to start measuring the distance

## ► CHANGING THE UNIT OF MEASUREMENT

- To change the unit of measurement, hold down the MODE button for 3 seconds to alternate from Meters to Yards and vice versa

## ► SLOPE ON/OFF

- Press and hold the MODE button for 5 seconds to turn the Slope feature on/off

## ► Slope Function

[Slope ON] The slope-adjusted distance is displayed on the top of the screen.  
Straight-line distance and height difference(+/-) is displayed at the bottom of the screen.

[Slope OFF] The non-slope distance is displayed on the top of the screen.  
Other slope features will disappear.

 
## ► Mode Setting [2 Modes]

- With the click of Mode Button, the mode changes in the following order : Standard → Scan → Standard.
- Mode can be changed only when the targeting crosshair is on display. ☒  
(Mode change unavailable when the focus square is active).



※ The focus square is activated when the Power / Measurement button is clicked.  
Deactivate the focus square before changing the mode.

### [Standard Mode and Pin Finder Mode]



- Press the Power / Measurement button to display the distance along with vibration.
- Press and hold the Power / Measurement button for 2~3 seconds to activate Pin finder mode.
- Pin finder mode is used to display the closest target when two or more targets are found, even if there are any other objects such as tree or rocks behind the pin.
- ※ Press the Power /Measurement button once against an object behind the pin (tree), then move towards the pin. Once the pin is found the distance will be displayed and you will feel a slight vibration

### [Scan Mode]



- Useful when acquiring distances of various targets.
- Press the Power / Measurement Button once to continuously scan for 5 seconds to show the distance to varying targets(1-CLICK SCAN).
- ※ In Scan Mode, the device will start measuring the distance once the Power / Measurement button is clicked.
- ※ The button does not need to be clicked more than once.

## SAFETY WARNING, CARE AND MAINTENANCE

**Please read the manual guide carefully before using the device.**

- Do NOT aim directly at the sun or an eye(as it may cause eyesight loss).
- Do NOT turn the device on while looking into the laser aperture or objective lens (as it may cause eyesight loss).
- Golf Rangefinders may fail to measure the distance when the target is measured through glass.
- Do not leave the device in direct sunlight for a long period of time, as it may cause damage on the unit.
- Keep the device away from children.
- If any type of liquid or substance gets on the device, use the cloth in the package to remove it immediately.
- Keep the device away from heavy rain or water as the device only features basic water resistance level.
- Do NOT disassemble the device arbitrarily as this will void the warranty.
- Please be aware of that the pouch can cause discoloration to other textiles (Clothes, belt, etc.)
- Any defect caused by the customer is not eligible for free repair service.



### **WARNING**

**GOLFBUDDY is not liable for damages caused by user misuse.**

**(Warranty is void even if it is still in effect.)**

#### **► The unit does not turn on**

- Make sure the battery polarity (+/-) is correct.
- Check the remaining battery level.
- Check the Power/Measurement button.

#### **► If distances cannot be obtained**

- Make sure the setting of mode : Standard/Scan.
- Make sure whether there is any substances(Especially hands or fingers) blocking the lens.
- Adjust the focus such that the target can be seen clearly.
- Affected by dark or moving targets, reflective surfaces, small, glass transmissive, backlit and weather(fog, rain, etc.)
- Unable to measure distance below 2 or over 880 yards.

#### **► The display view is not clear**

- Make adjustments to the display using the diopter dial.
- Check the battery charging level.

## SPECIFICATION

---

| Item                      | Spec.           |
|---------------------------|-----------------|
| Magnification             | 6X              |
| Physical size             | 95x77x36.4 mm   |
| Weight                    | 140g            |
| Measuring Speed           | 0.2 seconds     |
| Range                     | 2~880Y / 2~800M |
| Accuracy                  | +/- 1 yard      |
| Objective lens diameter   | 20 mm           |
| Eye Relief                | 14.6 mm         |
| Battery type              | CR2 3V Lithum   |
| Pin finder with vibration | Yes             |
| Slope-adjusted            | Yes             |
| Water Resistance          | IPX4            |

- Use environment: Outdoor
- Maximum altitude: Up to 2,000m
- Environment conditions: Min. temperature range: 0 ~ 50 °C  
/ Humidity Max. 80 % R. H
- Pollution degree: PD2
- Purpose of use: Golf rangefinder
- Manufacturer: GolfzonDeca Inc.
- Decontamination: With a dry cloth
- Water-resistant: IPX4
- Address: 253, Pangyo-ro, Bundang-gu, Seongnam-si,  
Gyeonggi-do, Republic of Korea

# LIMITED WARRANTY

## Warranty Period

GOLFBUDDY products come with a limited warranty against defects in materials and workmanship when used under normal consumer use for a period of two (2) years ("Limited Warranty"). The Limited Warranty begins to run from the date of original retail purchase. GOLFBUDDY, at its sole and absolute discretion, shall either (i) replace or repair the defective part(s) or the unit with a new or reconditioned part(s), or (ii) issue a credit for the parts or products that are covered under the Limited Warranty.

## Eligibility

This Limited Warranty is applicable only to the original authorized purchasers who purchase the products for resale and/or end users of the products. All authorized distributors shall provide its customers a copy of this Limited Warranty and communicate any and all waivers and limitations contained in this Limited Warranty. No unauthorized modifications to or unauthorized representations made by distributors will be valid or honored. The purchaser must present the original purchase receipt showing the date of purchase, place of purchase, and amount paid for the product in question, at the time a warranty claim is filed. The product must be in its original packaging along with all associated accessories and instruction manuals.

## Warranty Claim Procedures

To obtain warranty repair service, you must contact GOLFBUDDY technical support at [cs@golfbuddyglobal.com](mailto:cs@golfbuddyglobal.com) or visit [help.golfbuddyglobal.com](http://help.golfbuddyglobal.com) and obtain a Return Authorization Number. All returned products must be accompanied by an original purchase receipt and the Return Authorization Number. Any products that are returned without the requisite information shall be returned at the purchaser's cost and expense.

## Warranty Exclusions

Except against defects in material and workmanship and as expressly warranted by GOLFBUDDY, GOLFBUDDY Disclaims all warranties, express and implied, applicable to products, including, without limitation, any warranty of merchantability or fitness for a particular purpose and any warranty that any products is delivered free of claims of third parties by way of infringement or the like. GOLFBUDDY disclaims all express and implied warranties applicable.

To products accessories and products which are not manufactured by GOLFBUDDY. GOLFBUDDY further disclaims all warranties applicable to products which are accepted by purchaser but are subsequently damaged as a result of the following events:

- » Product purchased through the internet, other e-commerce channels, or any distributor or retailer that obtained the product from a supplier or distributor not authorized by GOLFBUDDY.
- » Any and all loss or damage to the product during transit.
- » Improper or non-recommended use, storage or handling of the product, use of product with non-GOLFBUDDY components such as USB cables or charges, misuse, operation at settings other than those recommended or specified, non-compliance with instructions or guidelines set forth in the User's Operation Manual.
- » Modification or alteration of the Product in any manner, including but not limited to, removal or addition of any component or part by purchaser or unauthorized service provider, or any accidental or intentional damage to the product.
- » Any loss of software, firmware, data information, memory data contained on any products returned to GOLFBUDDY for repair, or those modifications necessary due to a change in the GPS made by the U.S. government or any other governmental agencies.
- » Use of product in contravention with the laws of any country.

## Limitation of Warranty

GOLFBUDDY shall not in any event be liable for indirect, special, consequential or liquidated damages or penalties, including claims for lost revenue, profits or business opportunities, even if GOLFBUDDY had or should have had any knowledge, actual or constructive, of the possibility of such damages. GOLFBUDDY's total liability for any claim arising hereunder shall not exceed the purchase price which purchaser paid for the product.

 
## 構成品



GB LASER2S本体



携帯用ケース



使用説明書



CR2バッテリー



カラピナ




マイクロファイバー  
(レンズ掃除専用)

## 各部名称



 
# ビューファインダー(LCD)の説明

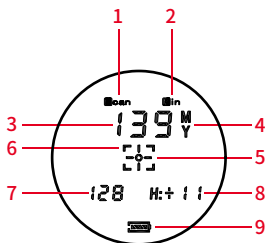

|   |                                                                                       |                        |
|---|---------------------------------------------------------------------------------------|------------------------|
| 1 |  oan | スキャンモードサイン             |
| 2 |  in  | ピンファインダーモードサイン         |
| 3 | 139                                                                                   | ターゲットまでの直線距離/高低差補正距離   |
| 4 | M<br>Y                                                                                | 距離単位表示(Meters / Yards) |
| 5 |      | ターゲットマーク               |
| 6 |      | 計測ボックス(探索中：点滅/完了時：停止)  |
| 7 | 128                                                                                   | レーザーで測定された直線距離         |
| 8 | H:+ 11                                                                                | 目標物の高低差(+:上り坂 / -:下り坂) |
| 9 |    | バッテリー残量表示              |


# 製品の使用方法及びメイン機能の説明
 
## ▶ バッテリー保護フィルム除去/焦点調節方法

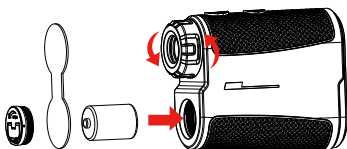

### ① バッテリー保護フィルム除去

 - バッテリーキャップを反時計回りに回して分離
- バッテリーとキャップの間のフィルムを除去
- CR2 3Vバッテリー陰極( - )が下に向くように挿入



### ② 焦点合わせ(接眼部の焦点調節部)

- ビューファインダーを通じて目標照準線及び測定距離と物体が鮮明に見えるまで焦点調節



## ▶ 作動方法

1. 電源/測定ボタンを押して電源ON
2. モード選択
3. ターゲットマークに目標物を当てる
4. 電源/計測ボタンを押して計測  
→ 測定ボックスが活性化されながら距離が測定されます。

## ▶ 距離表示単位変更

- モードボタンを3秒間長押しして距離単位を変更(メートル↔ヤード)

## ▶ スロープON/OFF

- モードボタンを5秒間押すとスロープモードへの切り替えができます。

## ▶ スロープ機能

[スロープON] 目標物まで高低差を自動で補正した距離を画面の中央に表示

直線距離を画面の下段に先に表示、約2秒後に高低差(+/-)を‘H:数字’で表示

[スロープOFF] 目標物までの直線距離を画面の中央に表示

 
## ▶ モード設定(2種類のモード)

- モードボタンを短く押すと[標準モード]↔[スキャンモード]の順に変更されます。
- モード変更は、[焦点照準用十字線]が表示されている時のみ変更可能で、[設定ボックス]が活性化されている際には変更できません。



※ [測定ボックス]は、電源/測定ボタンを一度押すたびに活性化/非活性化されるので、非活性化された後にモードを変更して下さい。

### [標準モード(ピンファインダー 機能の使用方法)]



- 電源/計測ボタンを一度押すと振動と共にターゲットまでの距離を表示
- 電源/計測ボタンを1秒以上長く押すと[ピンファインダー機能]ON
- [ピンファインダー]機能とは、複数のターゲットの中で最も近い物体までの距離を計測し、ピンの裏側に木や岩などの障害物があってもピンを選び分けて正確な距離を計測する機能です。

※ 電源/計測ボタンを長く押しながらピンの裏側にある特定の物体にターゲットマークを当てた後、ピンに向かってターゲットマークを移すと振動と共にピンまでの距離が確認できます。

### [スキャンモード]



- 複数のターゲットまでの距離を計測する時に便利なモード
- スキャンモードで電源/計測ボタンを押すと5秒間連続スキャンに入り、計測したい複数のターゲットまでの距離を連続的に計測して表示します。

※ スキャンモードではピンファインダー機能を使用できません。

※ 電源/計測ボタンを一度押すとスキャンを始め、ボタンを長く押す必要はありません。

## 留意事項

製品の使用の前に下記の留意事項を必ずご確認ください。

- 人の目、または太陽の光に直接照射しないでください。  
(視力損傷の原因になることがあります。)
- 対物レンズやレーザー受信部を目に当てている状態で作動しないでください。
- レーザー製品はガラスを透過して距離を測定することができないので、  
使用環境に留意してください。
- 長い間、直射日光に製品を晒さないでください。(故障の原因になります。)
- 子供の手が届かない場所に保管してください。
- 製品の表面に液体及び異物が付いた場合、迅速に拭き取ってください。
- 本製品は生活防水製品であるため、  
製品内に基準値以上の水が入らないようご注意ください。
- 製品を任意に分解しないでください。(ASの対象外になります。)
- ケース(ポーチ)は、白を含む薄い色の衣類、ベルトなどに色移りする恐れがありますのでご注意ください。(汗、湿気、水などに注意要望)
- 使用者の過失による破損は無償ASの対象外になります。

## 警告事項

利用者の過失による故障及び製品の損傷や傷害に対しては責任を負いかねますのでご注意ください。(この場合、保証期間内でも無償AS不可)

### ▶ 製品の電源が入らない時

- バッテリー極性(+/-)を確認
- バッテリー残量を確認
- ボタンを正しく押したかを確認

### ▶ 距離が表示されない時

- モード設定状態を確認
- レンズとレーザー受信部を塞いでいる物体(手や指等)の有無を確認
- 目標物が鮮明に見えるまで焦点を調節
- レーザーは暗かったり動いている物体、乱反射表面、小型、  
ガラス透過、逆光、天気(霧、雨など)の影響を受ける場合がある
- 1M以内の距離または800M以上の距離は測定不可

### ▶ 内部のビューアが霞んで見える時

- 接眼部(焦点調節部)を回して距離と画面が鮮明に見えるまで焦点を調節
- バッテリー残量を確認

## 製品仕様及び規格

| 項目      | 規格              |
|---------|-----------------|
| 倍率      | 6X              |
| サイズ     | 95x77x36.4 mm   |
| 重量      | 140g            |
| 計測速度    | 0.2秒            |
| 計測範囲    | 2~880Y / 2~800M |
| 計測誤差    | +/- 1 yard      |
| 対物レンズ口径 | 20 mm           |
| 接眼レンズ口径 | 14.6 mm         |
| バッテリー種類 | CR2 3V Lithum   |
| バッテリー寿命 | フル充電/放電500回     |
| USB充電端子 | USB Type-C      |
| 防水等級    | IPX4            |

# 品質保証書

## 保証期間

GOLFBUDDY製品は製品使用時の部品および製造上の欠陥に対して2年間製品保証が提供され、保証期間は消費者購入日から始まります。GOLFBUDDYは単独裁量により保証期間内に欠陥がある部品や装置を新しい部品または修理された部品に交換または修理を提供して部品または製品に対するクレジットを提供します。

## 保証の適用

本制限保証は最初の購入者または/および最終使用者に適用されます。すべての公認代理店は顧客に本制限保証書の写しを提供し、本制限保証書に含まれたすべての権利の放棄および制限事項を伝えなければなりません。許可されていない変更や許可されていない代理人の代理人は有効ではなく尊重されません。購入者は保証請求が受け付けられた時点で購入日、購入場所および該当製品に対して支払った金額を示す原本購入領収書を提示しなければなりません。製品はすべての関連アクセサリーおよび使用説明書とともに本来パッケージになければなりません。

## 保証請求手続

保証修理サービスを受けるには、購入先または最後のページに表記された各国のコンタクトポイントにご連絡ください。すべての返品された製品には本来購入領収書と返品承認番号が同封されなければなりません。必須情報なく返品されたすべての製品は購入者の費用で返還されなければなりません。

## 保証除外項目

材料および製作上の欠陥およびGOLFBUDDYが明示的に保証した場合を除いて、GOLFBUDDYの商品性または特定の目的への適合性に対する保証を含めて製品に適用されるすべての明示的および暗黙の保証の責任を負いません。

また、製品が侵害などの方法で第三者の主張なく提供されるすべての保証の責任を負いません。

GOLFBUDDYはGOLFBUDDYが製造しなかった製品の付属品および製品に適用可能なすべての明示的および暗黙の保証が不可です。GOLFBUDDYは購入者が承認しても、次のような理由によって損傷した製品に対しては保証しません：

- ※ インターネット、その他電子商取引チャネルを通じて購入した製品またはGOLFBUDDYの認可を受けていない供給業者または流通業者
- ※ 運送中に発生した製品のすべての損失または損傷
- ※ 製品の不適切な使用や推奨されない使用、保管または取扱、GOLFBUDDYでない製品の使用  
USBケーブルまたは料金などの構成要素、誤用、推奨設定以外の設定で作動、または使用説明書に明示された指示事項または指針を遵守しない。
- ※ 製品の除去または追加を含むものの、これに制限されない方式で製品を改造または変更  
購買者または許可されていないサービス提供者による部品または部品の損傷または偶発的または意図的な製品損傷
- ※ 修理のためにGOLFBUDDYに返還された製品に含まれたソフトウェア、ファームウェア、データ情報、メモリーデータの損失またはアメリカ政府またはその他政府機関でGPSの変更により必要な修正
- ※ すべての国の法に抵触する製品の使用

## 保証制限

GOLFBUDDYは収益またはビジネスチャンスに対する請求を含めて間接的、特殊的、必然的または懲罰的な損害または罰金に対する責任を負わず、実際にまたはそれと関連して可能な場合、そのような損害の発生、それによって発生するすべてのクレームに対するGOLFBUDDYのすべての責任は製品購入者が購入した購入価格を超えてはいけません。

# How to Obtain Warranty Service or Other Information

|     |                                                                                                                                                                                                      |
|-----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 한국  | A/S 접수 : 경기도 성남시 중원구 상대원동 442-17, 쌍용 IT 트윈타워 A동 507호 피케이테크<br>전화번호 : 1644-5721(평일 오전 10시~17시, 토/일/휴일 휴무)<br>홈페이지 : www.golfbuddy.com                                                                 |
| USA | Toll-free : 888-251-6058 / Fax : 888-441-5237<br>Email : support@golfbuddyglobal.com<br>Address : 10700 Norwalk Blvd. Santa Fe Springs, CA 90670, U.S.A. (USA Office)<br>Website : www.golfbuddy.com |

※ If you have any inquiry regarding warranty service, please contact to the shop where you purchased the product

 
## KC 전자파 적합성

|                                                                                                                                                                                              |                                                                                   |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| 상호명 : ㈜골프존데카<br>제품명 : GOLFBUDDY GB LASER lite2<br>모델명 : GB LASER lite2<br>제조자/제조국가 : JINHUA LANHAI PHOTOELECTRICITY TECHNOLOGY CO.,LTD<br>GRUPPO EMS, INC. / 중국, 필리핀<br>R-R-DET-GBLASERLITE2 |  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|

|                                            |                                                                                   |                                  |
|--------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------|
| <b>RCM</b><br>(Regulatory Compliance Mark) |  | <b>GOLFBUDDY® GB LASER lite2</b> |
|--------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------|

## Safety of laser products

|                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IEC/EN 60825-1 : 2014<br>Laser wavelength : 905nm<br>Laser power:220nJ<br>CLASS 1 LASER PRODUCT<br>Caution – Use of controls or adjustment or performance of procedures other than those specified herein may result in hazardous radiation exposure. |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|



# FCC

Name of company: GolfzonDeca Inc.

Product name: Golf Rangefinder

Model: GB LASER lite2

FCC RF Radiation Exposure Statement: This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

## FCC Part 15B

### FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Part 15.21

Any changes or modifications (including the antennas) to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void your authority to operate the equipment under FCC rules.

# CE

Product name: Golf Rangefinder

Model: GB LASER lite2

Power: CR2: 3V  $\approx$  85mA

# GOLF BUDDY®

GOLFZON<sup>®</sup> DECA

