



QUICK START GUIDE



QUICK 4 STEPS

- 1** Fully charge the iTECH Jr Smartwatch before using. A full charge takes 2 hours.
- 2** Visit iTechwearables.com/setup for full user guide on how to use and play instructions.
- 3** Turn your iTECH Jr on to set date and time. Note: You can manually adjust the date and time under settings.
- 4** You are ready to wear the watch and enjoy all the fun activities the iTECH Jr has to offer.



CHARGING

When using your iTECH Jr. for the first time, fully charge the watch (2 hours).
Note: Adult supervision/operation required.

Connect the watch to a computer or USB charger with the included Micro-USB Cable.

1. Pull open the rubber cover of the watch's Micro-USB Port.

2. Insert the small end Micro-USB cable into the watch's Micro-USB Port.

3. Insert the large end of the cable into a powered USB port. A battery charging symbol will appear on the watch screen.

If the watch is not used for a while, the battery may go into protection mode and the charging symbol may not appear on the screen. Continue charging the watch for at least 30 minutes to activate the battery.

POWER ON/OFF

To power on/off your iTECH Jr., press and hold the for a few seconds.

SHUTTER BUTTON

Press the to launch the camera and to take pictures.

HOME BUTTON

Clock Mode When the screen is off, press to wake up the watch and show the time.

Home Menu Press while the clock is displayed to enter the main menu.

Pressing while in an activity return you to the previous menu.

FEATURES



Learning Games



Fun Games



Activities



Time



ICE



Tools



Camera



Video Cam



Gallery



Wallpapers



Flashlight



File Management



Record



Stories



Music



About



Calendar



Wireless



Settings

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Relocate or relocate the receiving antenna.
- Caution: Any changes or modifications to this device not expressly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be located or operated in conjunction with any other antenna or transmitter.

</