








 


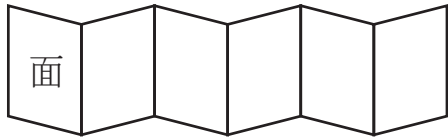




12JUN25

底面印刷



面

底

<div data-bbox="296 396 579 498">  <div data-bbox="466 396 579 498"> <p>AGES 8+</p> </div> </div> <div data-bbox="140 535 564 654"> <h1>REMOTE CONTROL INFLATABLE JACK SKELLINGTON</h1> <h2>Instruction Manual</h2> <p>Thank you for purchasing the Remote Control Inflatable Jack Skellington. This manual provides more information about this product, please read the instructions before using.</p> </div> <div data-bbox="241 721 466 1069">  </div> <div data-bbox="381 1073 564 1105"> <p>©Disney www.disney.com</p>  </div>	<div data-bbox="595 388 1046 416"> <h3>Product Overview</h3> </div> <div data-bbox="735 433 906 699">  </div> <div data-bbox="650 709 1019 731"> <p>Remote Control Inflatable Jack Skellington</p> </div> <div data-bbox="820 758 1031 862">  </div> <div data-bbox="875 872 1019 895"> <p>Charging Cable</p> </div> <div data-bbox="595 899 848 1054">  </div> <div data-bbox="650 1064 790 1087"> <p>Remote Control</p> </div> <div data-bbox="875 944 1019 1046">  </div> <div data-bbox="863 1064 1031 1087"> <p>Instruction Manual</p> </div>	<div data-bbox="1059 388 1526 416"> <h3>Package Contents</h3> </div> <div data-bbox="1059 433 1498 535"> <p>Includes: 1(One) Remote Control Inflatable Jack Skellington 1(One) Remote Control 1(One) Charging Cable 1(One) Instruction Manual</p> </div> <div data-bbox="1059 566 1526 611"> <h3>Specifications</h3> </div> <div data-bbox="1059 621 1513 788"> <p>Frequency: 2.4 GHz FCC ID: 2ADM5-ET-0876V3LG Remote Control Inflatable Jack Skellington Power Supply: 2 x Built-In, Rechargeable 3.7v 1200mAh Li-ion Batteries.(Included) Battery Charging Time: 4 Hours Play Time: Up To 20 Minutes Charging Cable Included Remote Control Power Supply: 2 x AA 1.5V Batteries (Not Included)</p> </div> <div data-bbox="1059 817 1526 862"> <h3>Remote Control</h3> </div> <div data-bbox="1059 868 1498 1099">  </div>	<div data-bbox="1541 388 1992 416"> <h3>Standard Control</h3> </div> <div data-bbox="1541 433 1965 476"> <p>Note: To avoid losing control, always pay attention when controlling the Remote Control Inflatable Jack Skellington.</p> </div> <div data-bbox="1541 506 1992 676">  </div> <div data-bbox="1583 707 1724 725"> <p>Forward Button</p> </div> <div data-bbox="1568 750 1938 788"> <p>Control Remote Control Inflatable Jack Skellington to move forward</p> </div> <div data-bbox="1541 846 1992 1017">  </div> <div data-bbox="1583 1009 1724 1028"> <p>Backward Button</p> </div> <div data-bbox="1568 1054 1938 1091"> <p>Control Remote Control Inflatable Jack Skellington to move backward</p> </div>	<div data-bbox="2008 388 2459 416"> <h3>Standard Control</h3> </div> <div data-bbox="2008 506 2459 676">  </div> <div data-bbox="2063 707 2176 725"> <p>Left Button</p> </div> <div data-bbox="2035 750 2401 788"> <p>Control Remote Control Inflatable Jack Skellington to turn left</p> </div> <div data-bbox="2008 846 2459 1017">  </div> <div data-bbox="2063 1009 2176 1028"> <p>Right Button</p> </div> <div data-bbox="2035 1054 2401 1091"> <p>Control Remote Control Inflatable Jack Skellington to turn right</p> </div>	<div data-bbox="2475 388 2911 416"> <h3>Inflate / Deflate Control</h3> </div> <div data-bbox="2545 433 2841 766">  </div> <div data-bbox="2487 795 2884 1001">  </div> <div data-bbox="2487 1009 2884 1091"> <p>Control Remote Control Inflatable Jack Skellington to Inflate / Deflate (When Remote Control Inflatable Jack Skellington turn on, it will inflate automatically)</p> </div>
--	--	--	---	--	--

<div data-bbox="140 1195 589 1224" data-label="Section-Header"> <h2>Power On/Off</h2> </div> <div data-bbox="140 1224 589 1596" data-label="Image"> </div> <div data-bbox="140 1596 589 1923" data-label="List-Group"> <ul style="list-style-type: none"> • Press & hold the ON/OFF button 2 second to turn on • Press & hold the ON/OFF button 2 second to turn off </div>	<div data-bbox="589 1195 1059 1224" data-label="Section-Header"> <h2>Remote Control Jack Skellington Battery Charging</h2> </div> <div data-bbox="589 1224 1059 1522" data-label="Image"> </div> <div data-bbox="589 1522 1059 1923" data-label="List-Group"> <ul style="list-style-type: none"> • Make sure switch off the Remote Control Inflatable Jack Skellington before charging. • Unscrew the screw on the battery box cover to open the cover. • Unplug and take out the rechargeable li-ion battery. • Connect the Rechargeable Li-ion Battery to the charging cable and plug on a USB power adapter for charging. • The LED indicator on the charging cable will turn red while charging and will turn green once fully charged. <p>⚠ For your safety, please always use appropriate 5V output charger/Adapter to charge the product. DO NOT Use Quick Charging USB Adapter to charge the product, as it might damage the product.</p> <p>NOTE:</p> <ul style="list-style-type: none"> • You must select a qualified charger from a regular manufacturer. </div>	<div data-bbox="1059 1195 1526 1224" data-label="Section-Header"> <h2>Battery Installation For Remote Control Jack Skellington</h2> </div> <div data-bbox="1059 1224 1526 1410" data-label="Image"> </div> <div data-bbox="1059 1410 1526 1923" data-label="List-Group"> <ul style="list-style-type: none"> • To install battery into the Remote Control Inflatable Jack Skellington, unscrew the screw on the battery box cover to open the cover. • Connect the rechargeable li-ion battery to the Remote Control Inflatable Jack Skellington. • Insert the rechargeable li-ion battery into the battery box. • Replace the battery box cover and tighten the screw. <p>NOTE:</p> <ul style="list-style-type: none"> • Always ensure you charge the battery at least 4 hours before using to ensure maximum runtime. <div data-bbox="1059 1596 1526 1618" data-label="Section-Header"> <h2>Batteries Installation For Remote Control</h2> </div> <div data-bbox="1059 1618 1526 1782" data-label="Image"> </div> <div data-bbox="1059 1782 1526 1923" data-label="List-Group"> <ul style="list-style-type: none"> • To install batteries into the Remote Control, unscrew the screw on the battery box cover to open the cover. • Insert 2 x "AA" 1.5V batteries (Not Included) into the battery box. • Batteries should be placed as shown on the diagram. • Replace the battery box cover and tighten the screw. <p>NOTE:</p> <ul style="list-style-type: none"> • When inserting the batteries, you must insert according to the correct polarity, the Remote Control won't function if batteries are reversed. </div> </div>	<div data-bbox="1526 1195 1996 1224" data-label="Section-Header"> <h2>IMPORTANT: BATTERY INFORMATION</h2> </div> <div data-bbox="1526 1224 1996 1923" data-label="List-Group"> <div data-bbox="1526 1224 1996 1299"> <p>⚠ WARNING: DROWNING HAZARD This is not a life-saving Device. Do not use in water.</p> </div> <div data-bbox="1526 1299 1996 1447"> <p>⚠ Li-ion battery charging warning statement The input to the product is 5V 2A. In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product. Only charge the product at ambient temperatures between 10 °C/ 50 °F and 40 °C/104 °F. Do not heat above 70 °C/158 °F, eg. Do not expose to sunlight or throw into fire. Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.</p> </div> <div data-bbox="1526 1447 1996 1522"> <p>For AA Batteries</p> <p>⚠ WARNING: TO AVOID BATTERY LEAKAGE</p> <ol style="list-style-type: none"> 1) Be sure to insert the batteries correctly, and always follow the toy/game and battery manufacturers' instructions. 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 3) Always remove weak or dead batteries from the product. 4) Remove the battery if the product is left unused for a long period of time. </div> <div data-bbox="1526 1522 1996 1596"> <p>Charging Cable Rating 5V/2A Max.</p> <p>⚠ CAUTION:The charging cable included with this item is intended for use with this product. Only use the included charging cable to charge this product.</p> </div> <div data-bbox="1526 1596 1996 1669"> <p>⚠ CAUTION:FULLY CHARGE BEFORE USE</p> </div> </div>	<div data-bbox="1996 1195 2466 1224" data-label="Section-Header"> <h2>Performance Tips</h2> </div> <div data-bbox="1996 1224 2466 1923" data-label="List-Group"> <ol style="list-style-type: none"> 1. Do not drive the Remote Control Inflatable Jack Skellington on grass, sand or go through water. 2. Do not drive the Remote Control Inflatable Jack Skellington in windy or rainy weather. 3. Do not drive the Remote Control Inflatable Jack Skellington into any sharp object. 4. Keep fingers, hair and loose clothing away from Remote Control Inflatable Jack Skellington. <div data-bbox="1996 1336 2466 1373" data-label="Section-Header"> <h2>Care and Maintenance</h2> </div> <p>Always use dry and soft cloth to clean this product.</p> <p>Avoid this product from being exposed to sunlight or heat.</p> <p>Avoid immersing these toys in water, otherwise, the electronic parts may be damaged.</p> <p>Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.</p> <div data-bbox="1996 1522 2466 1559" data-label="Section-Header"> <h2>Warning</h2> </div> <p>This product is suitable for individuals with operating experience in remote toys or those aged 8 years old and above.</p> <p>Please do not put the product in your mouth to prevent choking hazards from small parts.</p> <p>Avoid inserting your fingers into available interspaces.</p> <p>Do not engage in rough play with the product, such as throwing, crashing, or twisting it.</p> <p>Store smaller-sized product accessories in places that are out of reach of children to prevent accidents.</p> <p>Avoid placing batteries in areas with high temperatures or exposing them to heat.</p> <p>When young children are operating the product, it is essential to ensure that adults are guiding them and maintaining visual control of the toy for convenient control.</p> <p>When the product is not in use, please switch off the power supply and remove the batteries.</p> <p>Please note that we cannot be held responsible for any injuries, property damage, or loss resulting from incorrect operation during the assembly or use of this product.</p> <p>Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.</p> </div>	<div data-bbox="2466 1195 2911 1224" data-label="Section-Header"> <h2>FCC Statement</h2> </div> <div data-bbox="2466 1224 2911 1923" data-label="List-Group"> <p>This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/ TV technician for help. <p>RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p> <p>FCC ID: 2ADM5-ET-0876V3LG</p> <p>FC</p> <p>Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106</p> <p>Made In Shantou, China</p> <p>Keep All Relevant Information for Future Reference</p> <p>Item# ET-0876-JACK</p> </div>
---	--	--	--	--	---