 


Ace 60 Magnetic Switch Keyboard

Tips: The pictures in this manual are schematic diagrams and may differ from the actual product. Please refer to the actual product.

PART 1


PRODUCT OVERVIEW

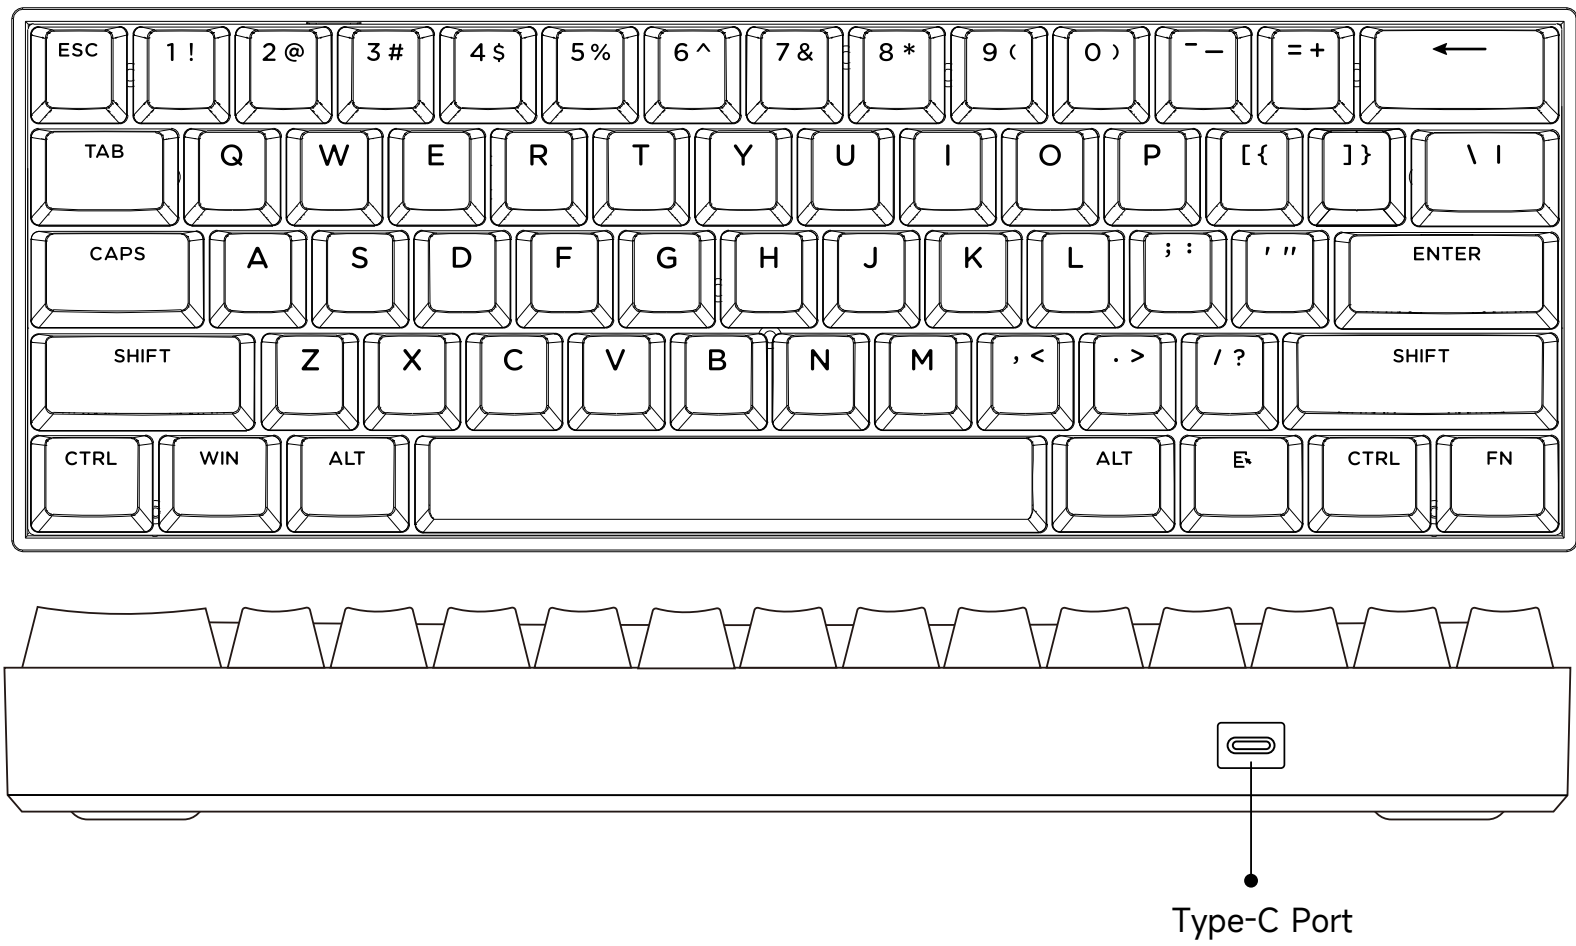

PART 2

CONNECTION MODE

 FN Combination Key

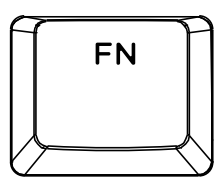

+


Lighting Functions

.>	Switch Backlight Color	::	Backlight Speed -
[{	Backlight Brightness -	{}"	Backlight Speed +
]}]	Backlight Brightness +	\	Switch Light Mode

PART 3

CONNECTION MODE

 FN Combination Key

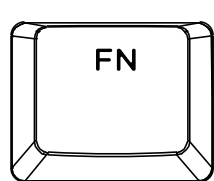

+


Key Combination Function

ESC	~	7&	F7
1!	F1	8*	F8
2@	F2	9(	F9
3#	F3	0)	F10
4\$	F4	_	F11
5%	F5	=+	F12
6^	F6		

PART 4

CONNECTION MODE

 FN Combination Key

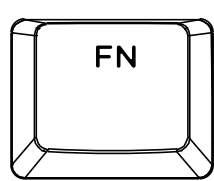

+

Key Combination Function

Y	PRT SCR	C	Next Song
U	ScrIk	V	Volume +
I	PAUSE	B	Volume -
H	INS	N	Mute
J	HOME	/?	↑
K	PageUp	E	↓
Backspace	Delete	ALT	←
,<	PageDown	Right CTRL	→
M	End	Right Shift	Arrow Key Function Swap
Z	Previous Song	Left CTRL	Number or F1 Function Key Area Swap
X	Pause/Play	Space	Restore Defaults