


Please read this manual carefully before operating your unit and retain for future reference.

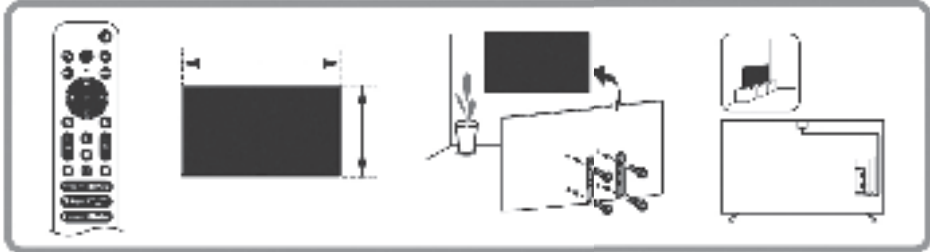

Dimensions and weight (without Table-Top Stand)

	(mm)	(inches)	(kg)	(lb.)
K-77XR80 / 77XR80C	1713 / 67 1/2	984 / 38 1/2	38 / 11 1/2	12 1/2 / 31.2
K-65XR80 / 65XR80C	1442 / 56 3/4	828 / 32 1/2	37 / 11 1/2	22.3 / 49.2
K-55XR80 / 55XR80C	1223 / 48 1/2	705 / 27 3/4	37 / 11 1/2	15.1 / 33.3


Dimensions and weight (with Table-Top Stand)

	(mm)	(inches)	(kg)	(lb.)
K-77XR80 / 77XR80C	1713 / 67 1/2	1012 / 39 1/2	1006 / 42	405 / 16
K-65XR80 / 65XR80C	1442 / 56 3/4	855 / 33 1/2	909 / 35 1/2	248 / 9 1/2
K-55XR80 / 55XR80C	1223 / 48 1/2	732 / 28 1/2	786 / 31	248 / 9 1/2



	(mm)	(inches)	(kg)	(lb.)
K-77XR80 / 77XR80C	1713 / 67 1/2	1012 / 39 1/2	1006 / 42	405 / 16
K-65XR80 / 65XR80C	1442 / 56 3/4	855 / 33 1/2	909 / 35 1/2	248 / 9 1/2
K-55XR80 / 55XR80C	1223 / 48 1/2	732 / 28 1/2	786 / 31	248 / 9 1/2

\*1 (Approx.)

The length of the screw for Wall-Mount Bracket differs depending on the Wall-Mount Bracket thickness.

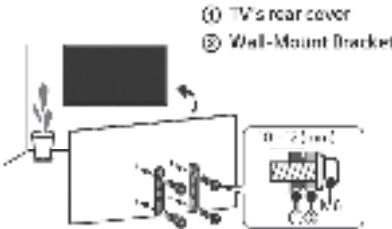

Optional Camera and Microphone Unit (not supplied) Cable Management

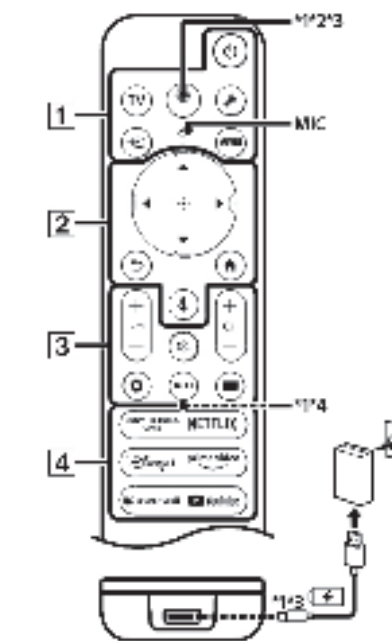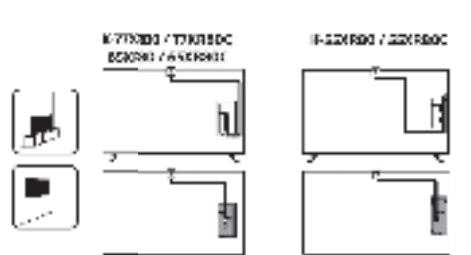

The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model/TV settings.

- [Power] TV: Display TV channel list or switch to Input. (Quick settings): Display Quick Settings. (Input): Display and select the input source, etc. MENU (Control menu): Display the Control menu.
- On screen menu navigation and selection. {Back} {Home} {Google Assistant / Microphone}: Use Google Assistant.

- [Volume] [Mute] CH+ / - (Channel) (Dashboard): Display Dashboard. (Guide): Display the digital program guide of TV or Cable/satellite box.
- App buttons

- RMF-TX920U only. To see the model name of the remote control, open the remote control cover and see the label on the remote control.
- The remote control backlight will illuminate when the light sensor detects the ambient light is low. Automatic illumination of the backlight can be turned off.
- The remote control is rechargeable. The LED indicator will show charging status (red). Use the supplied USB (type-C) cable to charge the remote control using your own USB AC adapter.
- The buzzer will emit a sound either when you use the remote control finder function or when you press the power button on the remote control when the battery is low. Refer to the online Help Guide for details.
- Only for limited region/country/model/language.
- Google Assistant requires an Internet connection.
- Accessibility shortcut is available by pressing and holding [Mute].
- [Cable/Satellite box setup] setting is required.

Note Read the supplied safety documentation for additional safety information.

Note: The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

IMPORTANT NOTICE FOR MEXICO

Operation of this equipment is subject to the following two conditions: (1) it is possible that this equipment or device may not cause harmful interference and (2) this equipment or device must accept any interference, including interference that may cause undesired operation.

Note: This product uses the following module for wireless functionalities: Model: J20-H03 Brand: FOXCONN Wi-Fi: 2.4 GHz (2,400 GHz - 2,483.5 GHz) 5 GHz (5,150 GHz - 5,850 GHz) 6 GHz (5,925 GHz - 6,425 GHz) Bluetooth: 2.4 GHz (2,400 GHz - 2,483.5 GHz)

Information for the remote control with voice command included with this product: Model: RMF-TX920U Brand: Sony Note: Uses the following device for wireless functionalities: Model: UE979 Brand: UEI

To see the model name of the remote control, open the remote control cover and see the label on the remote control.

Safety Information

Compatible Wall-Mount Bracket Information Use the following Sony Wall-Mount Bracket with your TV model.

	Sony TV Model No.
(Wall mount kit not included)	K-77XR80 / K-77XR80C / K-65XR80 / K-65XR80C / K-55XR80 / K-55XR80C
Sony Wall-Mount Bracket Model No.	SL-WM-R45H

Use with other Wall-Mount Brackets may cause instability and could result in property damage or injury.

- Only for limited region/country/model.
- For instructions on using the Wall-Mount Bracket

Before setting up your TV Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See "Installing the TV to the Wall" if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand (refer to the Setup Guide). Be sure to consider the following while setting up your TV:

- Disconnect all cables when carrying the TV.
- Before transporting the TV set, remove the terminal covers.
- Two or more persons are needed to transport a large TV set.
- Correct hand placement while carrying the TV is very important for safety and to avoid damage.
- When handling or mounting the TV set, do not lay down the TV (for applicable TV model only).

Securing the TV Sony strongly recommends taking measures to prevent the TV from toppling over. Unsecured TVs may topple and result in property damage, serious bodily injury or even death.


- Preventing the TV from Toppling
- Secure the TV to a wall and/or Stand.
- Do not allow children to play or climb on furniture and TV sets.
- Avoid placing or hanging items on the TV.
- Never install the TV on: - slippery, unstable and/or uneven surfaces, - furniture that can easily be used as steps, such as a chest of drawers.
- Install the TV where it cannot be pulled, pushed, or knocked over.
- Install the TV so that the TV's Table-Top Stand does not protrude out from the Stand (not supplied). If the Table-Top Stand protrudes out from the Stand, it may cause TV set to topple over, fall down, and cause personal injury or damage to the TV.




- Route all AC power cords and connecting cables so that they are not accessible to curious children.

Recommended Measures to Secure the TV Consider the following measures when securing your TV to a stand (not supplied).


- Secure the Stand for the TV. Make sure the Stand can adequately support the weight of the TV. Use two angle braces (not supplied) to secure the Stand. For each angle brace use the appropriate hardware to: - Attach one side of the angle brace to the wall stud. - Attach the other side to the Stand.

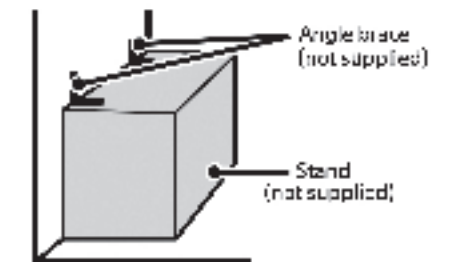


- Secure the TV to the Stand. Use the optional hardware listed as follows (not supplied): - M6 machine screws (screwed into the TV's rear cover). - A screw or similar (attach it to the Stand). - Rope or chain (strong enough to support the weight of the TV). Make sure that there is no excess slack in the rope or chain.

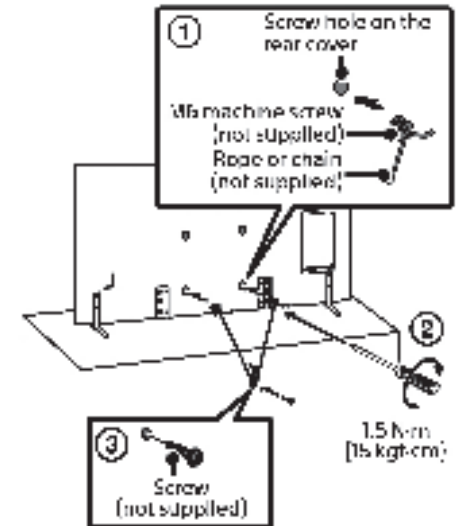


The length of the M6 machine screw differs depending on the rope or chain diameter. Please refer to below illustration. 10 - 12 (mm)

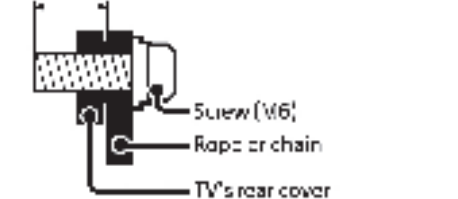

- Anchor the TV to the wall by using bolts, wall anchor and chain (or rope).

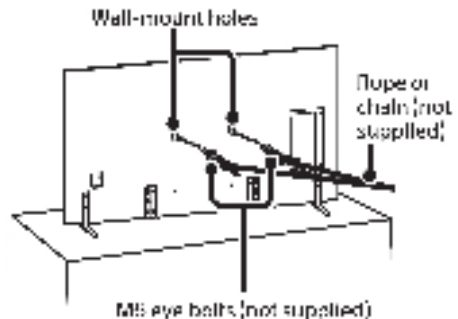

Please refer to below illustration for M6 eye bolt length. 10 - 12 (mm)

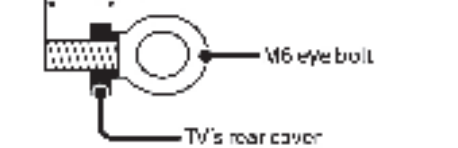

- Note
- Your TV is shipped with screws attached to the rear of the TV depending on the TV model. (They are fastened in the screw holes for wall mounting.) Be sure to remove the upper two screws prior to anchoring the TV to a wall.
- Securing the TV to the Stand without securing the TV and the Stand to the wall provides minimum protection against the TV toppling over. For further protection, be sure to follow the three measures recommended.

The images shown in this manual are for illustrative purposes only and may be subject to change.





## Setup Guide


814000293

Please Read this guide carefully before using the device and keep it for future reference.








BRAVIA

K 774B9C / 774B9C / 554B9D  
K 554B9D / 554B9D / 554B9D


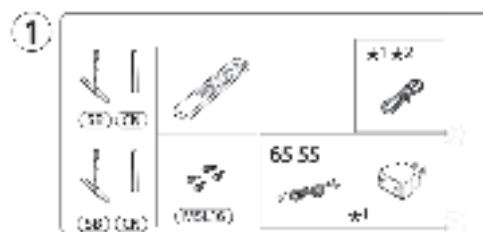


 Accessory type and quantity may vary depending on the model.

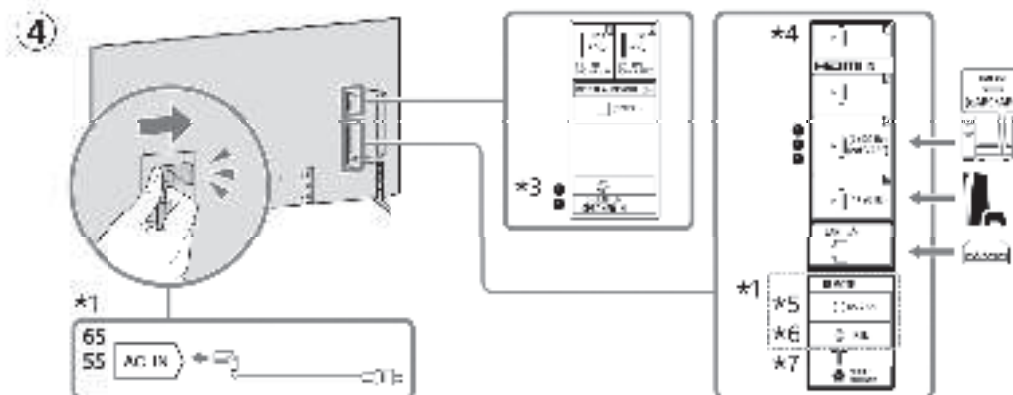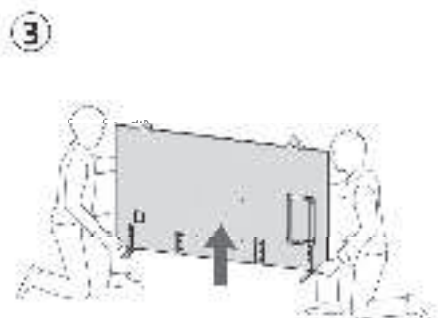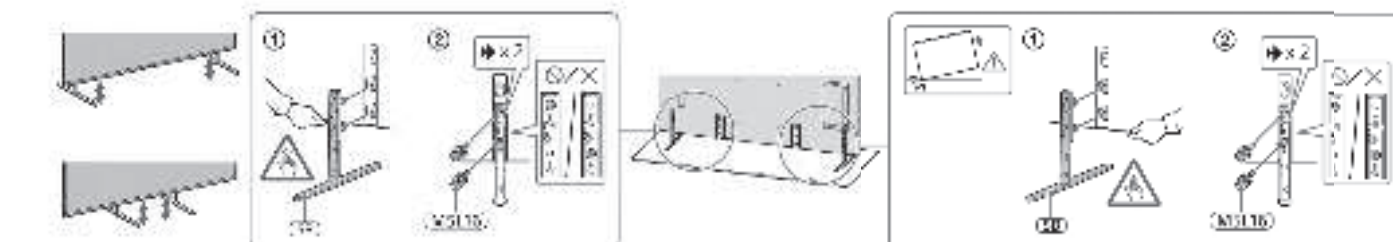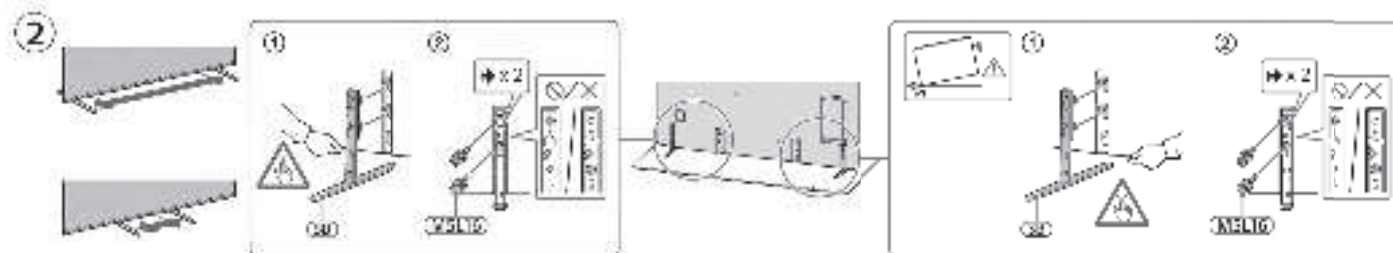

**NOTE:** The image shown here is for illustrative purposes only and may be subject to change.  
The actual number of ports and their locations may vary depending on the model.



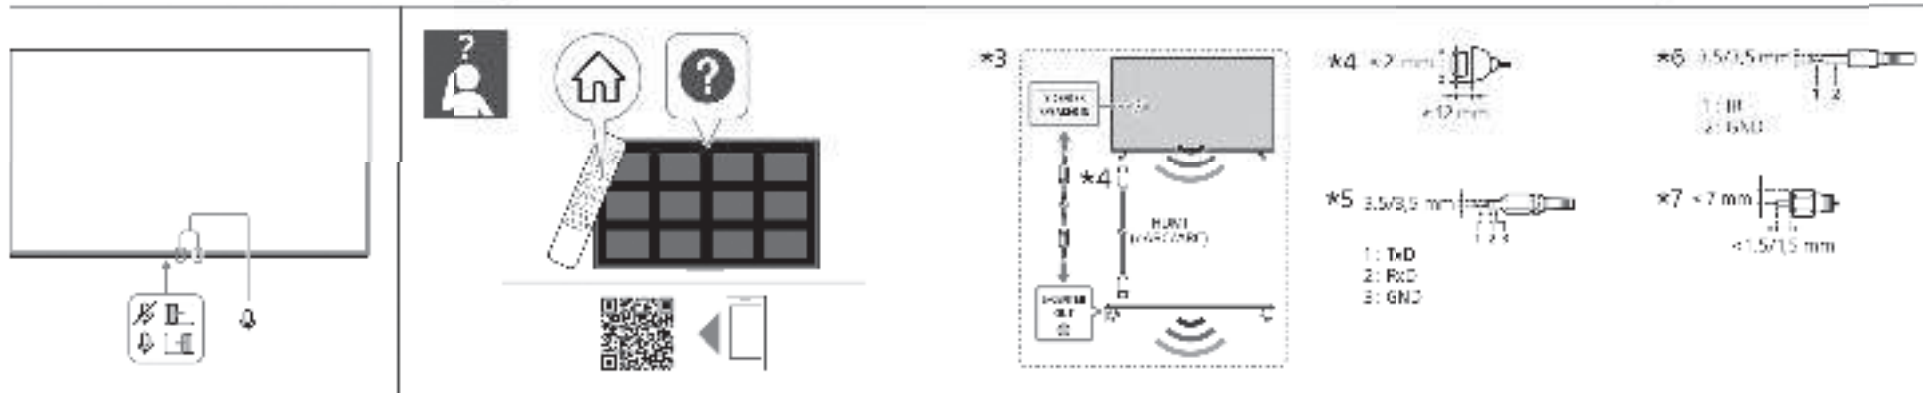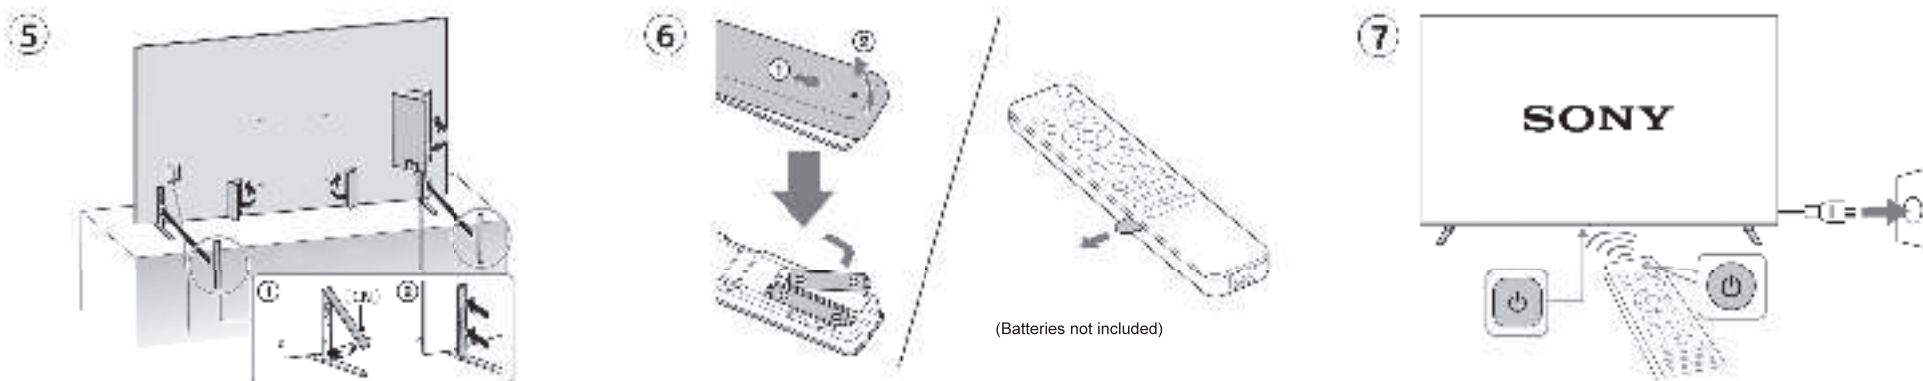

\*1 Only for limited region/country/model.

\*2 Refer Reference Guide.

#### NOTES:

- The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.
- The cables mentioned in this guide is not supplied with your unit.
- (WALL MOUNT KIT NOT INCLUDED)

“ The images shown in this manual are for illustrative purposes only and may be subject to change. ”

**PRINTED IN MEXICO**

**Elbrd:** J.M. / **SC:** 10-07-2024

**OBPN:** 5-057-739-11(1) / **SHDML:** K65XR80C\_B

**ADD:**K77XR80\_77XR80C\_65XR80\_55XR80\_55XR80C

**814000293**

