



# **FULL HD CURVED 75HZ FREESYNC GAMING MONITOR**


**1920 X 1080**

KAMN24F7CSB

Safety & warnings	<b>3</b>
Components list	<b>4</b>
Overview	<b>5</b>
Assembly	<b>7</b>
Connectivity	<b>10</b>
Operation	<b>12</b>
Specifications	<b>16</b>
Cleaning & care	<b>18</b>
Notes	<b>19</b>

# SAFETY & WARNINGS

- Read all instructions before using the appliance and retain for reference.
- This monitor is designed with ventilation holes on the back of the casing. Do not cover or block them.
- Do not insert any object or spray any liquid into the vents.
- Avoid placing the monitor near heaters, stoves, fireplaces or other sources of heat, as well as in rooms lacking adequate ventilation.
- Do not position the monitor in unsafe locations. If the monitor falls, it may be damaged and may injure nearby people.
- Unplug the monitor if it is not going to be used for an extended period.
- Do not place heavy objects on the monitor, its power cord or any connected cable.
- Do not open the back panel of the monitor, as it contains a high-voltage current even when not plugged in.

	<p>The terms HDMI and HDMI High-Definition Multimedia Interface and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.</p>
---	--

# COMPONENTS



 
Monitor




Stand connector




Stand base

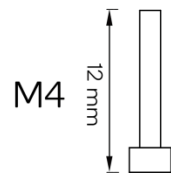

Stand base screw  
(M4 x 12mm) (x1)

 

VESA screws (x4)

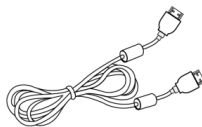 

HDMI cable




Power adapter/  
Power cable




User guide

# OVERVIEW

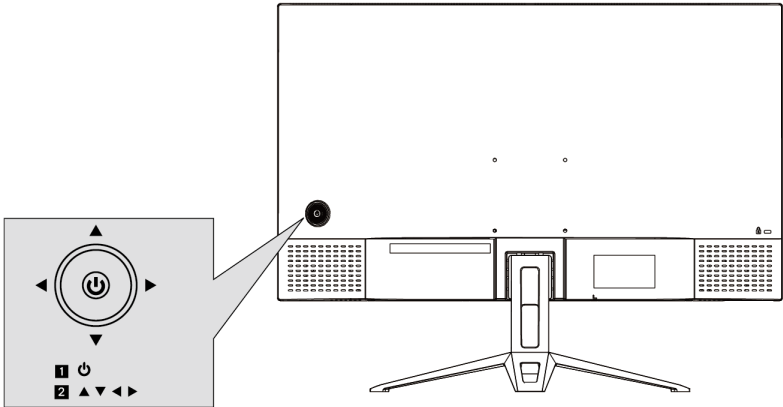 

Button		Action	Description
		Press in	Press and hold the  button for 6 seconds to turn on and off.  When the display is turned on, click  button to wake up the main menu for one second.  Use the arrow buttons to select the items to be adjusted up and down in the main menu. After selecting the items, click  button to adjust. Click  button again to save and return to the upper menu.
		Push left	Display mode shortcut. Enable the main menu or select the menu item.
		Push right	Source selection. Exit from the main menu or return to the upper menu.
		Push up	Game plus timer shortcut. Select menu items or increase the setting values of the selected menu item.
		Push down	Game plus sight shortcut. Select menu items or decrease the setting values of the selected menu item.

 Monitor Ports

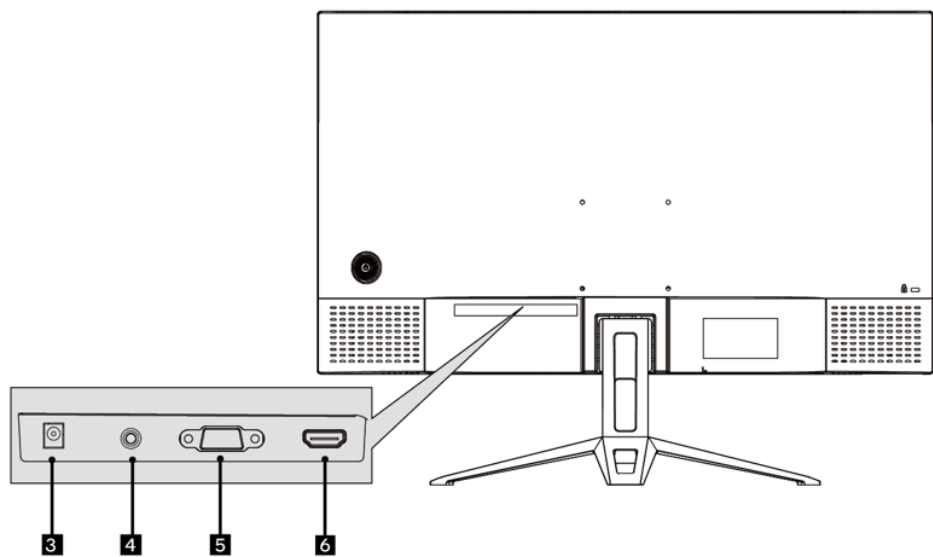


3	Power input (DC 12V)
4	Audio In
5	VGA connector
6	HDMI connector

# ASSEMBLY

 
## Assembling with stand

**WARNING:** Panel is fragile. Keep the foam underneath the monitor while assembling the stand.


1. Carefully remove the monitor from the packaging with foam attached and place it face down on a soft cloth spread across a stable surface such as a table.

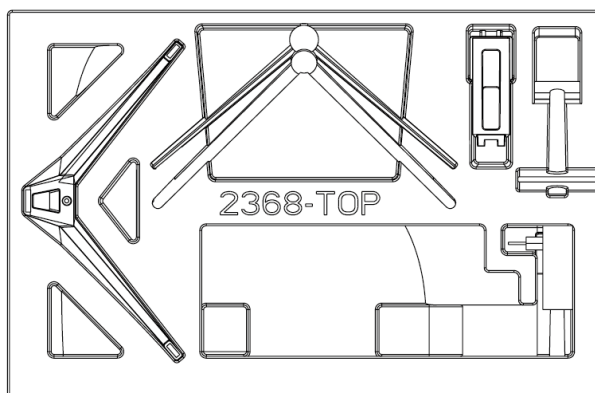


2. Attach the stand base to the stand connector using the M4 screw provided.

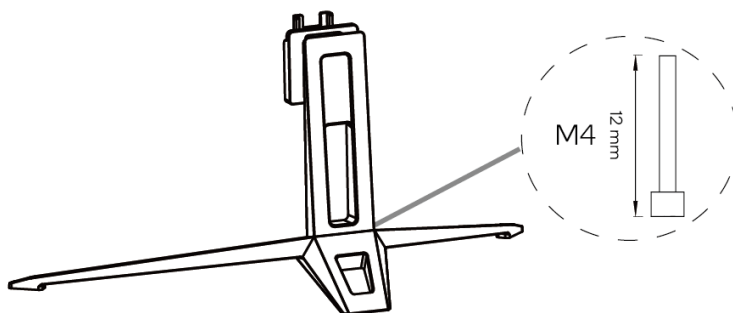 

 3. Insert the top of the stand connector into the rear of the monitor and push down until firmly connected.

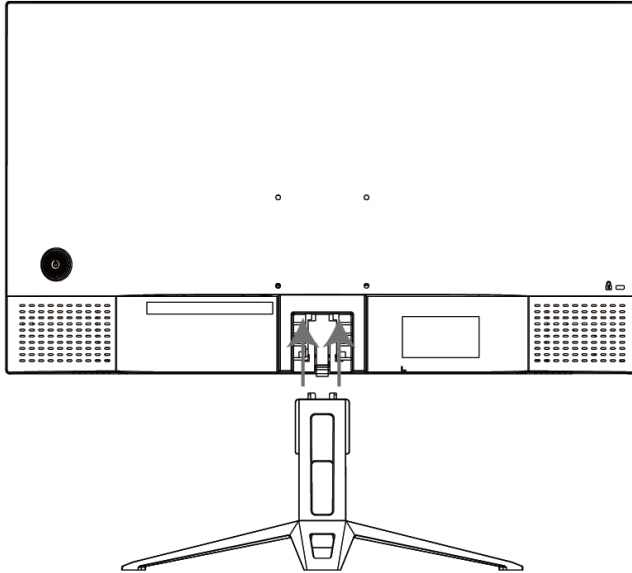

 
4. Lift monitor up straight and remove the bottom foam. Stand the monitor up on the installed base.

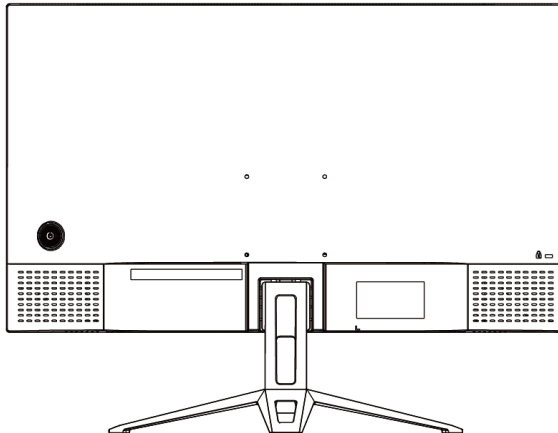




Assembling with VESA Mount




VESA mounting pattern 75 x 75mm, screw size M4.  
**Note:** VESA mount or mounting accessories are not included.

Open the box, take out the monitor with protection form attached and gently place it on a desktop or table. Ensure all components are removed from the foam covering. Press the release button to remove the stand plate.

 If the monitor is already attached to the stand, remove the stand before proceeding with VESA mount assembly.

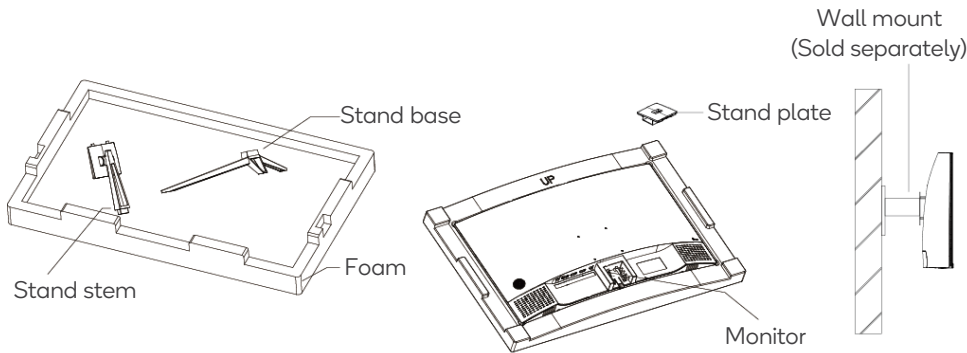

 
Instructions for attaching to the specific wall mount will be included with the mount.

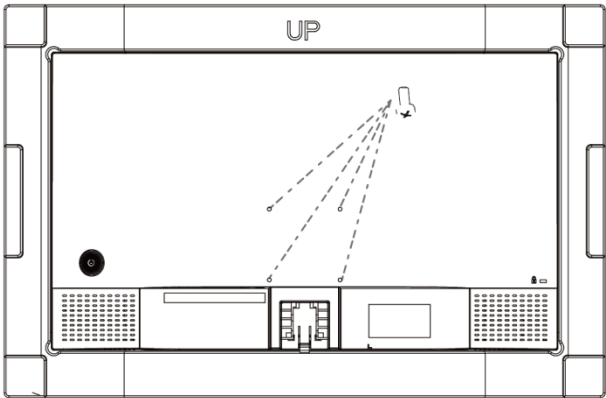

# CONNECTIVITY


## Power Cable

 Connect the included power cable to the monitor power port and then connect the other end to a power outlet.

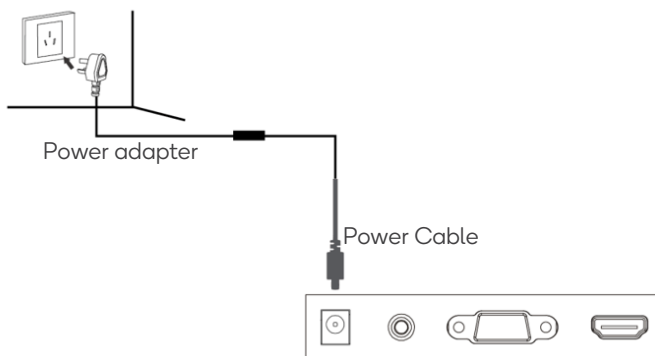


## Audio In

 Connect an audio cable to the 3.5mm audio port on the monitor (Audio In) and the 3.5mm audio port on your computer.

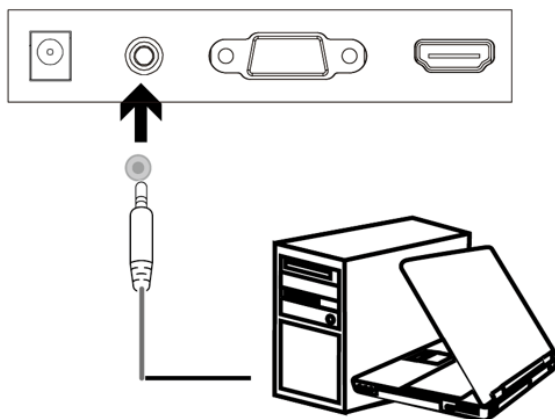


**HDMI**

 Connect an HDMI cable from the computer's display output to the monitor's display input.

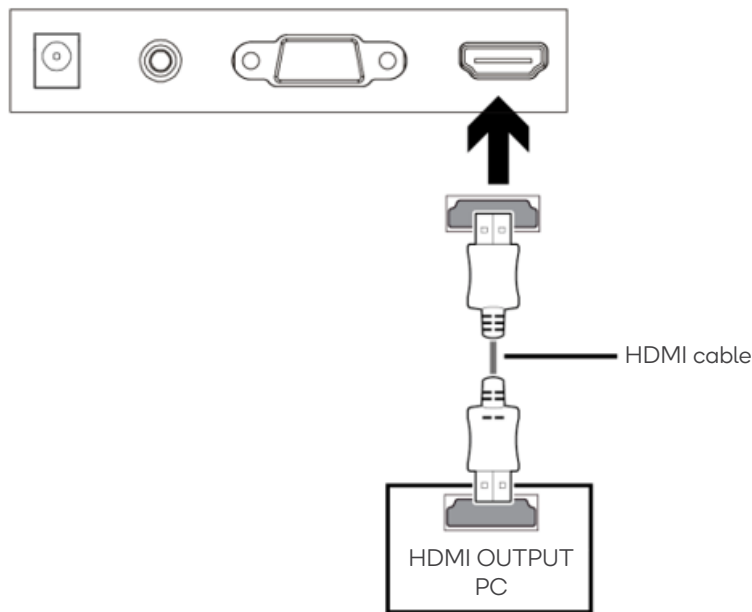

**VGA**

 Connect a VGA cable from the computer's display output to the monitor's display input.

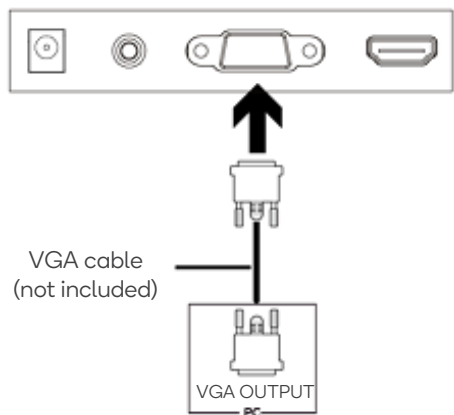


# OPERATION

 
1. Connect the monitor to your input device via HDMI or VGA.
2. Connect the power cable to your monitor and then connect the other end directly to a power socket.
3. Use the power button to turn the monitor on.









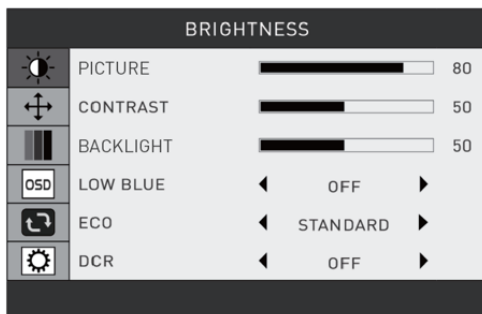


## FreeSync

- The feature is disabled by default when setting a 75Hz refresh rate.
- In order to use this feature, ensure your hardware has FreeSync capability and the graphics drivers are fully up to.
- After connecting, you may receive a prompt to enable the feature on your computer. If you do not receive the prompt, you may need to enable the function in your graphics card menu.
- See your graphics card manufacturer's documentation for instructions on how to turn on and/or enable FreeSync.

The On-Screen Display (OSD) Menu may be used to adjust your monitor's settings and appears on the screen after turning on the monitor and pressing the  button.

When using the monitor for the first time, it will configure optimal settings automatically.



1. Press  right button to open the navigation window.
2. Press up and down ( / ) buttons to browse functions. With the desired function highlighted, press  right button to enter the sub-menu. Press up and down ( / ) buttons to browse sub-menus, then press  button to highlight the desired function. Press up and down ( / ) buttons to highlight an option, then press  button to confirm the settings and exit the current screen.
3. Press  left button to exit the current screen.

 
List of Functions

Main Menu	Sub Menu	Option	Description
Brightness	Picture	~0-100	Adjust display brightness
	Contrast	~0-100	Adjust display contrast
	Blacklight	~0-100	Adjust display Blacklight
	Low blue	On	Enable/disable blue light reduction
		Off	
	ECO	STANDARD/TEXT/ GAME/MOVIE/ FPS/RTS	Preset colour modes
	DCR	On	Enable/disable dynamic contrast ratio
		Off	
Image	Horizontal position	~0-100	Adjust video display area left to right (VGA only)
	Vertical position	~0-100	Adjust video display area up and down (VGA only)
	Clock	~0-100	Adjust display Clock
	Phase	~0-100	Adjust display Phase
	Aspect	Wide (16:9), 4:3	Adjust display Phase Aspect
	FreeSync	On/Off	Adjust display FreeSync On/Off
Colours	Warm mode	Red/green/blue	Adjust red/green/blue levels
	Cool mode	Red/green/blue	Adjust red/green/blue levels
	User mode	Red/green/blue	Adjust red/green/blue levels
	HDR mode	On/Off	Enable or disable HDR mode

OSD Setting Reset	Language	English, 简体中文, 한국어, Русский, Español, Deutsch, Italiano, Français, Portugues, Türkçe, Polski, Nederlands	Set OSD language
	OSDH-Position	~0-100	Adjust OSD horizontal position
	OSD V- Position	~0-100	Adjust OSD vertical position
	OSD Transparency	~0-100	Set OSD overall transparency
	OSD Time Out	5~60	Set how long the OSD remains open after last input
Reset	Image	None	Restore VGA image defaults
	Colour	None	Automatically configure VGA colour settings
	Reset	None	Restore factory defaults
	Power down	On	Enable/disable Power down function
		Off	
Misc	Time count	10-90min	Adjust Time count
	Signal source	VGA/HDMI	Adjust input source
	Mute	On	Enable or disable monitor speaker output
		Off	
	Volume	~0-100	Adjust monitor speaker volume

**Eco Modes & Game plus Switching**

Press ▼ down button to switch Game plus modes. These overlay icons are primarily designed to assist aim during FPS games, though they can be used for other scenarios.

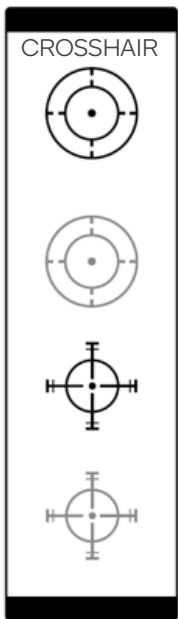

Press ◀ left button to switch ECO modes. These modes include Standard, Text, Game, Movie, FPS and RTS and can be used to optimise settings according to your activity. Standard mode is suitable for most activities.



# SPECIFICATIONS

Aspect ratio	16:9
Brightness	250cd/ m <sup>2</sup> (Typ.)
Panel	VA
Resolution	1920x1080
Refresh rate	75Hz
Response time	20ms
Viewing angle	≥178°(H) / 178°(V)
Contrast ratio	3000:1
VESA mounting	75x75mm
Colours	16.7M
Signal input	HDMI1. 4 x 1, VGA x 1
Power	DC12V --- 3A
<b>Audio</b>	
Speakers	Yes
Audio In	Yes
<b>Accessories</b>	
Power cable	Yes
HDMI Cable	Yes



<b>Additional functions</b>	
Low Blue Light	Yes
Flicker Free	Yes
<b>Physical dimensions</b>	
Dimensions (w. Stand)	537.15 x 412.6 x 169.5mm
Dimensions (w/o Stand)	537.15 x 315.97 x 67.6mm
Net weight	3.0kg
Gross weight	4.3kg

## CLEANING & CARE

- Unplug the monitor before cleaning it.
- Use a clean, slightly dampened cloth to wipe the main monitor body.
- To clean the screen: Turn the monitor off, unplug it and wait for it to cool completely, then wipe it with a dry micro-fibre cloth.
- Do not use cleaning alcohol, ammonia-based liquids or other harsh cleaners.

# NOTES

[illegible]

### **Need more information?**

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

**kogan.com**