

 
G515 TKL

Gaming Keyboard
游戏键盘

SETUP GUIDE | 设置指南




logitech

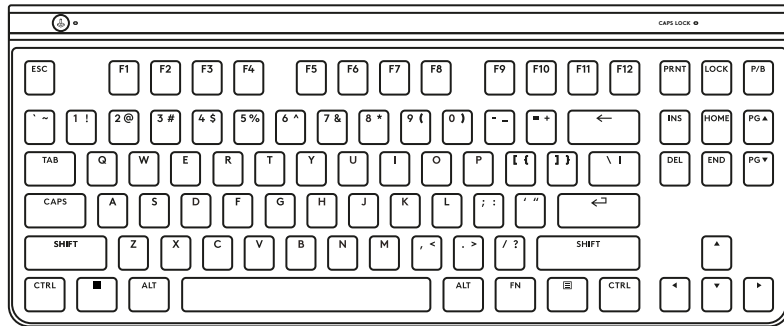


ENGLISH	3
简体中文	6
繁體中文	9
한국어	12

SETTING UP

 - 1 Use the cable inside the box to connect the keyboard with your PC USB port.

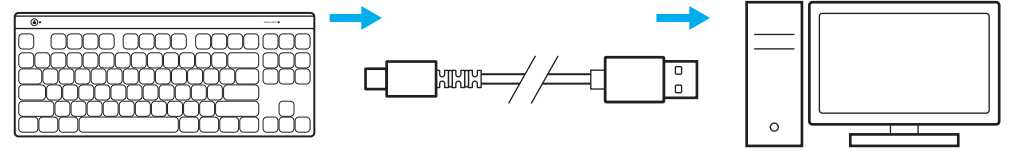

 - 2 Download and install G HUB software to your PC/ MAC for the best gaming experience (G HUB has onboarding story for features). Go to www.logitechG.com/ghub

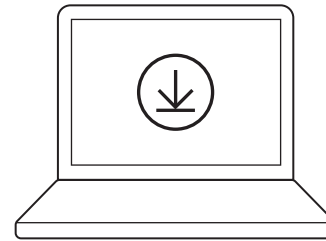


logitechG.com/ghub

GAME MODE


Pressing the Game mode button blocks the *Windows* and *Menu* keys when pressed.

 Additional keys can be blocked using G HUB software.

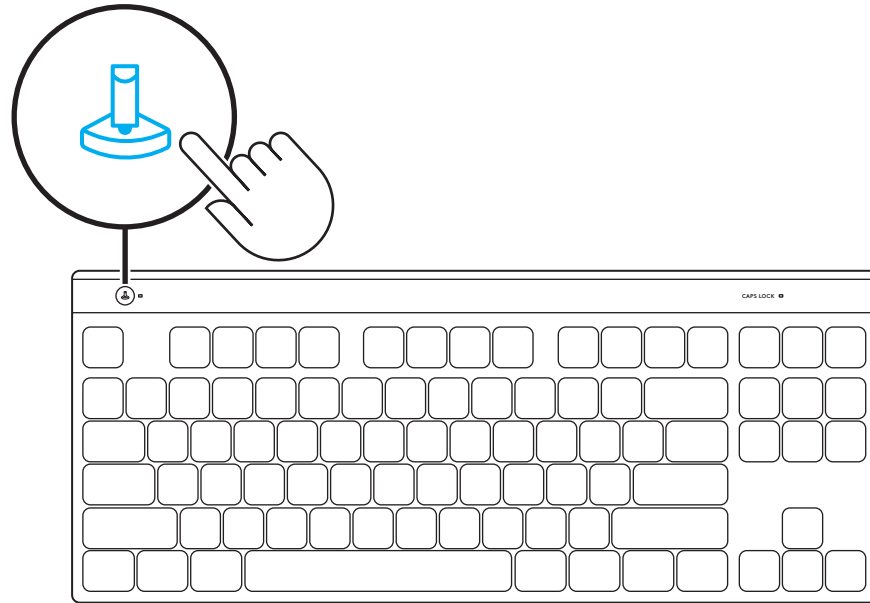

FULL KEY CUSTOMIZATION

 Use FN+A to activate your KEYCONTROL, then you can start to use the Remap key you have assigned in Ghub.



FN CONTROL

Media Controls


FN + F8	Brightness Control (5 Level Rotation)
FN + F9	Play/Pause
FN + F10	Stop
FN + F11	Previous Track
FN + F12	Next Track
FN + PRNT	Mute
FN + LOCK	Volume down
FN + P/B	Volume Up

Lighting Brightness Control


FN + F8	Brightness Degree
-------------------------------	-------------------

设置

 - 1 使用包装盒内的线缆, 将键盘与电脑 USB 端口连接。

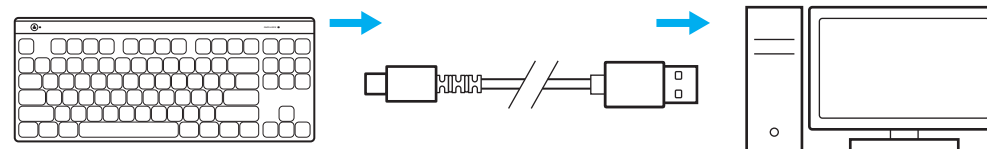

 
- 2 下载 G HUB 软件并安装到 PC/MAC, 获得更出色的游戏体验 (G HUB 包含有关各项功能的入门介绍)。访问 www.logitechG.com/ghub

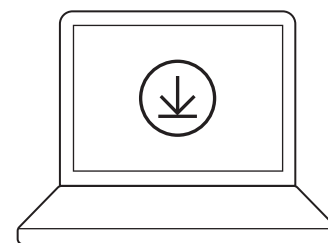

logitechG.com/ghub

游戏模式

 按下游戏模式按钮后会阻止 Windows 和菜单键功能。
可以使用 G HUB 软件阻止其他按键。

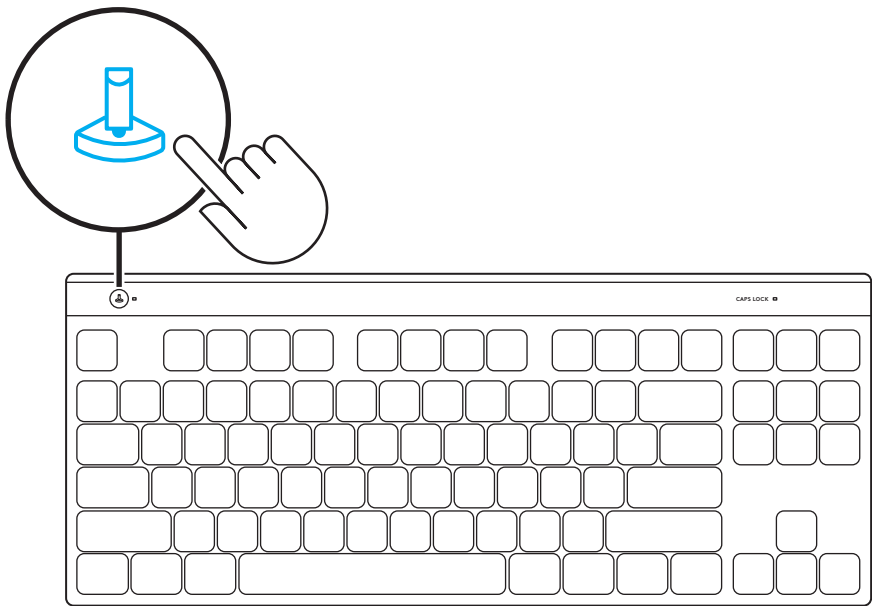

全键自定义

使用 FN+A 激活 KEYCONTROL, 然后您就可以开始使用在 Ghub 中分配好的重映射按键了。

 + 	激活全键自定义布局
---	-----------

FN 控制

媒体控制


FN + F8	亮度控制 (5 级循环)
FN + F9	播放/暂停
FN + F10	停止
FN + F11	上一曲目
FN + F12	下一曲目
FN + PRNT	静音
FN + LOCK	音量下降
FN + P/B	音量上升

灯光亮度控制


FN + F8	亮度级别
-------------------------------	------

設定

 - 1 使用包裝盒內的連接線將鍵盤連接到 PC USB 連接埠。

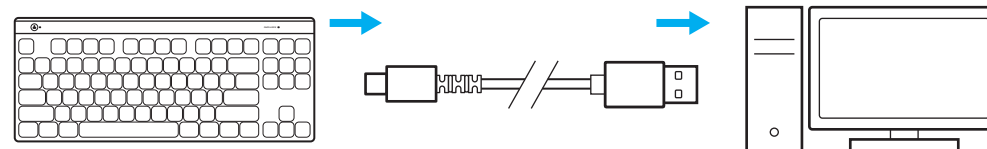

 - 2 下載並安裝 G HUB 軟體到您的 PC/MAC 上，以獲得最佳遊戲體驗 (G HUB 提供有功能的介紹說明)。前往 www.logitechG.com/ghub

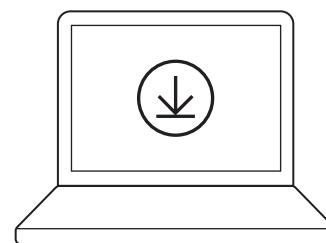


logitechG.com/ghub

遊戲模式


按下「遊戲模式」按鈕時可阻止 Windows 鍵和功能表鍵起作用。

 其他按鍵可使用 G HUB 軟體封鎖其功能。

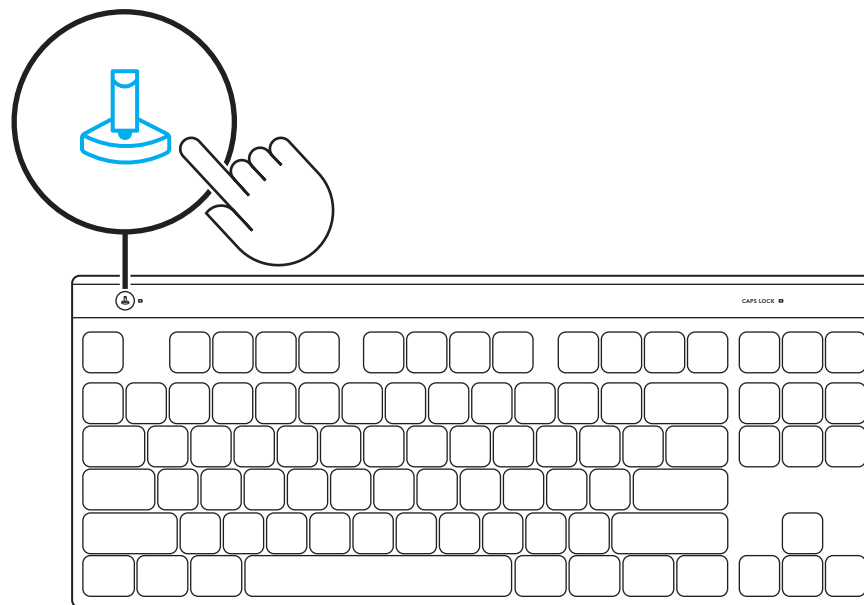

全按鍵自訂

 使用 FN+A 啓動您的 KEYCONTROL，之後您可以開始使用您在 Ghub 中指派的重新對應按鍵。



FN 控制

媒體控制鍵


 + 	亮度控制 (5 段循環)
 + 	播放/暫停
 + 	停止
 + 	上一曲目
 + 	下一曲目
 + 	靜音
 + 	減少音量
 + 	增加音量

燈光亮度控制


 + 	減少亮度
---	------

설정하기

 - 1 상자 안에 있는 케이블을 사용하여 키보드를 PC USB 포트에 연결합니다.

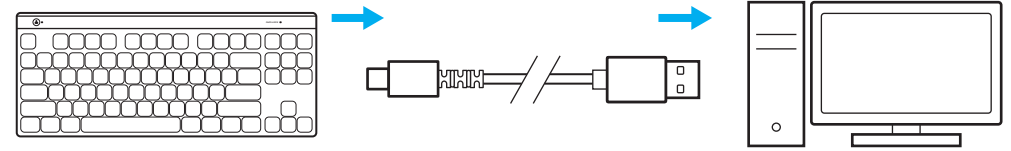

 - 2 최고의 게이밍 경험을 위해 PC/MAC에 G HUB 소프트웨어를 다운로드 및 설치합니다(G HUB에서 기능 확인 가능). www.logitechG.com/ghub에 접속하세요.

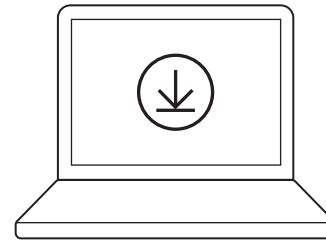


logitechG.com/ghub

게임 모드


게임 모드 버튼을 누르면 *Windows* 및 메뉴 키가 눌리지 않습니다.

 G HUB 소프트웨어로 다른 키도 차단할 수 있습니다.

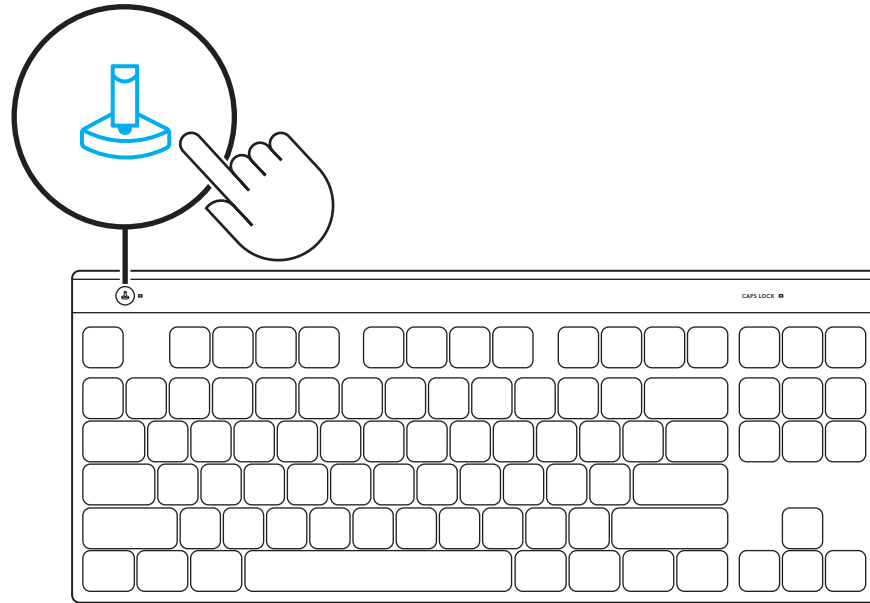

전체 키 커스텀

 FN+A를 눌러 KEYCONTROL를 활성화한 후 Ghub에서 할당한 Remap(다시 매핑) 키의 이용을 시작할 수 있습니다.



FN 컨트롤

미디어 컨트롤

 + 	밝기 조절 가능 (5 레벨 회전)
 + 	재생/일시 중지
 + 	중지
 + 	이전 트랙
 + 	다음 트랙
 + 	음소거
 + 	볼륨 작게
 + 	볼륨 크게

조명 밝기 조절

 + 	밝기 정도
---	-------



©2024 Logitech. Logitech, Logitech G, Logi and their respective logos are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

版权所有 © 2024 罗技。罗技、罗技 G、Logitech、Logitech G、Logi 及其各自标志为罗技欧洲公司和/或其在美国及其他国家附属公司的商标，并或已注册。所有其它商标均是其各自所有者的财产。罗技对于本手册中可能出现的任何错误不承担任何责任。本手册中包含的信息如有更改，恕不事先通知。

WEB-621-002483 002