



Universal Remote Control Owner's Manual RCR314WR / RCR313BR Manual del Propietario (parte posterior)

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Industry Canada Regulatory Information

This class B digital apparatus complies with Canadian ICES-003

Avis d'Industrie Canada

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada

SAVE THIS MANUAL AND THE CODE LISTS!

 
Remote controls can sometimes lose their programming when you change the batteries. Make sure you keep the manual and code lists in a safe place so that you can reprogram the remote if you need to.

Congratulations on your purchase of this 3-device RCA Universal Remote Control. This remote features a library of codes with the latest devices of all major brands, with support for streaming media players as well. The navigation keys have been redesigned to function seamlessly with the more sophisticated menu and guide systems found in today's home entertainment devices.

Step 1: Install your batteries

Your universal remote requires two AA alkaline batteries (batteries may or may not be included, depending on model).

To install the batteries:



1. Remove the battery compartment cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery compartment.
3. Push the battery cover back into place.

Battery Precautions:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Regulations.

Battery Saver

Your universal remote control saves battery power by automatically turning off if any key is pressed for more than 60 seconds. This saves your battery life should your remote get stuck in a place where the keys remain depressed, such as between sofa cushions.

Step 2: Program your remote

To use this universal remote with your home entertainment system, first you need to program it to control your devices. There are four ways you can program the universal remote to operate your devices. Try them in the order listed here:

- The **Brand Code Search** searches through the codes for select brands of devices.
- The **Direct Code Entry** lets you enter a code from the accompanying code list for your brand of device.
- The **Auto Code Search** goes automatically through all the codes for the device you're trying to control.
- The **Manual Code Search** lets you manually go through all the codes for the device you're trying to control.

Brand Code Search


The Brand Code Search goes through only the codes for one of the select brands listed in the accompanying code list. If your brand of device is listed, this search can be very quick and easy.

TIPS: Each device key is associated with a type of device—the TV is preset to search for TVs, SAT•CBL•STREAM for satellite receivers, cable boxes, digital TV converters, or streaming media players and DVD•VCR for VCRs or DVD players.

The POWER key serves as an indicator light during programming, giving you feedback at each stage of the process.

To exit without saving a new code at any point in the Brand Code Search, press the GO BACK key.


1. Manually turn on the device you want to control.

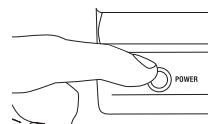

2. If you're programming the TV or SAT•CBL•STREAM key, go to step 3.

If you're programming the DVD•VCR key, you need to tell the remote which kind of device you want this key to control, VCR or DVD.


Press and hold the DVD•VCR key. While you're holding down the DVD•VCR key, use your other hand to press the number key for the type of device you want to control with this key: 2 for VCR, 3 for DVD.

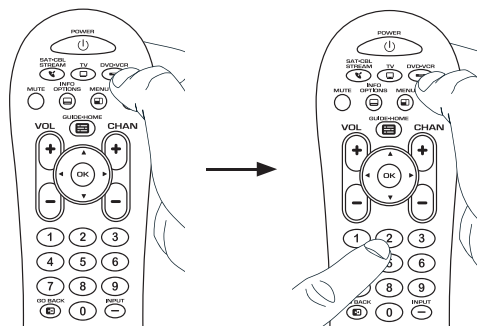

3. Find your device's brand in the Brand Code list section of the accompanying code list. Circle the number for your brand and keep the list handy.



- Press and hold the device key you want to program. While you're holding down the device key, use your other hand to press and hold the remote's POWER key at the same time.

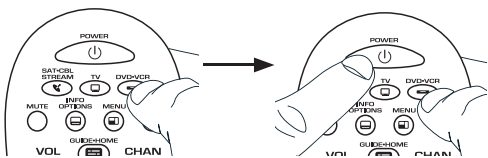


- Wait until the POWER key comes on and stays on. Then release both keys.

- Look at the number you circled for your device's brand code number. Press that number on the remote keypad.



- Point the remote directly at the front panel of the device you want to control. Press POWER on the remote and wait 2 seconds. The remote is testing a single code for your device's brand.

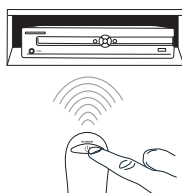

Did your device turn off?

YES: Press the STOP key to store the code. You're done! You've programmed this device key.

NO: Press POWER again. The remote tests the next code for your brand.

Keep pressing POWER every 2 seconds until your device turns off. When it does, press STOP.

NOTES

Throughout the programming of each key, be sure to keep the remote pointed at the IR sensor of the device you are currently programming the remote to control.

Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code. See the "Testing the Code for Maximum Functionality" section below for more information.

During the Brand Code Search, the remote ignores keypresses that aren't part of the search.

The search times out after two minutes (the POWER key blinks four times and turns off, and the last programmed code under that device key is retained).

The POWER key blinks four times and turns off when the remote has gone through all the codes. The remote exits the Brand Code Search. If your device hasn't turned off yet, try a different search method.

Testing the Code for Maximum Functionality

- Try a variety of the device's functions with the remote. If some device features don't work, go to the next step to try a different code.
- Repeat the Brand Code Search from the beginning. When the device turns off for the first time, don't press the STOP key, which would store the same code. Instead, with the unit now off, continue to press the POWER key repeatedly until the unit turns back on.
- Once the unit turns back on, you have found another code that operates the device. Press the STOP key.
- Test the key's functionality again by attempting to control a variety of the device's functions. If the code that has been stored controls the majority of the device's functions, programming is complete. If the code stored does not give maximum functionality, try another code.


Direct Code Entry

Direct Code Entry lets you enter a code from the accompanying code list for your brand of device. It's not as easy as the other methods, but it's potentially the fastest method.

TIP: Each device key is associated with a type of device—the TV is preset to search for TVs, SAT•CBL•STREAM for satellite receivers, cable boxes, digital TV converters, or streaming media players, and DVD•VCR for VCRs or DVD players.

The POWER key serves as an indicator light during programming, giving you feedback at each stage of the process.

- Manually turn on the device you want to control.

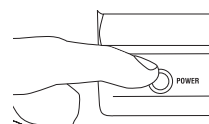


- Find the Code List that came with the remote. Locate the section for the type of device you're trying to program, and find your brand in that section. Circle the codes for your brand and keep them handy.



- Press and hold the device key you want to program (the POWER key comes on).

While you're holding down the device key, use your other hand to enter the first five-digit code for your brand in the code list (the POWER key goes off after the first digit).

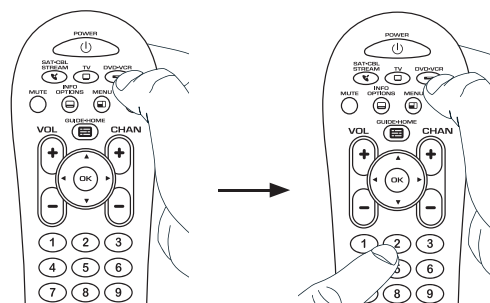

- When you've finished entering the five-digit code, keep holding down the device key and look at the POWER key.

Is the POWER key on?

YES: You're done! You've programmed this device key.

NO, it blinked four times and turned off: You have either entered a code number that is not in the code lists or missed a step in the code entry procedure. Try step 3 again.

NOTES

Remember to enter the code for future reference in the box provided in the Code Retrieval section of this manual.

If your brand isn't listed in the code list, use one of the Code Search methods to program the remote control. (Refer to the Auto and Manual Code Search methods.)

If you release the device key any time during the Direct Code Entry procedure, the POWER key blinks four times, and the process is exited. The last programmed code under the device key is retained.

Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code in the list.


Auto Code Search

The Auto Code Search goes automatically through all the codes for the device you're trying to control. When you find the one that operates your device, you can stop the search and store that code.

TIPS: Each device key is associated with a type of device—the TV is preset to search for TVs, SAT•CBL•STREAM for satellite receivers, cable boxes, digital TV converters, or streaming media players, and DVD•VCR for VCRs or DVD players.

To exit without saving a new code at any point in the Auto Code Search, press the GO BACK key.


1. Manually turn on the device you want to control.

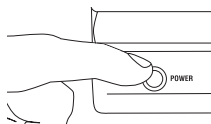


2. If you're programming the TV or SAT•CBL•STREAM key, go to step 3.

If you're programming the DVD•VCR key, you need to tell the remote which kind of device you want this key to control, VCR or DVD.

Press and hold the DVD•VCR key. While you're holding down the DVD•VCR key, use your other hand to press the number key for the type of device you want to control with this key: 2 for VCR, 3 for DVD.

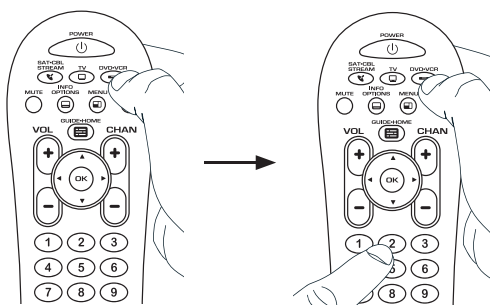


3. Press and hold the device key you want to program. While you're holding down the device key, use your other hand to press and hold the remote's POWER key at the same time.

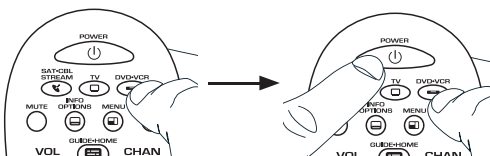

4. Wait until the POWER key comes on and stays on. Then release both keys.

5. Point the remote directly at the front panel of the device you want to control. Press PLAY on the remote and wait 5 seconds. The remote is testing a batch of 10 codes on your device.

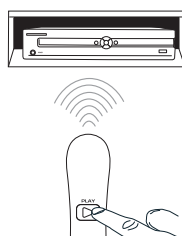


Did your device turn off?

YES: Go to step 6.

NO: Press PLAY again. The remote tests the next batch of 10 codes.

Keep pressing PLAY every 5 seconds until your device turns off.

6. When your device turns off, press the REVERSE key on the remote and wait at least 2 seconds. The remote tries the last of the previous ten codes.

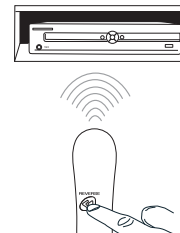

Did your device turn on?

YES: Press the STOP key. You're done! You've programmed this device key.

NO: Press REVERSE again. The remote tests the next code in the batch.

Keep pressing REVERSE every 2 seconds until your device turns back on. When it does, press STOP.

Note: If you accidentally press the REVERSE key after your device turns on, press the FORWARD key. Then, wait two seconds to see if your device turns off again.

NOTES

Throughout the programming of each key, be sure to keep the remote pointed at the IR sensor of the device you are currently programming the remote to control.

Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code. See the "Testing the Code for Maximum Functionality" section below for more information.

During the Auto Code Search, the remote ignores keypresses that aren't part of the search.

The search times out after two minutes (the POWER key blinks four times and turns off, and the last programmed code under that device key is retained).

The POWER key blinks four times and turns off when the remote has gone through all the codes. The remote exits the Auto Code Search. If your device hasn't turned off yet, try a different search method.

Testing the Code for Maximum Functionality

1. Try a variety of the device's functions with the remote. If some device features don't work, go to next step to try a different code.
2. Repeat the Auto Code Search Method from the beginning. When your device turns off, do not stop searching. Instead, with the unit now off, continue to press the PLAY key every 5 seconds until the unit turns back on.
3. Once the unit turns back on, press the REVERSE key on the remote every 2 seconds until your device turns off again. When your device turns off again, press the STOP key.
4. Test the key's functionality again by attempting to control a variety of the device's functions. If the code that has been stored controls the majority of the device's functions, programming is complete. If the code stored does not give maximum functionality, try another code.

Manual Code Search

The Manual Code Search lets you go one-by-one through all the codes for the device you're trying to control. When you find the one that operates your device, you can stop the search and store that code.


TIPS: Each device key is associated with a type of device—the TV is preset to search for TVs, SAT•CBL•STREAM for satellite receivers, cable boxes, digital TV converters, or streaming media players, and DVD•VCR for VCRs or DVD players.

The **POWER** key serves as an indicator light during programming, giving you feedback at each stage of the process.

The **Manual Code Search** method may take a long time because the remote searches through all of the codes in its memory one-by-one. If your brand is listed in the **Brand Codes** or the **Code Lists**, first try the **Brand Code Search** or the **Direct Code Entry** method.

To exit without saving a new code at any point in the **Manual Code Search**, press the **GO BACK** key.


1. Manually turn on the device you want to control.

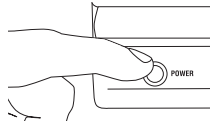


2. If you're programming the **TV** or **SAT•CBL•STREAM** key, go to step 3.

If you're programming the **DVD•VCR** key, you need to tell the remote which kind of device you want this key to control, **VCR** or **DVD**.


Press and hold the **DVD•VCR** key. While you're holding down the **DVD•VCR** key, use your other hand to press the number key for the type of device you want to control with this key: 2 for **VCR**, 3 for **DVD**.

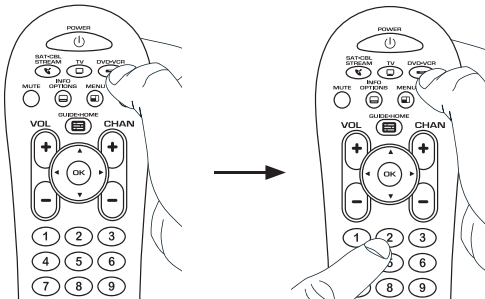

3. Press and hold the device key you want to program. While you're holding down the device key, use your other hand to press and hold the remote's **POWER** key at the same time.

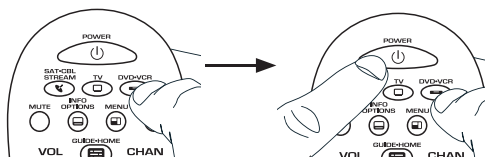

 4. Wait until the **POWER** key comes on and stays on. Then release both keys.
5. Point the remote directly at the front panel of the device you want to control. Press **POWER** on the remote and wait 2 seconds. The remote is testing a single code for your device.



Did your device turn off?

YES: Press the **STOP** key to store the code. You're done! You've programmed this device key.

NO: Press **POWER** again. The remote tests the next code for your device.

Keep pressing **POWER** every 2 seconds until your device turns off. When it does, press **STOP**.

TIP: Because there are so many codes, you may have to press the **POWER** key many times—possibly hundreds of times.

NOTES

Throughout the programming of each key, keep the remote pointed at the **IR sensor** of the device you are programming the remote to control.

Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code. See the "Testing the Code for Maximum Functionality" section below for more information.

During the **Manual Code Search**, the remote ignores keypresses that aren't part of the search.

The search times out after two minutes (the **POWER** key blinks four times and turns off, and the last programmed code under that device key is retained).

The **POWER** key blinks four times and turns off when the remote has gone through all the codes. The remote exits the **Manual Code Search**. If your device hasn't turned off yet, try a different search method.

Testing the Code for Maximum Functionality

1. Try a variety of the device's functions with the remote. If some features of your devices don't work, go to the next step to try a different code.
2. Repeat the **Manual Code Search** from the beginning. When the device turns off for the first time, don't press the **STOP** key, which would store the same code. Instead, with the unit now off, continue to press the **POWER** key repeatedly until the unit turns back on.
3. Once the unit turns back on, you have found another code that operates the device. Press the **STOP** key.
4. Test the key's functionality again by trying a variety of functions. If the code controls the majority of the device's functions, programming is complete. If the code stored does not give maximum functionality, try another code.

Tour of the Remote

In most cases, the keys on this remote perform the same functions as the keys on your original remotes once you've programmed this remote to operate your components. Many keys on this remote have other functions as well.


Illuminated **POWER** key serves as an indicator light to provide feedback.

Device keys (**TV**, **SAT•CBL•STREAM**, **DVD•VCR**) put the remote in the right mode to control your device.

LIGHT key (☾) turns backlighting on/off.

GUIDE/HOME and **MENU** access the same features as the keys on your original remotes.

Arrow keys act as navigation keys for streaming media players as well as in menu and guide systems for other devices.

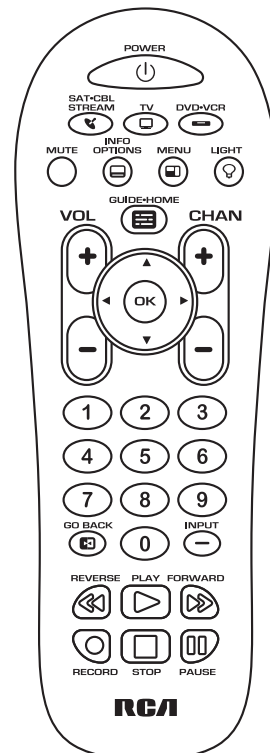

Actual model may vary from illustration

CHAN and **VOL** keys act as channel and volume controllers. The **CHAN** keys also provide skip forward and skip back control for DVD players and DVRs that support this functionality.

GO BACK exits remote programming; it also performs the same functions as on your original remotes.

The **INPUT** and **— (dash)** key has three functions: (1) it toggles through all the video sources connected to your TV; (2) when the remote is in VCR mode, this button toggles between VCR and the TV input; (3) when you're entering digital channel numbers directly, this button lets you separate the main channel number from the sub-channel number (such as 59.1).

IMPORTANT

Because this remote controls more than one device, you must first "tell" the remote which device you wish to operate. That means, if you wish to operate your TV, you must first press the TV key to put the remote in the TV Mode. The remote stays in that device mode until you press a different device key. For example, if your remote is in TV Mode and you want to operate the DVD player, you must press the DVD•VCR key to change device modes.


Backlighting

Backlight illumination helps you see the remote control keys better in the dark. You can turn backlight illumination on or off by pressing the **LIGHT** key (☾). Backlighting stays on as long as keys are being pressed and turns off six seconds after the last keypress. Once the backlight time has timed out, any keypress will reactivate it. If the backlight illumination is on, and you press the backlight key, the backlight turns off.

Advanced Functions

Code Retrieval

Once you've programmed the remote to control your devices, you may want to record the codes for future reference. If you used the Direct Code Entry method, this is easy. Just find the codes you entered and make a note of them in the boxes below. If you used one of the Code Search methods to program your remote or if you used the Direct Entry method but don't remember the code, you will need to retrieve each device's five-digit code. Retrieving the actual code and writing it down will save you time if you ever need to program the remote again (e.g., if programming is lost when you change the batteries). If the codes are recorded, you can use the Direct Entry method to reprogram your remote to control your devices, which is quick and easy.

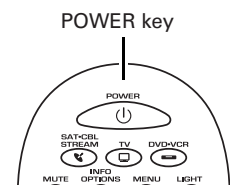

1. Press and hold the device key (TV, SAT•CBL•STREAM, DVD•VCR) whose code you wish to retrieve. The **POWER** key turns on. Keep pressing the device key.
2. While holding the device key down, press and hold the **INFO•OPTIONS** key. The **POWER** key turns off. After holding down both keys for three seconds, the **POWER** key turns back on.
3. Release both keys. The **POWER** key remains on.
4. Starting with the number 1 key, press and release each number key on the keypad in the following order: 1-9, then 0. The number that causes the **POWER** key to blink is the first number of the code. As you find each number of the code, write it down for future reference.

Note: All TV codes begin with the number 1; all VCR and DVR codes begin with the number 2; all DVDs, the number 3; and all satellite receivers, cable boxes, streaming players, and DTV converters, the number 5.

5. Repeat step 4 until you have retrieved all five numbers in the code. After the fifth number is retrieved, the **POWER** key blinks briefly, then turns off.

TIP: To exit the Code Retrieval Mode at any time, press the **GO BACK** key.

Note: If you press an invalid key during the Code Retrieval process, the remote will not respond. If you do not press a valid Code Retrieval key (TV, SAT•CBL•STREAM, DVD•VCR, INFO•OPTIONS, GO BACK), Code Retrieval times out after 15 seconds. The **POWER** key blinks four times, and then turns off.

TV CODE				
1				

SAT•CBL•STREAM CODE				
5				
☐ SAT	☐ CABLE	☐ DTV CONVERTER		
☐ STREAMING PLAYER				

DVD•VCR CODE				
☐ DVD ☐ VCR				

Troubleshooting

Problem: The remote does not operate your device.

- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT•CBL•STREAM, DVD•VCR). This tells the remote which device to operate.
- Remove any obstacles between the remote and the device. Make sure you're aiming the remote at the device's IR sensor.
- Make sure the batteries are fresh and are properly installed. Replace the batteries with two new AA batteries, if necessary (see the Battery Installation section).

Problem: The remote can't be programmed to operate your device.

- If you are testing the remote while programming it, you may be too far away from the device or at a wrong angle. There must be an unobstructed path between the remote and the IR sensor on the device. Move closer and make sure you point the remote at the device you're trying to control.
- If you're using the Direct Entry programming method to enter the codes for your brand and the unit is still not functioning properly, try the auto, brand, or manual search method.
- To control combo units, like TV/VCRs or TV/DVDs, you must program the individual corresponding device keys to control each part of the combo unit. Once programmed successfully, the TV key controls the TV functions, and the DVD•VCR key controls the VCR or DVD functions.
- Make sure the batteries are fresh and are properly installed.

Problem: The remote doesn't perform commands properly.

- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT•CBL•STREAM, DVD•VCR). This tells the remote which device to operate.
- Make sure device is ready (for example, the DVD player has a disc loaded).
- You may have pressed an invalid key for the mode the remote is in.
- If you're trying to enter a channel number directly, try pressing the OK key after entering the channel number as this is a requirement of certain models and brands.

- There is a possibility that a programmed code may only be able to control some of your device features (for example, only turns a device on and off). To confirm that the device key is programmed with the correct code for maximum functionality, test the device. Attempt to control a variety of the device's functions with the remote. If some of the features of your devices don't work, try programming the remote with a different code in the list using the Direct Code Entry Method, until you find the code that allows the remote to control the majority of your device's functions. Different codes can provide different levels of functionality.

Problem: The POWER key does not light when you press a key.

- You may have pressed an invalid key for the mode the remote is in.
- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT•CBL•STREAM, DVD•VCR). This tells the remote which device to operate.
- Make sure the batteries are fresh and are properly installed. Replace the batteries with two new AA batteries, if necessary (see the Battery Installation section).

Problem: The remote will not change channels on device.

- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT•CBL•STREAM, DVD•VCR). This tells the remote which device to operate.
- Press the OK key after you enter a channel number.
- Remove any obstacles between the remote and the device. Make sure to aim the remote at the IR sensor on the device.

Problem: The device's menu does not appear on the TV screen.

- Make sure you have connected the device to your TV properly and selected the correct input. (See your devices' Owner's Manuals for proper connection procedures.)
- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SAT•CBL•STREAM, DVD•VCR). This tells the remote which device to operate.
- Menu access isn't supported for all brands. You may need to use your original remote control to access menu functions for some devices.

Care and Maintenance

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the remote only in normal temperature environments.
- Handle the remote gently and carefully. Don't drop it.
- Keep the remote away from dust and dirt.
- Wipe the remote with a damp cloth occasionally to keep it looking new.
- Modifying or tampering with the remote's internal devices can cause malfunction and invalidate its warranty.

Limited Lifetime Warranty

VOXX Accessories Corporation (the "Company") warrants to you the original retail purchaser of this product that should it, under normal use and conditions, be proven defective in material or workmanship during its lifetime while you own it, such defect(s) will be repaired or replaced (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not cover product purchased, serviced or used outside the United States or Canada. This Warranty is not transferable and does not extend to costs incurred for installation, removal or reinstallation of the product. This Warranty does not apply if in the Company's opinion, the product has been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or the simultaneous use of different battery types (e.g. alkaline, standard or rechargeable).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED TO DURATION OF THIS WARRANTY. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights, which vary from state/province to state/province.

Code Lists /
Lista de Códigos /
Liste des codes

Brand Code List / Lista de Códigos de Marcas /
Liste des codes de marque

Brand Codes are used for programming using the Brand Code Search and Entry method outlined in the User's Guide.

Los códigos de las marcas son utilizados para programar utilizando los métodos de búsqueda y entrada de códigos de marcas, resaltado en la guía del usuario.

Les codes de marques sont utilisés pour la programmation à l'aide de larecherche du code de marque et de la méthode d'entrée décrite dans le Guide de l'utilisateur.

Code	TV	DVD	VCR	SAT/CBL/ IPTV
00	RCA, GE, Proscan	RCA, GE, Proscan	RCA, GE, Proscan	RCA, GE, Proscan
01	Insignia, Dynex	JVC	JVC	Cablevision
02	LG	LG	Magnavox, Philips	Charter
03	Philips, Magnavox	Philips, Magnavox	Mitsubishi	Cisco, Scientific Atlanta
04	Panasonic	Panasonic	Panasonic	Comcast
05	Samsung	Pioneer	Samsung	Cox
06	Sharp	Samsung	Sharp	DirecTV
07	Sony	Sony	Sony	Dish Network, Echostar
08	Toshiba	Toshiba	TiVo	Motorola
09	Vizio	Yamaha	Toshiba	Time Warner

TV / Téléviseur	
Admiral	10093, 10463
Akai	10702, 11675, 10765
AOC	11365, 11589, 12014, 12087, 12621
Apex Digital.....	10765, 12397
Asus.....	13340
Audiovox	11564, 10802, 10875, 11276, 11284, 11865, 11937, 11951, 12121, 12513, 13065
Auria	12087
Aventura	10171
Axion.....	11937
Berkshire.....	10000
Broksonic.....	10463
Celera	10765
Changhong.....	10765
Citizen	11672
Coby	12306, 12315, 12340, 12343, 12344, 12345, 12347, 12348, 12350, 13478
Commercial Solutions	11447, 10000
Craig.....	13423
Curtis.....	12352, 12397, 12466, 12855, 13228, 13577
Curtis Mathes	10702, 10093, 10000, 11661, 11347
Daewoo	11661
Dell	11264, 11863
Dish Network	11948
Disney	11665, 11892
Dumont.....	10017
Durabrand	10178, 10171, 10463, 11665
Dynex	12049, 11810, 12184
Electrohome	10463, 11670, 11672
Element.....	11687, 11886, 12183, 12964, 13559
Emerson	11864, 11394, 10178, 10171, 10463, 11661, 11665, 11886, 11944, 11963, 12183
Envision	11365, 11589, 12014, 12087
ESA	10171, 11944, 11963
Fluid	12964
Funai	10171, 11271, 11963
Gateway	11756
GE.....	11447, 10178, 10000, 10051, 10765, 11347, 11547
GFM.....	11864, 10171, 11665, 11886, 11963
Gibraltar.....	10017
GoldStar.....	10178
GPX.....	13402
Haier.....	11748, 11749, 12309, 13382
Hallmark	10178
Hannspree	11348, 12786
Havermy	10093
Hisense.....	11314, 12098, 12183, 12355, 12419
Hitachi.....	11643, 11145, 10679
iLo.....	11394, 11665, 11684, 11990
Initial.....	11990
Insignia	12049, 11423, 11564, 10171, 10463, 11892, 11963, 12184,12417
Inteq	10017
iSymphony.....	13094
JCM.....	12256
JVC.....	11601, 12271, 11774, 10463, 11253
KDS.....	11498, 11687

KLH.....	10765
LG	11423, 11447, 12358, 12731, 12424, 10178, 10017, 11265
LXI	10156, 10178, 10000
MAG	11498, 11687
Magnavox.....	11867, 11454, 12372, 11866, 10171, 10051, 10802, 11365, 11944, 11963, 11990
Marantz	11454
Matsushita.....	10250
Megatron.....	10178
Memorex	10178, 10463, 10150, 11665, 11670, 11892
MGA	10178, 10150
Midland.....	10000, 10017, 10051
Mintek.....	11990
Mitsubishi.....	11250, 10093, 10178, 10150, 11797
Motorola.....	10093
NAD.....	10156, 11156, 10178
Naxa.....	12104, 13382
NEC.....	11704, 11797
Nexus Electronics	12183
Nikko.....	10178
Norcent.....	11365, 11589
÷levia	11610, 11240, 11331
Optimus	10250
Optoma.....	11348
Optonica	10093
Orion.....	10463
Panasonic.....	11480, 10250, 11291, 10051, 11271, 11941, 11946
PARK.....	12104
Penney.....	10156, 10178, 10000, 10051, 11347
Philco.....	11394, 10171, 11271, 11665, 11963
Philips.....	11867, 11454, 12374, 12372, 11866, 11394, 10171
Pioneer.....	11457, 10679, 11260
Planar.....	11589
Polaroid.....	11523, 10765, 11276, 11314, 11498, 11687, 12121
Portland.....	11661
Prima.....	11749
Prism.....	10051
Proscan.....	11447, 10000, 11347, 12147, 12183, 12256, 13577
Proton	10178
Proview.....	11498, 11687
Pulsar.....	10017
Quasar.....	10250, 11291, 10051
RadioShack.....	10178, 10000
RCA.....	11447, 12434, 12746, 10093, 10000, 10051, 11661, 13577, 12932, 12247, 12187, 11953, 11948, 11781, 11547, 11347, 10679, 10090
Realistic.....	10178
Runco.....	10017
Samsung.....	12051, 10702, 10178
Sansui.....	10171, 10463, 11670, 11892, 13564
Sanyo.....	11142
Sceptre.....	11360, 11599, 12337, 12506
Scotch.....	10178
Scott.....	10178, 11711
Sears.....	10156, 10178, 10000, 10171
Seiki.....	10178, 12964, 13559
Sens.....	11865
Sharp.....	10818, 12360, 10093
Sheng Chia.....	10093
Sigmac.....	13423
Sony	10810, 11300

Soundesign.....	10178
Spectroniq.....	11498, 11687
Squareview.....	10171
SunBriteTV.....	11610, 12337
Superscan.....	10864, 10093, 11944
Supersonic.....	12104
SVA.....	11963
Sylvania.....	11864, 11394, 10171, 11271, 11314, 11665, 11886, 11944, 11963
Symphonic.....	11394, 10171, 11944
Syntax.....	11610, 11240, 11331
Tandy.....	10093
Tatung.....	11756
TCL.....	12434, 13183
Technics.....	10250, 10051
Techwood.....	10051
Teknika.....	10150
Telefunken.....	10702
TMK.....	10178
TNCL.....	10017
Toshiba.....	11524, 11656, 10156, 11156, 11256, 12006, 11265, 11704, 11945, 12724
TruTech.....	11665
TVS.....	10463
Venturer.....	11865
Vidtech.....	10178
Viewsonic.....	12049, 10864, 11564, 10885, 11365, 11578, 11627, 12014,12087
Viore.....	11684, 12104, 12352, 13094, 13118, 13382
Vizio.....	11758, 12512, 12757, 10864, 11756, 10885, 13758
Wards.....	10156, 11156, 10178, 10000, 10017, 10051, 11347
Waycon.....	10156
Westinghouse.....	11712, 10885, 10889, 11300, 11577, 13470, 13579
White Westinghouse.....	10463, 11661
Wyse.....	11365
Zenith.....	11423, 12358, 12731, 10178, 10000, 10017, 10463, 11265, 11145, 11661, 11365

TV/DVD Combination / Combinación TV/DVD /
Téléviseur/DVD intégré

Akai.....	11675
Audiovox.....	11865, 11937, 11951, 12513, 13065
Axion.....	11937
Coby.....	12315, 12340, 12343, 12344, 12347, 12350
Curtis.....	12466, 12855
Dynex.....	12049, 11810, 12184
Electrohome	11670
Emerson.....	11864, 11394, 11886, 11963
ESA.....	11963
Funai	11963
GFM.....	11963
Haier.....	11748, 12309
iLo.....	11990
Initial.....	11990
Insignia.....	12049, 11963, 12417
iSymphony.....	13094
JVC.....	12271, 11774
LG.....	11423
Magnavox.....	12372, 11866, 11944, 11963, 11990

Memorex	11670
Mintek.....	11990
Naxa.....	12104, 13382
Panasonic.....	11941
Philips.....	12372, 11394
Polaroid.....	11523
Proscan.....	12256
RCA.....	11447, 12746, 11948, 12187, 12932
Sansui.....	11670, 13564
Sens.....	11865
Sharp.....	10818, 12360
Supersonic.....	12104
Sylvania.....	11864, 11394, 11886, 11963
Toshiba.....	11524, 11256, 12006
Venturer.....	11865
Viewsonic.....	12049, 10864
Viore.....	12104, 12352, 13094, 13118, 13382
Westinghouse	11712, 11300

TV/VCR Combination /
Combinación TV/VCR / Téléviseur/magnétoscope intégré

GE.....	10000
JVC.....	11253
Panasonic.....	10051
RCA.....	10000
Sharp.....	10093
Toshiba.....	12006, 11945
Zenith.....	10017

TV/VCR/DVD Combination / Combinación TV/VCR/DVD /
Téléviseur/magnétoscope/DVD intégré

Emerson	11944, 11963
ESA.....	11944
Insignia	11963
Magnavox.....	11944, 11963
Panasonic.....	11941, 11946
RCA.....	11953
Superscan.....	11944
Sylvania.....	11944
Symphonic.....	11944
Toshiba.....	11945

Video - VCR / Vidéo — magnétoscope

Accurian	20001
Admiral.....	20048
Adventura.....	20001
Aiwa.....	20037, 20001
Allegro.....	20039
American High.....	20035
Audiovox.....	20037
Calix	20037
Canon.....	20035
Carver.....	20081

Citizen	20037
Craig.....	20037
Crosley.....	20081, 20001
Curtis Mathes	20000, 20035, 20162
Daewoo	20045
Denon	20042
DirecTV.....	20739
Durabrand	20039
Dynatech.....	20001
Electrohome	20037, 20043
Electrophonic.....	20037
Emerex.....	20032
Emerson.....	20037, 20001, 20043, 20593, 21593
Fuji.....	20035
Funai	20001, 20593, 21593
Garrard.....	20001
GE.....	20000, 20035, 20202
GFM.....	21593
GoldStar.....	20037
Gradiente.....	20001
Harley Davidson.....	20001
Harman/Kardon	20081
Hitachi.....	20001, 20042, 20593
Hughes Network Systems	20042
Humax.....	20739
Instant Replay	20035
JVC.....	20067
KEC.....	20037
Kenwood.....	20067
Kodak.....	20035, 20037
Lloyd's.....	20001
LXI	20037
Magnasonic.....	20593
Magnavox.....	20035, 20039, 20081, 20001, 20593, 21593
Marantz.....	20035, 20081
Marta	20037
Matsushita.....	20035, 20162
MEI.....	20035
Memorex	20035, 20162, 20037, 20048, 20039, 20001
MGA.....	20043
Minolta.....	20042
Mitsubishi.....	20067, 20043
Motorola.....	20035, 20048
MTC.....	20001
Multitech.....	20001
NEC.....	20067
Nikko.....	20037
Olympus.....	20035
Optimus.....	21062, 20162, 20037, 20048, 20593
Panasonic.....	21062, 20035, 20162, 20616
Penney.....	20035, 20037, 20042
Pentax.....	20042
Philco.....	20035
Philips.....	20739, 20035, 20081
Pilot.....	20037
Pioneer.....	20067
Polk Audio.....	20081
Presidian	21593
Proscan.....	20000, 20202
Pulsar	20039
Quasar.....	20035, 20162

RadioShack	20001
Radix	20037
Randex	20037
RCA.....	20000, 20035, 20042, 20020, 20880
Realistic.....	20035, 20037, 20048, 20001
ReplayTV.....	20616
Runco	20039
Samsung	20045
Sanky	20048, 20039
Sansui	20001, 20067
Scott.....	20045, 20043
Sears.....	20035, 20037, 20001, 20042
Sharp.....	20048, 20848
Signature	20035
Sonic Blue	20616
Sony	20032, 20035, 20001
STS.....	20042
Sylvania	20035, 20081, 20001, 20043, 20593, 21593
Symphonic	20001, 20593, 21593
Tashiko	20037
Teac	20001
Technics.....	20035, 20162
Teknika.....	20035, 20037, 20001
Thomas	20001
TiVo	20739
Toshiba.....	20045, 20043
Totevision	20037
Vector	20045
Video Concepts	20045
Videomagic.....	20037
Villain	20001
Wards .. 20000, 20035, 20048, 20039, 20081, 20045, 20001, 20042	
XR-1000	20035, 20001
Zenith	20037, 20039, 20001

Video - DVD / Vidéo – DVD

Accurian	30675
Alco	30790
Allegro	30869
Apex Digital.....	30672, 30796, 31061
Audio Authority.....	32555
Audiovox	30790
Bel Canto Design	31571
Bose.....	31895, 32023
California Audio Labs	30490
Cinea	30831
CineVision	30869
Coby	31107, 31628, 32494
Craig	30831
Daewoo	30869
Denon	30490, 32258, 31634
Disney	30675, 31270
Dynex.....	32596
Emerson	30675, 32213
Funai	30675
GE.....	30000
GFM	30675
Go Video	31075, 30741, 30869, 31044

GoldStar	30741, 30869
Grundig	30539
Harman/Kardon	30702, 31229, 32927
Hello Kitty.....	30831
Hitachi.....	30573, 30664
Hiteker	30672
Insignia	30675, 30741, 32596, 32095, 32428
Integra	32147, 31769, 30627, 31634
Irradio	30646
JBL	30702
JVC.....	31602, 30623, 30867, 31164, 32365, 32855
Kawasaki	30790
Kenwood	30490, 30534
KLH	30790
Lexicon.....	32545
LG	30741, 31602, 30869, 33996
Logitech	32639
Magnavox.....	30539, 30503, 30675, 30646, 31354, 31506
Marantz	30539, 32414
Memorex	30831, 31270, 32213, 32331, 33153
Microsoft	30000, 32083
Mitsubishi	31521
NAD	30741
NEC.....	30785
Norcent	31107
+levia	32331
Onkyo	30503, 32147, 31769, 30627
Oppo	30575, 32545
Panasonic.....	30490, 31641, 30503, 31579, 31762, 32967, 33641
Philco.....	30675
Philips. 32056, 30539, 32434, 32084, 30503, 30675, 30646, 31340,	
.....	31354, 31506, 32526
Pioneer.....	30142, 30631, 31571, 32442
Polaroid.....	31061
Polk Audio	30539
Presidian	30675
Proceed	30672
Proscan.....	30000
RCA.....	30000, 31769, 30790, 30822, 32213, 32829
RE-BL	32555
Rio	30869
Rotel.....	30623
Samsung	30199, 30573, 32069, 31075, 30490, 30298, 30820,
.....	31044, 31470, 32329, 32489, 32556
Schneider	30646
Sharp	30675, 32250, 30630
Sherwood	31043
Shinsonic.....	30533
Sonic Blue	30869
Sony ... 31633, 31516, 30533, 31070, 30864, 30772, 31033, 31431,	
.....	31904, 32020, 32132
Sylvania	30675
Symphonic	30675
Teac	30790
Technics	30490
Toshiba.....	30503, 32705, 31769, 31154, 32006, 32277, 33157
Urban Concepts.....	30503
Venturer	30790
Viore.....	32553
Vizio	32563
WB Electronics.....	32555

Xbox.....	30000, 32083
Yamaha	30490, 30539, 32298, 30646, 30545, 30817, 31354
Zenith.....	30503, 30741, 30869

Satellite Set Top Box / Convertidor para Satélite / Boîtier décodeur pour satellite

Bell	50775
DirecTV.....	51377, 50392, 50566, 53377
Dish Network	50775
Dishpro	50775
Echostar	50775
GE.....	50566
General Instrument.....	50869
GOI	50775
HTS	50775
Hughes Network Systems	51377
Humax.....	51377
Jerrold	50869
JVC.....	50775
Motorola	50869
Next Level	50869
Proscan.....	50392, 50566
RadioShack	50869
RCA.....	50392, 50566, 50855
Samsung	51377
Shaw Direct	50869
Star Choice.....	50869
Voom.....	50869

Cable Set Top Box / Convertidor para Cable / Boîtier décodeur pour câble

Amino	51481, 52482
Arris.....	52187
AT&T.....	50858
Bell	51998
Bright House.....	51376, 51877
Cable One	51376, 51877
Cablevision	51376, 51877
Charter	51376, 51877, 52187
Cisco	51877, 50858, 52378, 51982, 52345, 53294
Comcast	51376, 51877, 50476, 51982, 52187
Cox	51376, 51877
Digeo.....	52187
Director	50476
Entone.....	52302
General Instrument.....	50476
Insight	51376, 51877
Jerrold	50476
Knology	51877
KoolConnect.....	51481
Mediacom	51376, 51877
Motorola.....	51376, 50858, 52378, 50476, 51982, 51998
Moxi	52187
MTS	51998
Pace	51376, 51877, 51982

Panasonic.....	51982
Pioneer.....	51877
RCN.....	51376, 50476
Rogers	51877
Samsung	51877
Sasktel.....	51998
Scientific Atlanta.....	51877, 50858, 51982, 52345
Shaw	51376, 52187
Suddenlink.....	51376, 51877
SureWest	51481, 51998
Telus	52345
Thomson	51982
Time Warner.....	51376, 51877, 52187
Verizon.....	52378
VidEotron.....	51877
WideOpenWest.....	51877

Accessory / Accesorio / Accessoire

A.C.Ryan	52709
Access HD	52185
Airlink 101	52491
Alpha Digital	52185
AMTC	52185
Apex Digital.....	52478
Apple.....	52615
Artec.....	52490
Asus.....	52987
CASTi.....	52305
Centronics.....	52360
Channel Master.....	52365
Cisco	52826
Coby	52667
Coship	52487
D-Link	52186
Daewoo	52338
Daytek.....	52305
Digital Stream	52303
Digiwave.....	52360
Dish Network	52470
Echostar	52470
Epson	51563
Evolution	52479
Firebird Systems.....	52360
GE.....	52360, 52450
Goodmind	52348
Gridlink	52348
iNet Access.....	52185
Insignia	51415
LaCie.....	53345
Lasonic	52348
LG	51415, 53373
Magnavox.....	51563, 53339
Memorex	52486
MicroGEM	52489
Microsoft	52049
Netgear	53292, 53324
Patriot	53307

PCT	52365
Philco.....	51563
Popcorn Hour	52260
RCA.....	52325, 52454, 53335
Roku.....	52371, 53061
RTC	52360
Samsung	51967, 52592
Sansonic.....	52348
Scientific Atlanta.....	52826
Seagate	52698
Sony	52713
Sunkey	52695
Sylvania	51563
Tivax.....	52185
Venturer	52454
Western Digital	52558
Winegard	52454
Xbox.....	52049
Yamaha	52865
Zenith	51415
Zentech	52491
Zinwell	52488

IPTV

Amino	51481, 52482
AT&T.....	50858
Bell	51998
Cisco	50858, 52378, 52345
Entone.....	52302
KoolConnect	51481
Motorola.....	51376, 50858, 52378, 50476, 51998
MTS	51998
Sasktel.....	51998
Scientific Atlanta.....	50858, 52345
SureWest	51481, 51998
Telus	52345
Verizon.....	52378

Digital Media Receiver / Receptor De Medios Digitales / Récepteur multimédia numérique

A.C.Ryan	52709
Apple.....	52615
Asus.....	52987
D-Link.....	52186
LaCie.....	53345
LG	53373
Magnavox.....	53339
Netgear	53292, 53324
Patriot	53307
Popcorn Hour	52260
RCA.....	53335
Roku	52371, 53061
Seagate	52698

Sony	52713
Western Digital	52558
Yamaha	52865

DTA Converter / Convertidor DTA / Convertisseur NA

Access HD	52185
Airlink 101	52491
Alpha Digital	52185
AMTC	52185
Apex Digital.....	52478
Artec.....	52490
CASTi.....	52305
Centronics.....	52360
Channel Master.....	52365
Cisco	52826
Coby	52667
Coship	52487
Daewoo	52338
Daytek.....	52305
Digital Stream	52303
Digiwave.....	52360
Dish Network	52470
Echostar	52470
Evolution	52479
GE.....	52360, 52450
Goodmind	52360, 52450
Gridlink	52348
iNet Access.....	52185
Insignia	51415
Lasonic	52348
Magnavox.....	51563
Memorex	52486
MicroGEM	52489
PCT	52365
Philco.....	52345
RTC	52360
Samsung	52592
Sansonic.....	52348
Scientific Atlanta.....	52826
Sunkey	52695
Sylvania	51563
Tivax.....	52185
Venturer	52454
Winegard	52454
Zenith	51415
Zentech	52491
Zinwell	52488

©2012 VOXX Accessories Corporation

UEI 2012 2564 01

Trademark(s) ® Registered / Marca(s) Registrada(s) / Marque(s) decommerce déposée(s)®