

BLUEY



Instruction Manual

GAME TIME LAPTOP

 


BBC
STUDIOS

BLUEY (word mark and character logos) are trade marks of Ludo Studio Pty Limited and are used under licence. BLUEY logo © Ludo Studio Pty Limited 2018. Licensed by BBC Studios. BBC is a trade mark of the British Broadcasting Corporation and is used under licence. BBC logo © BBC 1996

INTRODUCTION

Thank you for purchasing the **VTech® Bluey Game Time Laptop**. The **VTech® Bluey Game Time Laptop** encourages role-play and is packed with 10 games to play with Bluey, Bingo and their family and friends.

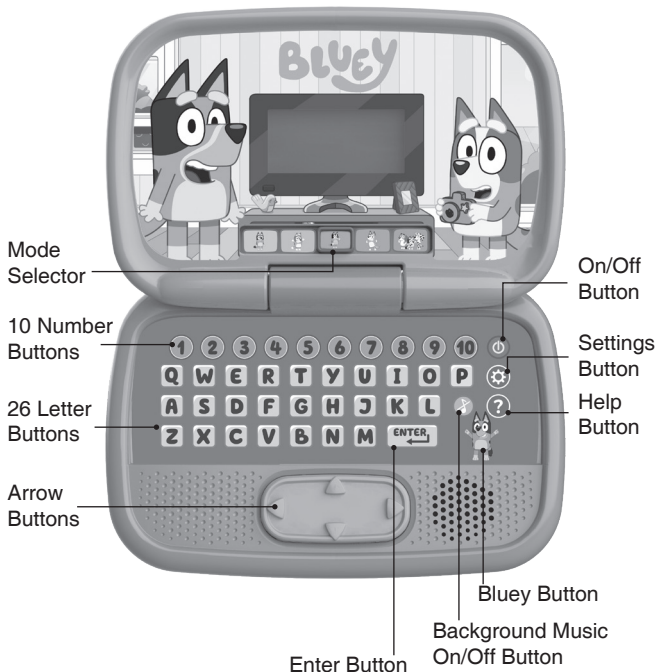

INCLUDED IN THE PACKAGE

- VTech® Bluey Game Time Laptop
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

 
ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE:

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks:

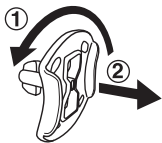


- ① Turn the packaging locks counterclockwise several times.
- ② Pull out and discard the packaging locks.

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (LR6/AM-3) batteries following the diagram inside the battery box.
(for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

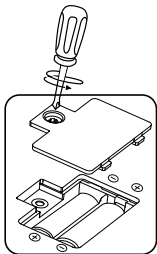

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation-prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. On/Off Button

Press the **On/Off Button** to turn the unit **On** and press it again to turn the unit **Off**.

2. Settings Button

Press the **Settings Button** to adjust the volume and screen contrast. Press the left or right **Arrow Button** to choose which item to adjust, then press the **Enter Button** to confirm.

3. Help Button

Press the **Help Button** to hear an instruction or a question repeated.

4. Mode Selector

Slide the **Mode Selector** to choose one of the five character modes. There are two fun games within each character mode.

5. Bluey Button

Press the **Bluey Button** to hear Bluey speak and see her on the screen.

6. Arrow Buttons

Press the left/right or up/down **Arrow Buttons** to make selections.

7. Enter Button

Press the **Enter Button** to confirm your choice.

8. Background Music On/Off Button

Press the **Background Music On/Off Button** to turn the background music off, press this button again to turn the background music on.

9. Letter Buttons

Press the **Letter Buttons** to learn letters or to answer letter related questions.



10. Number Buttons

Press the **Number Buttons** to learn numbers or to answer number-related questions.



11. Automatic Shut-Off

To preserve battery life, the **Bluey Game Time Laptop** will automatically turn **Off** after around 2 minutes without input. The unit can be turned **On** again by pressing the **On/Off Button**. The unit will also automatically turn **Off** when the batteries are very low. A warning will be displayed on the screen as a reminder to change the batteries.

ACTIVITIES

The **VTech® Bluey Game Time Laptop** offers a total of 10 fun games in 5 character modes.

Bluey Games

1. Rain

Press the left or right **Arrow Buttons** to pick the object that fits the space in the dam wall. Press the **Enter Button** to confirm.

2. Dance Mode

Watch Bluey dance! Press the **Number Buttons** to choose tunes and press the **Letter Buttons** to add fun sounds to the music.

Bingo Games

1. Grannies

Type the letters and numbers to help Rita avoid slipping on the cans of beans.

2. Fairies

Watch closely to find out where the fairy is. Press the left or right **Arrow Button** to choose and then press the **Enter Button** to confirm.

Dad Games

1. Hospital

Identify what is on Dad's x-ray. Press the left or right **Arrow Buttons** to select the right object and then press the **Enter Button** to confirm.

2. Fancy Restaurant

Press the left or right **Arrow Button** to help Bingo to get the food for the special dishes. Press the **Enter Button** to confirm.

Mum Games

1. Musical Statues

Press the **Arrow Buttons** to make Bluey dance. Stop pressing buttons when the music stops to help Bluey freeze.

2. Promises

Press the left or right **Arrow Buttons** to select the odd one out. Press the **Enter Button** to confirm.

Relatives & Friends Games

1. Muffin

Press the left or right **Arrow Buttons** to select the item that Muffin wants. Press the **Enter Button** to confirm.

2. Spy Game

Remember the password and type it by pressing the **Letter Buttons** and **Number Buttons**.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a new set of batteries.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the battery.
3. Let the unit stand for a few minutes, then replace the battery.
4. Turn the unit back On. The unit should now be ready to use again.
5. If the unit still does not work, insert a new battery.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5309
Product Name: Bluey Game Time Laptop
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

vtechkids.ca

**Read our complete warranty policy online at
vtechkids.com/warranty
*vtechkids.ca/warranty***



TM & © 2023 VTech Holdings Limited.
All rights reserved.
IM-530900-000
Version: 0