USER GUIDE





737 SERIES 27000MAH 140W PD POWER BANK

WITH SMART DIGITAL DISPLAY

KAPBANKR3PA


SAFETY & WARNINGS

- Read all instructions in this guide carefully before using this power bank.
- Ensure the ambient temperature during charging and discharging is between 0°C and 35°C.
- When used outside the recommended operating temperature, the power bank battery
 will last 18 months. When used inside the recommended operating temperature, the
 power bank battery will last 24 months. After 36 months, the power bank will need to
 be certified by a professional before continuing usage.
- Dispose of this power bank in accordance with your local environmental laws.
- Keep this power bank and all related accessories away from children.
- Keep this power bank away from inflammables and explosives.
- Only use the specified charger and approved accessories. Unauthorised chargers and accessories may damage the power bank.
- Ensure your device is compatible with this power bank before charging.
- Use the power bank properly according to the local laws, regulations and restrictions. In
 case of unauthorised situations, such as aircraft landing or near medical instruments,
 you should avoid charging and turn off your mobile phone or other electronic products
 immediately to avoid interference.
- The power bank may be damaged during transportation. If the packaging is damaged or there is a bad odour, stop use immediately and contact help. Kogan.com.
- Avoid overloading/short circuiting the power bank, as this may cause damage to the power bank.
- Avoid charging the power bank for prolonged periods of time. When the power bank
 has reached full charge, unplug the power cord to prevent overcharging.
- Do not throw, impact, rub, bend or press the power bank violently as doing so can perforate, crack, distort, or corrode the power bank.
- Do not disassemble the power bank. Doing so can cause short circuiting, battery leakage or explosion.
- Do not immerse the power bank in any kind of liquid, such as water, sea water or drinks.
- Store the power bank in a dry place, away from moist and corrosive materials.
- Do not put the power bank in high temperature environments such as near fire, or near flammable gas, steam, or dust. Doing so may cause battery explosion.
- Fully charge and discharge the power bank at least once every 6 months.
- The battery capacity of this power bank will be 100% for 300 cycles of charging and discharging. After 300 cycles, the battery capacity will reduce to 60%.

COMPONENTLIST

- Power bank
- USB charging cable
- User guide


OVERVIEW

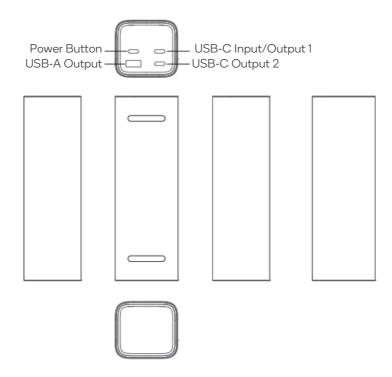

OPERATION


Charging the power bank

- Connect one end of the provided USB charging cable to a power adapter (not provided) and the other end to the USB-C Input/Output 1 port. Then, connect the power adapter to a power outlet.
- 2. The battery percentage of the power bank and 'IN' will illuminate on the digital display.
- 3. The digital display will illuminate 100% when the power bank is fully charged.

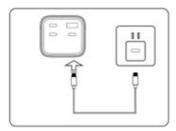

Charging a device

- Press the power button to turn on the power bank and connect the device you want to charge to the USB-A or USB-C output port.
- 'OUT' will illuminate on the display screen. The battery percentage of the power bank will illuminate on the digital display and will display 0% when the power bank is fully discharged. The digital display will turn off after 10 seconds.

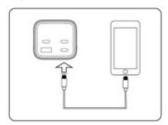

Note:

- Ensure the power bank is powered on when:
 - o Charging a device and the power bank simultaneously.
 - Charging a device from USB-C Output 2, or USB-A Output 1 when USB-C Input/Output 1 is not in use.

SPECIFICATIONS

Capacity 27000mAh @ 3.7V, 99.9Wh

USB-C1 Input 5V=3A, 9V=3A, 12V=3A, 15V=3A, 20V=3A

USB-C1 Output 5V=3A, 9V=3A, 12V=3A, 15V=3A, 20V=5A,

28V=5A

 USB-C2 Output
 5V=3A, 9V=2.22A, 12V=1.5A

 USB-A Output
 5V=3A, 9V=2A, 12V=1.5A

USB-C1+ (USB-C2 + USB-A)

Output

USB-C1 + USB-C2 Output 100W + 20W **USB-C1 + USB-A Output** 100W + 18W

USB-C2 + USB-A Output 15W Total Maximum Output 140W

NOTES

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

