

Hisense

2.0 Channel Soundbar Home Theater System

Model: HS1000



 **Dolby** Audio

 **Bluetooth**®

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

dts®



USER MANUAL



Before using the unit, please read this manual thoroughly and retain it for future reference.

Contents

Important Safety Instructions	3
1. What's in the Box	5
2. Product Diagram	6
2.1 Main Unit	6
2.2 Remote Control	7
3. Preparations	7
3.1 Prepare the Remote Control	7
3.2 Replace the Remote Control Battery	7
3.3 Placement and Mounting	8
3.4 Wall Mounting (if using option-B)	8
4. Connections	9
4.1 Use the HDMI ARC Socket	9
4.2 Use the OPTICAL Socket	10
4.3 Use the AUX Socket	10
4.4 Connect Power	10
5. Basic Operation	10
5.1 Standby/On	10
5.2 Auto-Standby / Auto-Wake	11
5.3 Select Modes	11
5.4 Adjust the Volume	11
5.5 Turn the Surround Sound ON/OFF	11
5.6 Select Equalizer (EQ) Mode	11
5.7 Adjust the Bass/Treble	11
5.8 Adjust the Brightness	11
5.9 Select Voice Mode	11
5.10 Select Night Mode	11
5.11 Notice On/Off	11
6. AUX/ OPTICAL/HDMI ARC Operation	12
7. USB Operation	12
8. Bluetooth Operation	12
9. Troubleshooting	13
10. Specifications	15

Important Safety Instructions

	CAUTION	
	RISK OF ELECTRIC SHOCK DO NOT OPEN	
	AVIS	
	RISQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIR	



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Safety

- 1 **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- 2 **Keep these instructions** – The safety and operating instructions should be retained for future reference.
- 3 **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- 4 **Follow all instructions** – All operating and usage instructions should be followed.
- 5 **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.
- 6 **Clean only with a dry cloth.**
- 7 **Do not block any ventilation openings.** Install in accordance with the manufacturer’s instructions.
- 8 Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or

the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12  Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug the apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15 ☐ This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 16 The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
- 17 Minimum distance around the apparatus for sufficient ventilation is 5cm.
- 18 The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- 19 No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 20 Batteries should be recycled or disposed of as per state and local guidelines.
- 21 The use of apparatus in moderate or tropical climates.

Caution:

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Warning

- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- Do not place this unit close to strong magnetic fields.
- Do not place this unit on the amplifier or receiver.
- If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The rating label is pasted on the bottom or back of the equipment.

**Battery usage CAUTION**

To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus:

- Install all batteries correctly, + and - as marked on the apparatus.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Remove batteries when the unit is not used for a long time.

 


Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.




We hereby declares that this product is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU and UK Radio Equipment Regulations 2017.


1. What's in the Box

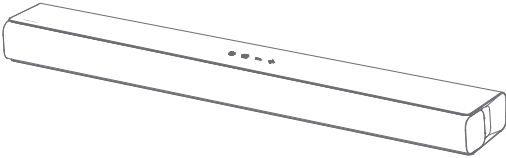


Main unit

 

Remote control
AAA batteries x 2 **

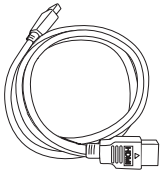 


HDMI cable

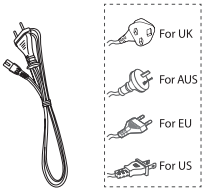 

AC Power cord *



 Brackets (x2) /Bracket Screw (x2)
/ Wall Anchors (x2)




Warranty card/Quick start manual /
Wall mount guide

- * Power cord quantity and plug type vary by regions. ** The accessories may be different from the list above due to different models, countries/ regions, please refer to the actual accessory bag.
- Images, illustrations and drawings shown on this User Manual are for reference only, actual product may vary in appearance.

2. Product Diagram

 2.1 Main Unit

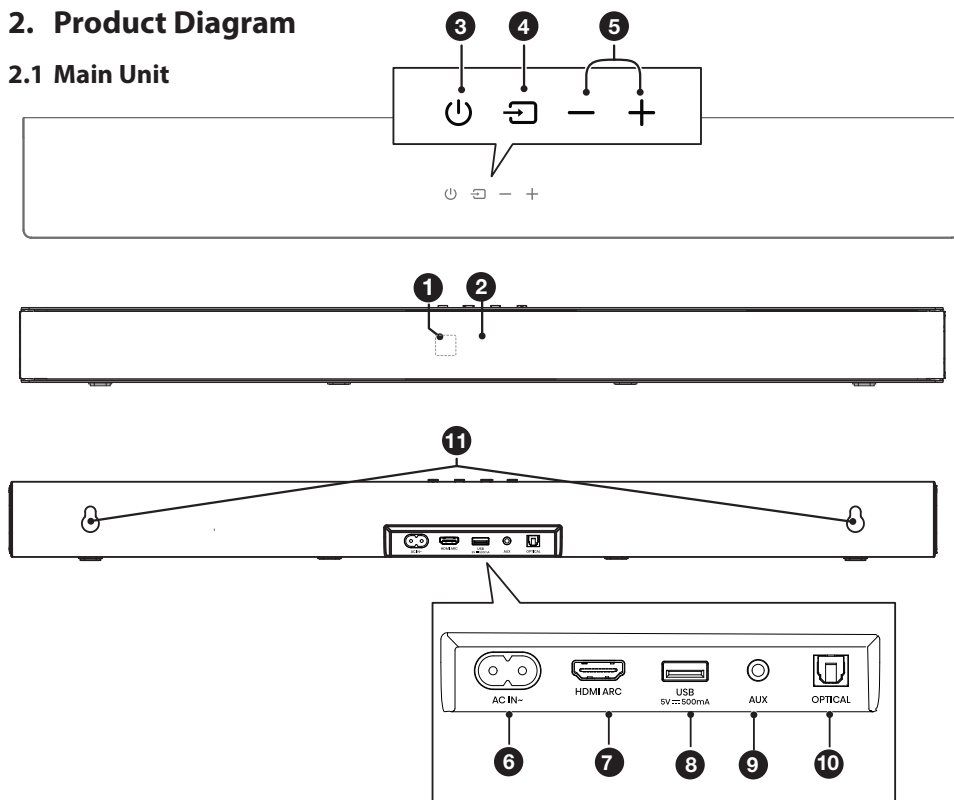

- ① **Remote Control Sensor**
Receive signal from the remote control.

② **LED Indicators**

~ Lamp	Mode
● Red	Standby
● White	HDMI ARC
● Orange	OPTICAL
● Blue	BT (Bluetooth)
● Yellow	USB
● Green	AUX

- ③ **⏻ (ON/OFF) Button**
Switch the unit between On and Standby mode.

- ④ **➡ (SOURCE) Button**
Select the play function.

- ⑤ **+ / - (Volume) Buttons**
Increase/decrease the volume level.

- ⑥ **AC IN ~ Socket**
Connect to the power supply.

- ⑦ **HDMI ARC Socket**
Connect to a TV via HDMI cable.

- ⑧ **USB Socket**
Insert the USB device to play music.

 
- ⑨ **AUX Socket**
Connect to an external audio device.

- ⑩ **OPTICAL Socket**
Connect to an optical audio output on the TV.

- ⑪ **Wall Mount**
Install the wall mounting screws into the wall mount of the unit.

2.2 Remote Control

- ① Switch the unit between On and Standby mode.
- ② (SOURCE) Select the play function.
- ③ **NIGHT** Adjust Night On/Off
- ④ (MUTE) Mute or resume the sound.
- ⑤ **VOICE** Adjust Voice On/Off
- ⑥ Skip to previous/next track in BT / USB mode.
- ⑦ Play/pause/resume playback in BT / USB mode.
- ⑧ **VOL+ /VOL-** Increase/decrease the volume level.
- ⑨ **SURR** Adjust the Surround On/Off
- ⑩ (BT) Select the Bluetooth mode. Press and hold the (BT) button to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.
- ⑪ **EQ** Select a preset EQ mode
- ⑫ **BASS + /-** Adjust bass level.

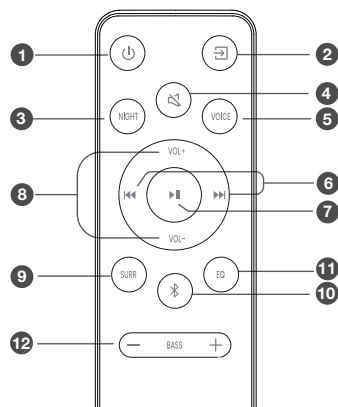

3. Preparations

 
3.1 Prepare the Remote Control

The provided Remote Control allows the unit to be operated from a distance.

- Even if the Remote Control is operated within the effective range 19.7 feet (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

3.2 Replace the Remote Control Battery

- 1 Press and slide the back cover to open the battery compartment of the remote control.
- 2 Insert two **AAA** size batteries. Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.
- 3 Close the battery compartment cover.

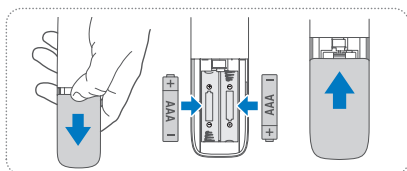

Precautions Concerning Batteries

- Be sure to insert the batteries with correct positive “+” and negative “-” polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.
- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- Do not use any batteries other than those specified.
- Do not mix new batteries with old ones.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

3.3 Placement and Mounting

Placement

- A If your TV is placed on a table, you can place the unit on the table directly in front of the TV stand, centered with the TV screen.
- B If your TV is attached to a wall, you can mount the unit on the wall directly below the TV screen.



3.4 Wall Mounting (if using option-B)

 
Note:

- Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the unit and wall brackets.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Keep this instruction manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

WARNING

- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Suggested wall mounting height: ≤ 1.5 meters.

1. Drill 2 parallel holes ($\varnothing$ 5.5-6 mm each according to wall type) in the wall. The distance between the holes should be 580 mm/22.85".
2. Firmly fix 1 dowel into each hole in the wall if necessary. Tighten the wall mount brackets on the wall with screws and screwdriver (included). Make sure that they are securely installed.
3. Install the wall mounting screws into the back of the unit.
4. Lift the unit onto the wall mount brackets and slot into place.

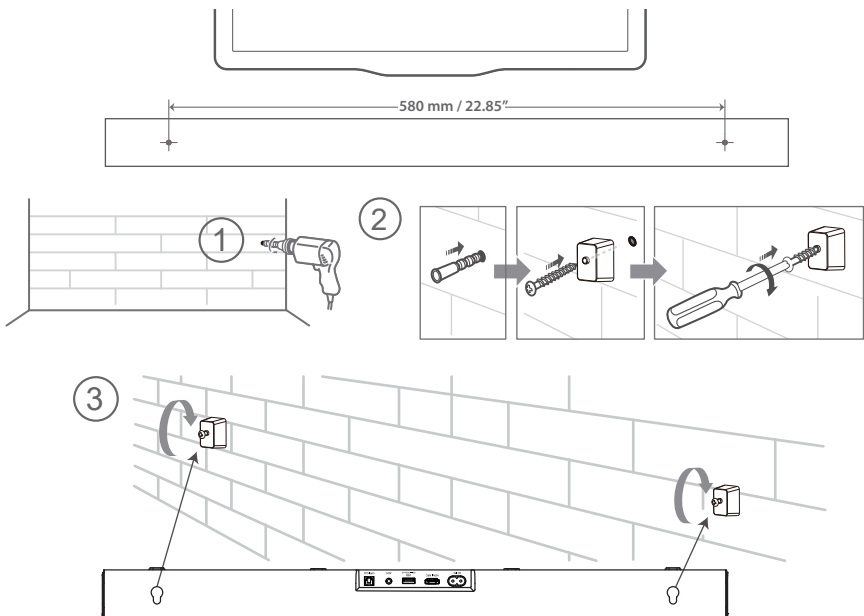


4. Connections

4.1 Use the HDMI ARC Socket

The ARC (Audio Return Channel) function allows you to send audio from your ARC-compliant TV to your unit through a single HDMI connection. To enjoy the ARC function, please ensure your TV is both HDMI-CEC and ARC compliant and set up accordingly. When correctly set up, you can use your TV remote control to adjust the volume output (VOL + /- and Mute) of the unit.

 - Connect the HDMI cable from unit's **HDMI ARC** socket to the HDMI (ARC) socket on your ARC compliant TV. Then press the remote control to select **HDMI ARC**.

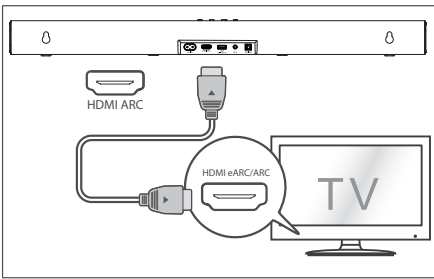

Tips:

- Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, please refer to the owner's manual.
- Only HDMI 1.4 or higher version cable can support the ARC function.

Use the Roku TV

 
- If you have a Roku TV™, setup is easy. Just use the included cable to connect your unit to the HDMI ARC port on your TV and follow the on-screen instructions.



- ✓ Simple setup
- ✓ One remote
- ✓ Quick settings


Use the Hisense EzPlay Function

For Hisense EzPlay, when the unit connects with a Hisense TV via HDMI ARC, there will be a Soundbar Setting menu on the TV, and you can control this menu via your TV remote to control most of the Soundbar features.

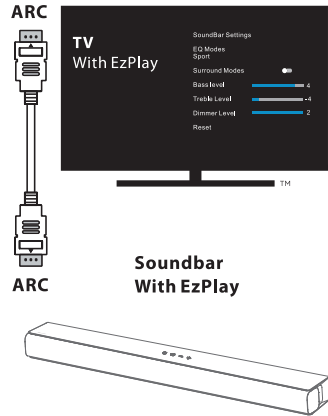

TV menu example (different models may have different menus) :

 Setting--sound--Soundbar Setting.

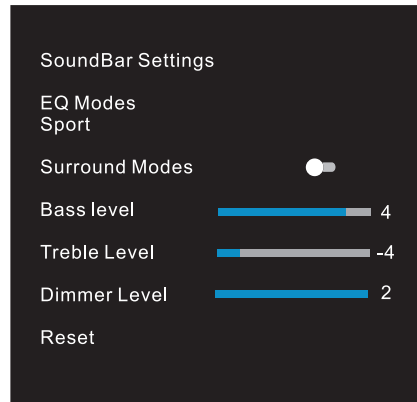


Note:

- This function is available only when both the unit and TV support Hisense Ezplay.
- This function requires the unit and TV connected via HDMI ARC, and the CEC of the TV must be turned ON.
- If everytime setting right, for the first time connect, there would be a tip on the TV screen to guide you find the Soundbar setting menu.


4.2 Use the OPTICAL Socket

 - Connect an OPTICAL cable to the TV's OPTICAL OUT socket and the **OPTICAL** socket on the unit.

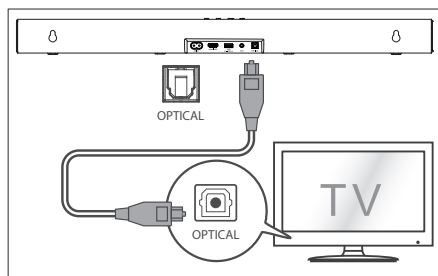

4.3 Use the AUX Socket

 
- Use a 3.5mm to 3.5mm audio cable to connect the TV's or external audio device headphone socket to the **AUX** socket on the unit.
- Use a RCA to 3.5mm audio cable to connect the TV's audio output sockets to the **AUX** socket on the unit.

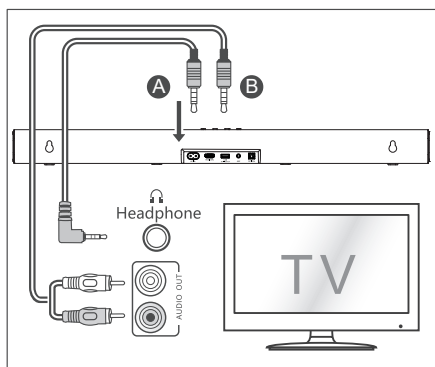

4.4 Connect Power

Risk of product damage!

 - Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Before connecting the AC power cord, ensure you have completed all other connections.
- Connect the mains cable to the **ACIN~** socket of the unit and then into a mains socket.

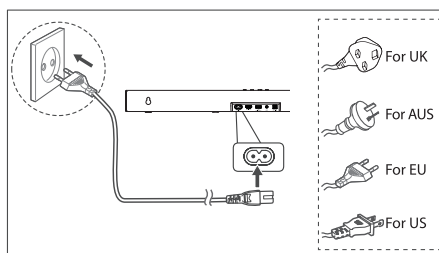

* Power cord quantity and plug vary by regions.

5. Basic Operation

5.1 Standby/On

When you first connect the main unit to the mains socket, the main unit will be in Standby mode.

- Press the  button on the unit or on the remote control to switch the unit ON.
- Press the  button again to switch the unit back to STANDBY mode.
- Disconnect the mains plug from the mains socket if you want to switch the unit OFF completely.

5.2 Auto-Standby / Auto-Wake

[Auto-Standby] The unit automatically turns to Standby mode after about 15 minutes if the TV or the external device is disconnected (or USB, BT function bit playback pause), or switched off.

[Auto-Wake] If a TV or an external device is connected (AUX / OPTICAL / HDMI ARC socket), the unit will switch on automatically when the TV or the external device is switched on.

Auto-standby On/Off

Switch the unit on the optical mode, double click the ◀◀ (x2) and ▶▶ (x2) buttons on the remote control to activate and deactivate the auto-standby:

Auto Standby	
On	Your unit has been programmed to enter Standby mode automatically when no audio is detected for 15 minutes. LED State: ● Yellow blink quick for 3 times
Off	You can turn off the Auto Standby to keep your unit always working. LED State: ● Yellow blink slowly for 3 times

Activate and Deactivate the Auto-Wake:

Turn on the unit, press the[⏻] [+] button at the same time on the unit, to activate and deactivate the auto-wake:

Auto-Wake	
On	the unit will wake up automatically when audio input is detected. LED State: ● ● ● ● White>White>Green>Green
Off	the unit does not wake up automatically. LED State: ● ● ● ● White>White>Red>Red

5.3 Select Modes

- Press the [SOURCE] button repeatedly on the unit or on the remote control to select the desired mode.
- The indicator light on the front of the main unit will show which mode is currently in use.

⬆️ Lamp	Mode
● Red	Standby
● White	HDMI ARC
● Orange	OPTICAL
● Blue	BT (Bluetooth)
● Yellow	USB
● Green	AUX

5.4 Adjust the Volume

- Press the VOL+ / VOL- buttons on the unit or on the remote control to adjust the volume.
- If you wish to turn the sound off, press the [MUTE] button on the remote control. Press the [MUTE] button again or press the VOL + button to resume normal listening.

5.5 Turn the Surround Sound On/Off

- Press the SURR button on the remote control to turn on the surround sound. Press this button again to turn off the surround sound.

5.6 Select Equalizer (EQ) Mode

- While playing, press the EQ button on the remote control to select desired preset equalizers: **music, movie, game,sport.**

5.7 Adjust the Bass

- Press the BASS + / — buttons on the remote control to adjust bass level.

5.8 Adjust the Brightness

- Press the NIGHT button on the remote control for 3 seconds to adjust middle brightness or lower brightness.
- At middle brightness, the indicator light remains constantly on.
- At lower brightness, the indicator will temporarily light on at low brightness, and then turn off after 3 seconds.

5.9 Select Voice Mode

- You can make dialogs clearer by setting the voice mode to on.
- Press VOICE button on the remote control to set the function to on or off.

5.10 Select Night Mode

- Night Mode is designed to optimize audio performance for late-night use or when a lower volume is preferred. It ensures a well-balanced sound output at low volume with minimum loss of fidelity and clarity of dialogue.
- Press NIGHT on the remote control to set the function to on or off.

5.11 Notice On/Off

- Press and hold the Power [⏻] button and the VOL+ button on the unit simultaneously for 3 seconds to turn on or off notice.

Status	⬆️ LED State
Notice OFF	● ● ● ● ● ● (Solidly red and white LEDs flash 3 times)
Notice ON	● ● ● ● ● ● (Solidly green and white LEDs flash 3 times)

MODE	DEFAULT
SOURCE	ARC
Volume	30
Surround	ON
Dimmer	MAX
Bass	0
Treble	0
EQ	Movie
Auto Wake	OFF
Auto Standby	ON (Except the United States, Canada)
Notice	ON

 
6. AUX/ OPTICAL/ HDMI ARC Operation

- 1 Ensure that the unit is connected to the TV or audio device.
- 2 Press the  button repeatedly on the unit or on the remote control to select **HDMI ARC, Optical, Aux mode** mode.
- 3 Operate your audio device directly for playback features.
- 4 Press the **VOL + / -** button to adjust the volume to your desired level.

Tip: The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby Digital Plus** (Refer to the user manual of the input source device for its audio setting details) with HDMI ARC / OPTICAL/ COAXIAL input.

7. USB Operation

- 1 Insert the USB device.

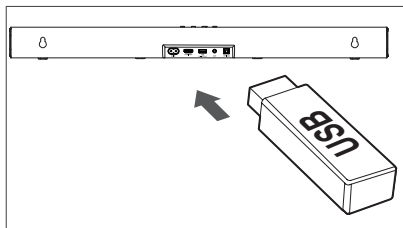

- 2 Press the  button repeatedly on the unit or on the remote control to select **USB** mode.

- 3 During playback:

 **II** Start, pause or resume play

 **II** Skip to the previous or next track

Tips:

- The unit can support USB devices with up to 32 GB of memory.
- This unit can play WAV / WMA / MP3 / FLAC.
- This product may not be compatible with certain types of USB storage devices.
- If you use a USB extension cable, USB hub, or USB Multifunctional card reader, the USB storage device may not be recognized.
- Do not remove the USB storage device while reading files.

8. Bluetooth Operation

Through Bluetooth, connect the unit with your Bluetooth device (such as an iPad, iPhone, iPod touch, Android phone, or laptop), and then you can listen to the audio files stored on the device through your unit speakers.

First time pairing

- 1 Press the  (SOURCE) button on the unit or the  button on the remote control to select **Bluetooth** mode. The Blue indicator will flash slowly and the white running horse lamp rolling.
 - 2 Activate your Bluetooth device and select the search mode.
 - 3 Select "**Hisense HS1000**" in the pairing list. After audio prompt, the system is successfully connected and Blue indicator will light up solidly.
- If you want to connect your unit with another Bluetooth device, press and hold the  button on the remote control to disconnect the currently connected Bluetooth device. Follow step 2-3 to pair your Bluetooth device.

To disconnect the Bluetooth function, you can :

- Switch to another function on the unit.
- Disable the function from your Bluetooth device.
- Press and hold the  button, the Bluetooth device will be disconnected from the unit.

Listen to music from Bluetooth Device

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
 - If the device also supports Audio Video Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device.
1. Pair your device with the player.
 2. Play music via your device (if it supports A2DP).
 3. Use supplied remote control to control play (if it supports AVRCP).

	Start, pause or resume play
	Skip to the previous or next track

Tips:

- The operational range between the unit and the device is approximately 8 metres.
- Before connecting a Bluetooth® device to the unit, ensure you know the device's capabilities.
- Compatibility with all Bluetooth® devices is not guaranteed.
- Any obstacle between the device and the unit can reduce operational range.
- Keep this player away from other electronic devices that may cause interference.
- The player will also be disconnected when your device is moved beyond the operational range.

9. Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service.

No power

- Ensure that the AC cord of the apparatus is properly connected .
- Ensure that there is power at the AC outlet.
- Press standby button to turn the unit on.

Remote control does not work

- Before you press any playback control button, first select the correct source.

- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/-) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

No sound

- Make sure that the unit is not muted. Press  or VOL+/- button to resume normal listening.
- Press  button on the unit or on the remote control to switch the unit to standby mode. Then press the  button again to switch the unit on.
- Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital Plus mode while using digital (e.g. HDMI, OPTICAL) connection.
- The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. device is not muted.

Mobile Device Connection

BLUETOOTH connection cannot be completed.

- Make sure that the BLUETOOTH indicator on the unit is lit.
- Make sure the BLUETOOTH device to be connected is turned on and the BLUETOOTH function is enabled.
- Bring the BLUETOOTH device close to the unit.
- Pair the unit and the BLUETOOTH device again. You may need to cancel the pairing with this unit using your BLUETOOTH device first.
- If the BLUETOOTH function is set to off, set it to on (page 12).

Pairing cannot be achieved.

- Bring the BLUETOOTH device close to the unit.
- Make sure the unit is not receiving interference from a wireless LAN device, other 2.4 GHz wireless devices, or a microwave oven. If a device that generates electromagnetic radiation is nearby, move the device away from the unit.
- Pairing may not be possible if other BLUETOOTH devices are present around the unit. In this case, turn off the other BLUETOOTH devices.

Sound of the connected BLUETOOTH mobile device is not output from the unit.

- Make sure that the BLUETOOTH indicator on the unit is lit.
- Bring the BLUETOOTH device close to the unit.
- If a device that generates electromagnetic radiation, such as a wireless LAN device, other BLUETOOTH devices, or a microwave oven is nearby, move the device away from the unit.
- Move the USB 3.0 device and its cable away from the unit.
- Remove any obstacle between the unit and the BLUETOOTH device or move the unit away from the obstacle.
- Reposition the connected BLUETOOTH device.
- Switch the wireless LAN frequency of any nearby wireless LAN router or PC to 5 GHz range.
- Increase the volume on the connected BLUETOOTH device.

The unit does not connect via Bluetooth.

- When connecting a new device, switch to Bluetooth Pairing for connection.
(Press the  button on the remote control or press the ( Source) button on the unit.)
- If the unit is connected to another device, press and hold the  button to disconnect that device first to switch the device.
- Reconnect it after removing the Bluetooth speaker list on the device to connect.
- Remove and reconnect the power plug, then try again.
- Reset the product and try again. (See page 11.)

The Soundbar turns off

- When the unit's external input signal level is too low, the unit will be turned off automatically in 15 minutes. Please increase the volume level of your external device.

10.Specifications

Brand	Hisense
Model	HS1000

The unit

Power Supply	100-240V~ 50/60Hz
Power Consumption	< 0.5 W (Standby)
USB	5V --- 500mA Hi-Speed USB (2.0) / FAT32 / FAT16 32G (max) , WAV / WMA / MP3 / FLAC.
Dimension	W 702.60 × D 100 × H 61 mm / W 27.66 × D 3.94 × H 2.40 inches
Net weight	1.92 kg
Audio input sensitivity	700mV
Frequency Response	40Hz - 20KHz
Operating Temperature	0°C - 40°C

Wireless Specification (EU)

Bluetooth version / profiles	V 5.3 (A2DP, AVRCP)
Bluetooth frequency range	2400 MHz ~ 2483.5 MHz
Bluetooth Max. transmitting power	≤ 10 dBm

Amplifier (max audio power)

Total	120 W
The unit	120 W

Remote Control

Distance/Angle	19.7 feet (6m) / 30°
Battery type	AAA (1.5V x 2)

- Design and specifications are subject to change without notice.

Trademarks



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Hisense is under license. Other trademarks and trade names are those of their respective owners.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.



FOR DTS PATENTS, SEE [HTTP://XPERI.COM/DTS-PATENTS/](http://XPERI.COM/DTS-PATENTS/). MANUFACTURED UNDER LICENSE FROM DTS, INC. AND ITS AFFILIATES. DTS, THE DTS LOGO, DIGITAL SURROUND, VIRTUAL:X, AND THE DTS VIRTUAL:X LOGO ARE REGISTERED TRADEMARKS OR TRADEMARKS OF DTS, INC. AND ITS AFFILIATES IN THE UNITED STATES AND/OR OTHER COUNTRIES. © DTS, INC. AND ITS AFFILIATES. ALL RIGHTS RESERVED.



- EN** Roku, the Roku logo, Roku TV, Roku TV Ready, and the Roku TV Ready logo are trademarks and/or registered trademarks of Roku, Inc. This product is Roku TV Ready-supported in the United States, Canada, United Kingdom and Mexico. Countries are subject to change. For the most current list of countries in which this product is Roku TV Ready-supported, please email rokutvready@roku.com.
- FR** Roku, le logo Roku, Roku TV, Roku TV Ready et le logo Roku TV Ready sont des marques de commerce et/ou des marques déposées de Roku Inc. Ce produit est certifié Roku TV Ready au/en états-Unis, Canada, Royaume-Uni, et Mexique. La liste de pays peut varier. Pour obtenir la liste la plus récente des pays dans lesquels ce produit est pris en charge par Roku TV Ready, veuillez envoyer un courriel à rokutvready@roku.com.
- ES** Roku, el logotipo de Roku, Roku TV, Roku TV Ready y el logotipo de Roku TV Ready son marcas comerciales o marcas comerciales registradas de Roku, Inc. Este producto es compatible con Roku TV Ready en Estados Unidos, Canadá, Reino Unido, y México. Los países están sujetos a cambios. Para obtener la lista más actualizada de países en los que este producto es compatible con Roku TV, envía un correo electrónico a rokutvready@roku.com.





WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.



FR

EN

FCC INFORMATION (for US customers)

NOTE:

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio / TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

IC Notice: CAN ICES(B)/NMB(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Warning:

- This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

Règlement de la FCC (pour les clients américains)

REMARQUE :

- Ce dispositif a été testé et déclaré conforme aux limites d'un dispositif numérique de classe B, conformément à la partie 15 des règles de la FCC.
Ces limites ont pour but d'assurer une protection raisonnable contre le brouillage nuisible dans une installation résidentielle. Cet équipement produit, utilise et peut émettre de l'énergie en radio fréquence et, s'il n'est pas installé et utilisé conformément aux directives, il peut causer un brouillage nuisible dans les communications radio.
- Cependant, il n'est pas garanti que des interférences ne se produiront pas dans une installation particulière. Si cet appareil provoque des interférences nuisibles à la réception radio ou de télévision, ce qui peut être déterminé en mettant l'appareil hors tension, l'utilisateur est encouragé à essayer de corriger l'interférence par une ou plusieurs des mesures suivantes :
 - Réorienter ou déplacer l'antenne de réception.
 - Augmenter la distance entre l'appareil et le récepteur.
 - Brancher l'appareil à une prise sur un circuit différent de celui sur lequel le récepteur est branché.
 - Consulter le revendeur ou un technicien radio/TV expérimenté.

Cet appareil est conforme à la partie 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) ce dispositif ne peut pas causer d'interférences nuisibles et
 - (2) cet appareil doit accepter toute interférence reçue, y compris les interférences qui peuvent causer un mauvais fonctionnement.
- Des câbles blindés doivent être utilisés avec cet appareil pour assurer la conformité avec les limites de la classe B de la FCC. fonctionnement de l'appareil.

Avis d'Industrie Canada: CAN ICES(B)/NMB(B)

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Avertissement :

- Pour rester en conformité avec les consignes d'exposition aux RF, placez le produit à au moins 20 cm des personnes proches.
- Les changements ou modifications de cet appareil non expressément approuvées par la partie responsable de la conformité pourraient annuler l'autorisation de l'utilisateur à utiliser l'équipement.

Hisense

HS1000



08465

		料号	12.005.0004.0XXXX		尺寸(mm)	展开尺寸: 290x210, 成型尺寸: 145x210		环保要求	说明书类说明: 1、公差 (mm): 0<a≤50 (+0.3/-0.2), 50<a≤150 (+1/-0.5), >150 (+1.5/-1。有特殊要求的, 按标示公差执行。 2、要求图文清晰可辨,内容完整,折叠正确,无重影,墨尿、杂点、脏点、异物、粉点、套印不准。 3、尺寸按展开尺寸及成型外尺寸测量计算。
项目名称	HS1000		产品型号	HS1000	材质	80g书写纸		■RoHS2.0、Reach	
日期	2025/02/26		部件名称	说明书	页码P数	24/p		□包装指令94/62/EC	
包装工程师	李小明		平面工程师	李 宏	颜色	单色印刷		□大豆油墨印刷	
设计版本	变更提出人	变更原因		是否有可参考	表面处理	■无 □光油 □哑油 □水性光油 □水性哑油 □UV油 □光胶 □哑膜 □防刮花哑膜		□无氯漂白工艺	
A0	客户	更改内容		□刀模 ■颜色	工艺	■无 □烫金 □烫银 □击凸 □击凹 □压网 □局部UV □其它		□粘合剂为非石油基	
				□无	条码要求	□无条码 ■有条码 (清晰易扫描)		□油墨中禁止使用矿物油 (法国)	
				■有: 12.005.0004.0/0079	装订方式	□风琴折 □包心折 ■骑马钉 □胶装 □线装 □其它		□TPCH (美国)	

版本: A/4