



PREMIUM 2400W 11 FIN OIL HEATER

KAOLHTB24A, KAPOILHT24A

SAFETY & WARNINGS

Ensure to read all instructions in this user guide prior to assembly and first use. Retain this user guide for future reference.

- This heater is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the heater by a person responsible for their safety.
- Adult supervision is required at all times if children are around and to ensure they do not play with the heater.
- Do not leave the heater unattended while it is in use.
- This heater is compatible with voltages between 220–240V and with frequencies of 50Hz and 60 Hz. Ensure the power socket used matches this.
- This heater is intended for indoor use only. Do not use this heater outdoors.
- Do not insert or allow foreign objects to enter the heater as this may cause an electric shock, fire, or damage.
- Do not cover the heater or block any openings to prevent overheating.
- Ensure there is at least a 30cm clearance of the heater from any objects or walls.
- Do not place the heater on carpets.
- Ensure the power cord is fully visible. Route the cord away from high traffic areas to avoid it being tripped over.
- Do not immerse the heater in water or any other liquids or allow liquids to drip into the interior of the heater as this could create an electric shock.
- Do not use this heater in the immediate vicinity of wet areas (for example, baths, showers, swimming pools).
- Do not use this heater near fuel, paint, or any other flammable liquids.
- Ensure the heater is not placed directly below the power socket.
- Ensure the heater is off before connecting to the power socket.
- When unplugging, do not forcibly pull on the power cord. Carefully pull the power cord directly from the power socket.
- Keep the heater and power cord away from other sources of heat, sharp objects, and other items that may result in damage.
- Do not use extension cords with this heater as it may cause overheating and is a fire risk.
- Do not operate the heater with wet hands.
- The heater's surface will become hot when operating. Do not directly touch the heater.
- If the heater or power cord is damaged, stop use immediately and contact **help.Kogan.com** for assistance.
- Do not attempt to disassemble or repair the heater yourself.
- Ensure the power socket is switched off and the heater is unplugged when it is not in use, being cleaned, or stored.

OVERVIEW



COMPONENTS LIST

- Heater body (x1)
- Castors (x4)
- Brackets (x2)
- U-bolts (x2)
- User guide (x1)

BEFORE FIRST USE

Ensure all components are included within the packaging. If any components are missing, contact [help.Kogan.com](https://help.kogan.com) for assistance.



If the power cord or plug is cracked or broken, do not use it and contact [help.Kogan.com](https://help.kogan.com) for assistance.

ASSEMBLY


Before using the heater, the castors must be assembled and attached.

WARNING: Do not use the heater without the castors attached.



1. Place the heater upside down on a clean, flat, dry surface.
2. Unscrew the nuts from the castors then insert two castors into the outer holes on each bracket.
3. Twist and remove the wing nuts from the U-bolts then insert the hooked end of the U-bolts into one of the inner holes of the brackets.

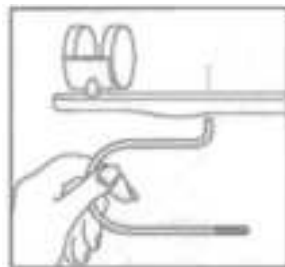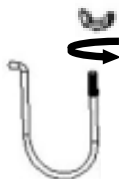

- 4.** Position and slide the brackets in between the end fins of the heater body. The U-bolts should hook under the circular joints connecting the fins.

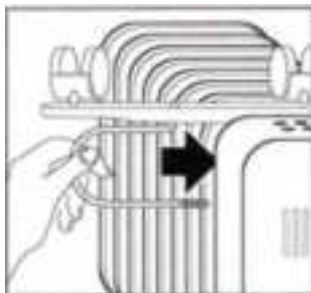

- 5.** Rotate and insert the other end of the U-bolts through the remaining inner hole on the brackets. Ensuring the castors are straight, secure the end with the wing nuts.

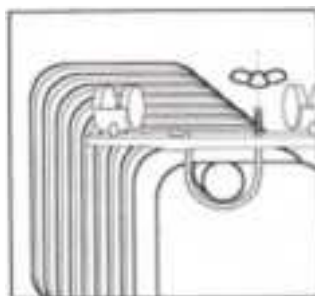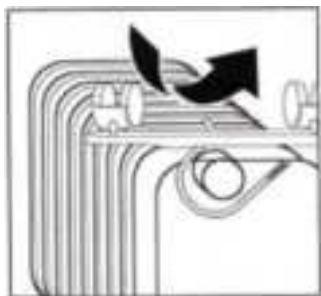

- 6.** Turn the heater into the upright position and wait for 15–30 minutes for the oil inside to settle. After this period, the heater will be ready for use.

OPERATION

IMPORTANT: Before first use, ensure the heater has sat upright for 15–30 minutes to allow the oil inside to settle. Doing so will ensure normal operation.

Placement

Ensure there is at least a 30cm clearance of the heater from any objects or walls.

Powering on

1. Fully uncoil the power cord from the storage ring.
2. Plug the power cord into a power socket and turn on the socket. The heater will turn on and the power indicator will illuminate.

Notes:

- The power indicator will always be illuminated unless the heater is unplugged or has fallen over.
- On repeated use, ensure metal does not become attached onto any part of the power cord before plugging it into the power socket.

Thermostat

Turn the thermostat between the MIN and MAX markers to adjust the temperature of heat being emitted by the heater.

The closer it is turned towards the MAX marker, the hotter the temperature. If the room becomes too hot, turn the thermostat towards the MIN marker. The heater will then automatically enter a cycle of turning on/off to regulate the temperature.

Note:

It is suggested to set the thermostat to MAX first before turning towards the MIN marker as required.

Heat settings

This heater features four heat settings. Turn the heat setting dial to the desired setting. Higher settings will lead the heater to emit more heat, heating rooms at a faster rate.

Symbol	Heat setting
0	Off
I	Low heat
II	Medium heat
III	High heat

Powering off

Turn the heat setting dial back to ‘0’ and turn off the power at the socket.

CLEANING & CARE

Ensure the heat setting dial is set to '0', and that the heater is switched off, unplugged, and completely cooled before cleaning or storing.

Cleaning

Wipe the exterior with a clean dry cloth.

Note:

Do not clean the heater with water or any other liquids.

Storage

Wrap the power cord around the storage ring and store the heater in a cool dry place, away from children and metal objects.

Notes:

- Do not place heavy objects on top of the heater as this may result in damage.
- Do not allow the power cord to come into contact with sharp objects and do not allow it to be pressed down.

NOTES

[illegible]



Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com