



- 1** Unfold the stem and push it until you hear a click. Then unfold the kickstand to support the scooter.



- 2** Connect the power cable in the correct way, slide the handlebar onto the stem.



- 3** Use the Allen wrench to install 6 screws, make sure it's tightened.



- 4** Ensure your scooter powers on and off.

# hiboy

Any question, please contact: [support@hiboy.com](mailto:support@hiboy.com)

## Power Button

When the scooter is off, press the button to turn on the scooter;  
When the scooter is on, press and hold for 3 seconds to turn off the scooter.

## Battery Indicator

The power level is indicated by five power lights on the display.

## Light

When the scooter is on, press the button to turn on or off all the lights (the front light, side LED lights and rear light).

## Mode

Press twice to switch the speed mode, Red S indicates Sport mode (max speed 19 mph), and Green S indicates Drive mode (max speed 13 mph).

## Cruise Control

Quick press the power button 3 times to turn on (you will hear “Bi Bi”) or turn off (you will hear “Bi”) the cruise control function.

For more functions, please visit Hiboy App, thanks.

Download “Hiboy S2” from “App Store”(iPhone) or “Google Play” (Android).

## Notice

If the scooter is expected to be left idle for more than 30 days, please fully charge the battery and place it in a dry and cool place. Keep in mind to recharge it every 60 days to protect the battery from potential damage which is beyond limited warranty.

Please always keep the original box for any future possible after-sales shipment, otherwise the extra shipping cost will be undertaken by consumers if an oversize box is used for after-sales shipment.



Hiboy S2 App



Any question, please contact: [support@hiboy.com](mailto:support@hiboy.com)