


T-7700SS

Scissor Shear



OILING INSTRUCTIONS: OIL AFTER EACH USE WITH 1/2 TEASPOON OF AIR TOOL OIL THROUGH THE AIR INLET. RUN FOR ONE SECOND TO COAT ALL INTERNAL PARTS.

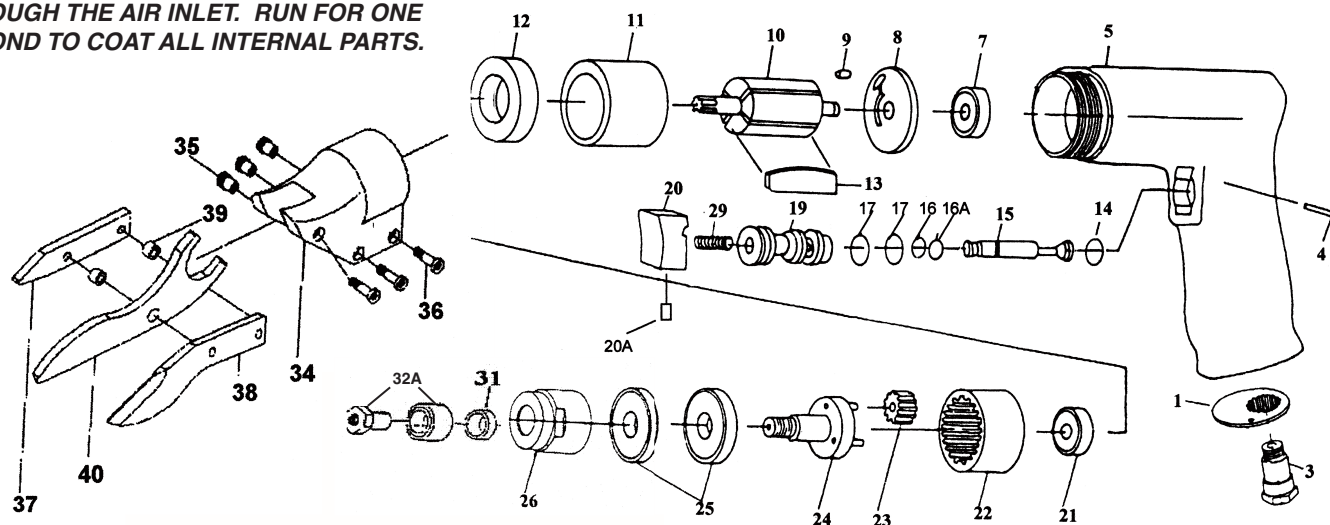

USE 90 PSI MAXIMUM

Ref #	Part #	Description	Qty.	Ref #	Part #	Description	Qty.
1	770001N	End Cap	1	21	770021N	Bearing	1
3	770003N	Air Inlet	1	22	770022N	Ring Gear	1
4	770004N	Pin	1	23	770023N	Planet Gear	3
5	770005N	Housing	1	24	770024N	Gear Carrier	1
7	770007N	Bearing	1	25	770025N	Bearing	2
8	770008N	End Plate	1	26	770026N	Gear Housing	1
9	770009N	Pin	1	29	770029N	Spring	1
10	770010N	Rotor	1	31	770031N	Spacer	1
11	770011N	Cylinder	1	32A	770032NA	Bearing & Nut Assem.	1
12	770012N	End Plate	1	34	770034N	Shear Housing	1
13	770013N	Rotor Blade (4 per set)	1 set	35	770035N	Nut	3
14	770014N	O-Ring	1	36	770036N	Screw	3
15	770015N	Valve Stem	1	37	7700SS37N	Right Blade	1
16	770016N	O-Ring	1	38	7700SS38N	Left Blade	1
16A	770016AN	O-Ring	1	39	7700SS39N	Spacer	2
17	770017N	O-Ring	2	40	7700SS40N	Center Blade	1
19	770019N	Valve Body	1				
20	770020N	Trigger	1				
20A	770020AN	Screw	1				

505 N. Railroad Ave. 33435
P.O. Box 1117 33425
Boynton Beach, Florida

SEE OUR CATALOG
at
www.taylorpneumatic.com

12/15TPTC /all rights reserved /COPYRIGHT 2015 / final

Ph. (561) 732-1111
Fax (561) 731-4412
Toll Free 800-805-8665