




For more information to visit www.gamemaxpc.com





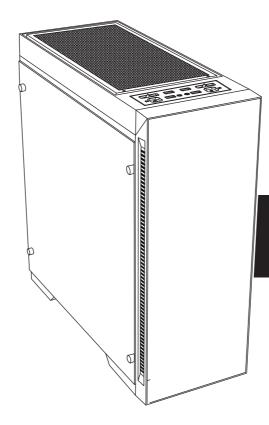



INSTALLATION GUIDE


CopyRight @ 2020.6


Specification


| _ | |
|-----------------|--|
| Model No. | Abyss TR (MFG. M908) |
| Case size | L510*W232*H526mm |
| Material | Steel/ABS |
| M/B Type | E-ATX/ATX/Micro-ATX/ITX |
| 5.25"Drive Bay | N/A |
| HDD Drive Bay | 3.5" HDD*2 / 2.5" SSD*4 |
| Expansion Slots | 7 Slots Support VGA card 420mm |
| Height of CPU | 170mm |
| Cooling system | Top: 120mm*3/140mm*2 (By specify) |
| | Front: 120mm*3 (By specify) |
| | Rear: 120mm*1 (By specify) |
| Dust filter | Bottom dust filter*1; Top dust filter*1 |
| I/O Panel | USB3.0*2, USB2.0*2 |
| | HD Audio/MIC |
| Controller | V1.7 control Hub for Fan light |
| | Top panel 2 channel controller for Fan speed |
| PSU | Standard ATX PSU |

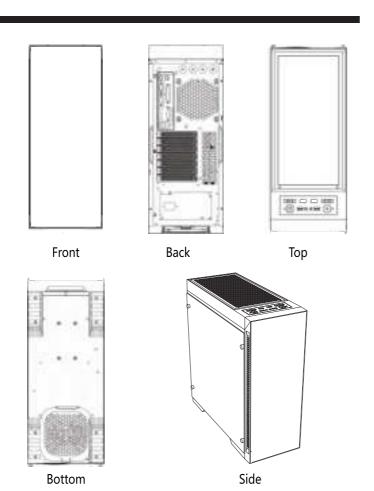

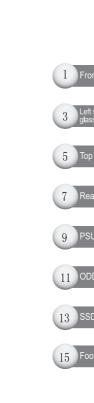


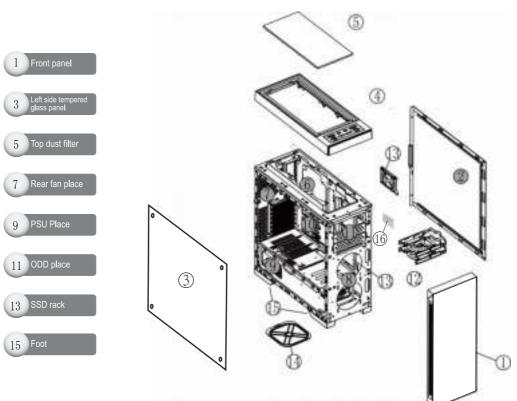

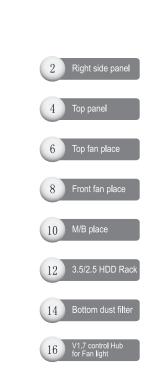


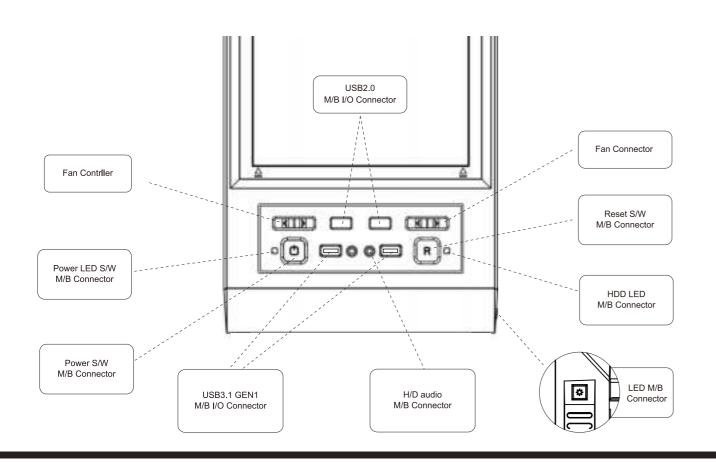

♦ How to install PSU

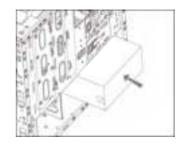


Insert PSU

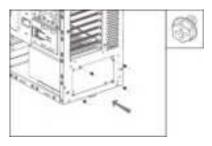


Fix with screws

Clean dust filters

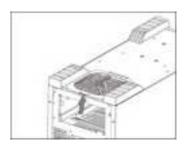


Remove the dust filter from the PSU position

♦ How to install 3.5"HDD&2.5"SSD

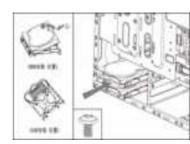


Remove the bay bracket

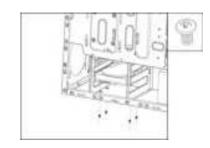

Insert the hard drive into place

♦ How to install M/B

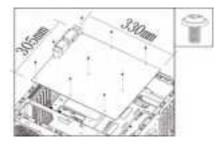


Install M/B

♦ How to install 2.5"SSD

SSD place 1



Losen screws,remove SSD bracket

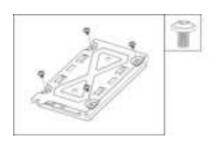

Install SSD, fix with screws




Insert SSD bracket into place

SSD place 2



Insert SSD

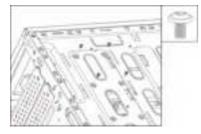


Fix with screws



Fix with screws


♦ How to install the radiator

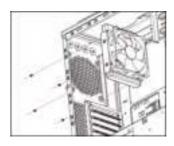


Put the radiator in the rear panel then fix with screws





Put the radiator in front place

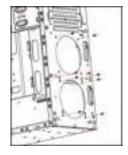

Fix with screws

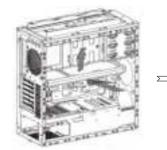

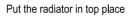

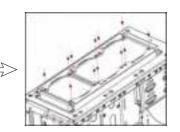

Fix with screws

The size of radiator can be supported: Front :120/240/360mm

Top :120/140/240/280/360mm

Rear:120mm


♦ (User option)


No.1 How to install VGA card fix unit (User option)



- 1、Loosen screw 1,adjust A
- 2、Loosen screw 2 and screw 5,adjust C
- 3、Loosen screw 3 and screw 4, adjust B

No.2 How to install water tank(User option)

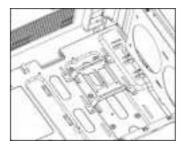


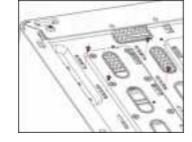


Install water tank


Fix with screws

No.3 How to use RAM cooler guide install2.5"/3.5"HDD/SSD

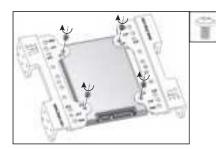


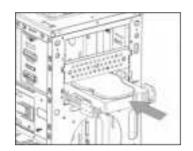



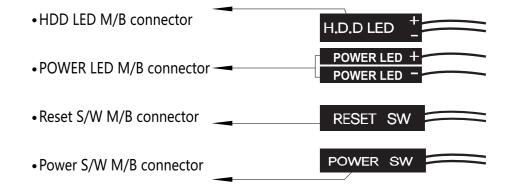


◆ Top Panel 2xChannel fan connection

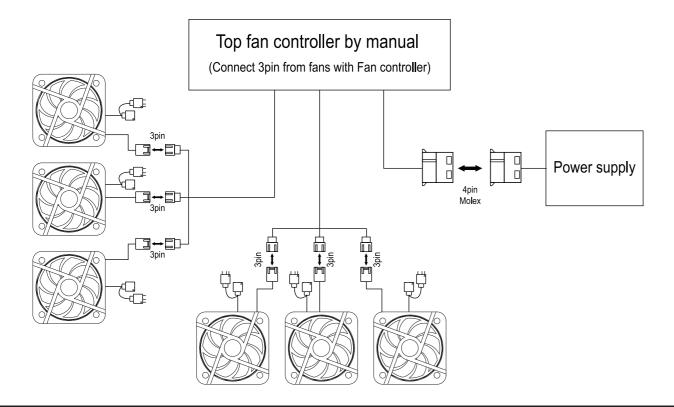

♦ V1.7 A-RGB(RAINBOW) Control HUB

Schematic diagram of connection

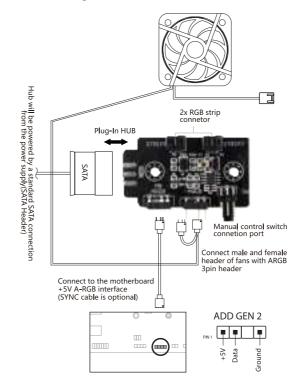

1. Product features

- 1-1. 18 pre-configured color modes
- 1-2. Mode and color adjustment
- 1-3. SATA power in
- 1-4. +5V A-RGB Mainboard SYNC

2. Functional description

2-1. Change between M/B-SYNC and independent mode The default mode is independent mode. Press the RGB key for 3s, and the white light flickers, it prompts you to switch into M/B-SYNC mode, release the key and enter the M/B-SYNC mode, after entering the M/B-SYNC mode, press the RGB key and enter the independent mode again.

2-2. Turning light off

In the independent mode, press RGB key for 3s, and the white light flickers, if you continue to press the key, the light will be turned off, Press the RGB key again to turn on the light.

2-3. Memory function

This controller has memory function.

2-4. Selecting mode and colors within RGB key Short press RGB key one-time to change mode;

Short press RGB key two times to change colors within the selected mode

2-5. A-RGB M/B-SYNC

After connecting the +5V sync cable to your M/B, the RGB effects can be switched to M/B-SYNC mode as described above in section "Change between M/B-SYNC and independent mode".

2-6. LED-Strip

Additional LED strips can be connected and controlled via the control HUB.